

[Manuals.plus](#) /

> [Aspiron](#) /

> Aspiron Cordless Wet Dry Vacuum Cleaner Instruction Manual

Aspiron AS-CA022

Aspiron Cordless Wet Dry Vacuum Cleaner Instruction Manual

Model: AS-CA022

1. INTRODUCTION

Thank you for choosing the Aspiron Cordless Wet Dry Vacuum Cleaner. This all-in-one vacuum and mop is designed to efficiently clean various floor surfaces, handling both wet and dry messes with ease. Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance. Keep this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before use.
- Do not immerse the appliance, charging base, or adapter in water or other liquids.
- Use only the charging adapter supplied by the manufacturer.
- Do not use the appliance to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not operate the appliance without the dirty water tank and filter properly installed.
- Store the appliance indoors in a dry place.
- This appliance is for household use only.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts of your Aspiron Cordless Wet Dry Vacuum Cleaner.



Figure 3.1: Aspiron Cordless Wet Dry Vacuum Cleaner and included accessories (cleaning brush, hard floor cleaner, and two types of rolling brushes).

Key Components:

- **Main Unit:** Contains the motor, battery, and control panel.
- **Handle:** Ergonomic handle for comfortable operation.
- **Clean Water Tank:** Holds 20.3 oz of clean water for mopping.
- **Dirty Water Tank:** Collects 18.6 oz of dirty water and debris.
- **Brush Head:** Houses the rolling brush and provides suction.
- **Rolling Brushes:** Two types included for different surfaces (e.g., hard floor, carpet).
- **Charging Base:** For charging and self-cleaning.
- **LED Display:** Provides real-time information on status, battery, and alerts.

LED Display Keeps You Informed

- 1 Self-Cleaning / Self-Drying Mode
- 2 Clean Dirty Water Tank/Filter Alert
- 3 Current Charging Status/Battery Level
- 4 Water Spray Mode
- 5 Low Water Alert



Figure 3.2: The LED display provides critical information such as self-cleaning/drying mode, tank/filter alerts, charging status, water spray mode, and low water alerts.

4. SETUP

4.1 Assembly

The Aspiron Cordless Wet Dry Vacuum Cleaner requires minimal assembly. Simply insert the handle into the main unit until it clicks securely into place.

4.2 Initial Charging

Before first use, fully charge the vacuum cleaner. Place the main unit onto the charging base. The LED display will indicate charging status. A full charge takes approximately 5 hours for the first time, and 3.5 hours for subsequent recharges.

4.3 Filling the Clean Water Tank

To prepare for wet cleaning, remove the clean water tank from the main unit. Fill it with clean tap water. You may add a small amount of non-foaming floor cleaning solution suitable for wet vacuums. Do not overfill. Reattach the tank securely.

Separates Clean & Dirty Water



20.3 oz
Clean Water Tank



18.6 oz
Dirty Water Tank



Figure 4.1: The vacuum features separate tanks for clean water (20.3 oz) and dirty water (18.6 oz) to ensure continuous clean water supply for mopping.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the power button on the handle to turn the vacuum cleaner on or off.

5.2 Selecting Rolling Brush

The vacuum comes with two types of detachable rolling brushes. Select the appropriate brush for your floor type (e.g., hard floors, carpets) and install it into the brush head.

Cleans Any Surface

Versatile cleaning thanks to two types of rolling brushes



Figure 5.1: The Aspiron vacuum is versatile, cleaning various surfaces including kitchen floors, children's rooms, bathrooms, and living

5.3 Wet and Dry Cleaning

The vacuum cleaner is designed for both wet and dry messes. Simply turn on the unit and guide it over the desired area. The ultra-quiet 250W motor spins at 90,000 RPMs, providing efficient suction and mopping simultaneously.



Figure 5.2: The Aspiron vacuum effectively handles both wet spills and dry debris, vacuuming and mopping simultaneously.

5.4 Voice Prompts

The vacuum cleaner features helpful voice prompts to guide you during operation and alert you to important statuses, such as low water or tank full.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

6.1 Emptying the Dirty Water Tank

After each use, or when the LED display indicates the dirty water tank is full, remove the tank and empty its contents. Rinse the tank thoroughly with clean water and allow it to air dry before reattaching.

6.2 Self-Cleaning and Auto-Drying Function

Place the vacuum cleaner on its charging base. Activate the self-cleaning function (refer to the LED display or specific button if available). This feature rinses the rolling brush in real-time, preventing streaks and odors. The auto-drying function ensures the brush is hygienic and free of smells.

Clean & Hygienic Brushes

No odours or mess with self-cleaning and auto-drying tech

2500RPM
Rolling Speed



Figure 6.1: The self-cleaning and auto-drying functions ensure the rolling brush remains clean and hygienic, preventing odors and streaks.

6.3 Cleaning the Filter

The LED display will alert you when the filter needs cleaning. Remove the filter from the dirty water tank, rinse it under running water, and allow it to completely air dry for at least 24 hours before reinserting. Do not operate the vacuum without a dry filter.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is low or depleted.	Charge the vacuum cleaner fully.
Poor suction or cleaning performance.	Dirty water tank is full; Filter is clogged; Rolling brush is tangled or dirty.	Empty and clean the dirty water tank; Clean or replace the filter; Clean the rolling brush and remove any debris.
Streaks left on floor.	Rolling brush is dirty; Insufficient clean water.	Run the self-cleaning cycle; Refill the clean water tank.
Voice prompt indicates low water.	Clean water tank is empty.	Refill the clean water tank.
Voice prompt indicates tank/filter needs cleaning.	Dirty water tank is full or filter is clogged.	Empty and clean the dirty water tank; Clean the filter.

If the problem persists after attempting these solutions, please contact Aspiron customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Aspiron
Model Name	AS-CA022
Color	Blue
Power Source	Battery Powered
Wattage	250.0 watts
Motor Speed	90,000 RPMs
Runtime	Up to 35.0 minutes
Clean Water Tank Capacity	20.3 oz (0.6 Liters)
Dirty Water Tank Capacity	18.6 oz
Battery Type	Lithium Ion (included)
Charging Time	5 hours (first charge), 3.5 hours (subsequent)
Product Dimensions	11 x 9.64 x 45.27 inches
Item Weight	19.56 pounds

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product at the time of purchase. For technical support, replacement parts, or further assistance, please visit the official Aspiron website or contact their customer service department.

You can find more information and contact details on the [Aspiron Store on Amazon](#).

© 2024 Aspiron. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B882TJPR>

More documents and user manuals: <https://manuals.plus/>