

[Manuals.plus](#) /

› [STORAGE MANIAC](#) /

› STORAGE MANIAC 4-Section Laundry Sorter with Wheels Instruction Manual

STORAGE MANIAC Laundry Sorter 4 Section

STORAGE MANIAC 4-Section Laundry Sorter Instruction Manual

Model: Laundry Sorter 4 Section | Brand: STORAGE MANIAC

1. INTRODUCTION

Thank you for choosing the STORAGE MANIAC 4-Section Laundry Sorter. This manual provides essential information for the proper assembly, operation, and maintenance of your new laundry sorter. Designed for efficient organization, this unit features four removable bags and smooth-rolling wheels to simplify your laundry routine.

2. SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep small parts away from children during assembly to prevent choking hazards.
- Do not overload the laundry bags beyond their stated capacity (25 lbs per bag) to prevent damage to the frame or bags.
- Ensure all connections are secure after assembly and periodically check for loose parts.
- Use the lockable wheels to secure the sorter in place when not in motion.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Metal Frame Components (various rods and connectors)
- 4 x Removable Polyester Laundry Bags
- 4 x Heavy-Duty Rolling Wheels (2 lockable)
- Assembly Tools (e.g., Allen wrench)



Figure 1: Product dimensions and individual bag sizes.

This image illustrates the overall dimensions of the assembled laundry sorter and the individual bags, including their capacity.

4. SPECIFICATIONS

Feature	Detail
Product Dimensions	39.37" L x 16.93" W x 31.5" H
Brand	STORAGE MANIAC
Color	Black
Material	Metal, Polyester
Capacity (each bag)	Up to 25 lbs
Number of Compartments	4

5. SETUP AND ASSEMBLY

Assembly is designed to be straightforward. Follow these steps:

1. Unpack all components and verify against the package contents list.
2. Assemble the metal frame by connecting the rods using the provided spring pins and screws. Ensure all connections are firm.
3. Attach the four heavy-duty wheels to the bottom of the frame. Two of these wheels are lockable; ensure they are positioned for easy access.
4. Hang the four polyester laundry bags onto the top horizontal bars of the frame using their integrated hooks.
5. Ensure the bottom horizontal bars support the base of each bag to prevent sagging when loaded.

6 Horizontal Bars

For enhanced STABILITY
and LOAD-BEARING CAPACITY



Figure 2: The sturdy metal frame with six horizontal bars, designed for stability.

The frame features six horizontal bars for enhanced stability and load-bearing capacity, preventing bags from sagging.



Figure 3: Enhanced stability provided by the 6-bar design compared to a 4-bar design.

This comparison highlights the structural advantage of the 6-bar design for increased stability.

6. OPERATING INSTRUCTIONS

6.1. Sorting Laundry

Utilize the four individual sections to pre-sort your laundry. Common sorting categories include:

- Whites
- Lights
- Colors
- Darks



Figure 4: Suggested sorting categories for the four bags.

This image provides examples of how to categorize your laundry using the four sections.

6.2. Removing and Re-attaching Bags

Each laundry bag is designed for individual removal. Simply lift the bag by its two metal handles to detach it from the frame. This allows for convenient transport of sorted laundry to your washing machine. To re-attach, align the hooks with the top bar and lower the bag into place, ensuring the bottom rests on the support bar.



Figure 5: Instructions for lifting and separating individual laundry bags.

This visual guide shows the ease of removing and using the bags separately.

6.3. Using Wheels and Locks

The sorter is equipped with four heavy-duty rolling wheels for easy mobility. Two of these wheels feature a locking mechanism. To move the sorter, ensure the locks are disengaged. To secure the sorter in a stationary position, press down on the locking levers on the two designated wheels.



Figure 6: Detail of the 360-degree rotating, lockable wheels.

This image highlights the functionality of the lockable wheels for stability.

7. MAINTENANCE

7.1. Cleaning the Laundry Bags

The portable laundry bags are made of eco-friendly polyester canvas with an inner waterproof coating. To clean, simply wipe with a damp cloth. Do not machine wash or tumble dry the bags, as this may damage the waterproof lining.



Figure 7: The water-resistant inner lining of the laundry bags is easy to clean.

This image demonstrates the ease of cleaning the bags' waterproof lining.

7.2. Cleaning the Frame

Wipe the metal frame with a soft, damp cloth as needed. Avoid using abrasive cleaners or harsh chemicals that could damage the finish.

8. TROUBLESHOOTING

- **Sags or Instability:** Ensure all frame connections are tightly secured. Do not exceed the maximum weight capacity per bag (25 lbs).
- **Wheels Not Rolling Smoothly:** Check for debris caught in the wheels. Ensure wheel locks are fully disengaged.
- **Bags Not Staying in Place:** Verify that the bag hooks are properly seated on the top horizontal bar and the bottom of the bag rests on the lower support bar.

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided with your purchase or visit the official STORAGE MANIAC website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question