

[manuals.plus](#) /

› [ANENG](#) /

› [ANENG CM81 Smart AC Clamp Meter User Manual](#)

ANENG CM81

ANENG CM81 Smart AC Clamp Meter User Manual

Model: CM81

1. INTRODUCTION

The ANENG CM81 Smart AC Clamp Meter is a versatile and portable electrical testing instrument designed for professional and home use. It offers a wide range of measurement functions, including AC/DC voltage, AC current, resistance, capacitance, and frequency. Its compact design, large backlit LCD, and additional features like NCV and a flashlight make it an essential tool for various electrical tasks.

This manual provides detailed instructions on how to safely and effectively use your CM81 Clamp Meter. Please read it thoroughly before operation.



Figure 1.1: ANENG CM81 Smart AC Clamp Meter and included test leads.

2. SAFETY INFORMATION

Always adhere to basic safety precautions when using electrical testing equipment to reduce the risk of fire, electric shock, or personal injury. This meter is designed for safe operation, but it is crucial to follow all instructions and warnings.

- Do not exceed the maximum input value specified for any function.
- Do not use the meter if it is damaged or if the test leads are damaged.
- Exercise extreme caution when working with voltages above 60V DC or 30V AC RMS, as these pose a shock hazard.
- Always ensure the meter is set to the correct function and range before making measurements.
- Keep hands and fingers behind the probe barriers when testing.

- Replace batteries immediately when the low battery indicator appears.
- Do not operate the meter in explosive gas, vapor, or dust environments.

3. PRODUCT FEATURES

- **Multi-functional Clamp Meter:** Measures AC/DC voltage, 600A AC current, resistance, capacitance, frequency, diode, and continuity.
- **Real-time Temperature Display:** Conveniently check the ambient temperature.
- **Large Jaw Design:** 36mm clamp head allows for non-contact measurement of single-strand wires without breaking the circuit.
- **Convenient Data Review:** Features a large LCD with backlight for clear readings and a data hold function to freeze measurements.
- **Compact and Portable:** Small body with full functionality, designed for easy one-handed operation.
- **Durable Construction:** Made from ABS material, providing good electrical insulation and drop resistance.
- **Non-Contact Voltage (NCV) Test:** Safely detect AC voltage without direct contact.
- **Built-in Flashlight:** Illuminates the measurement area in dark environments.
- **Automatic Shutdown:** Powers off automatically after 15 minutes of inactivity to save battery life.

CM81 6000 counts

AC current Clamp Meter

600A high current | non-contact sensing

- 600A AC current
- AC/DC voltage/NCV
- Capacitor/Resistor/Hz
- Diode/On/Off/Data Hold

HIGH PRECISION AND MULTIFUNCTION



The image shows the ANENG CM81 AC current Clamp Meter. It is a handheld device with a large, adjustable jaw for non-contact current measurement. The front panel features a digital display showing '60000' with various measurement units (V, A, Ω, Hz, F, °C, °F) and symbols. Below the display are buttons for 'H/Hz', 'SELECT', and 'AUTO POWER OFF'. To the right of the display is a red power button. The top of the meter has two test leads with alligator clips. The left side of the meter has a 'COM' terminal and a 'VΩHz' terminal. The right side has a 'MAX 600A' terminal. The top of the meter is marked with '600V CATIII' and 'MAX 600A' with a warning symbol. The brand name 'ANENG' and model 'CM81' are printed on the front panel.

Figure 3.1: Key features of the CM81 Clamp Meter.



Figure 3.2: The CM81 features an HD backlit screen for clear visibility.

4. SPECIFICATIONS

Parameter	Value
Color	Black (Red optional)
AC Voltage Range/Resolution/Accuracy	1~600V / 0.001~1V / $\pm(1.5\%+8)$
DC Voltage Range/Resolution/Accuracy	1~600V / 0.001~1V / $\pm(1.2\%+5)$
AC Current Range/Resolution/Accuracy	1~600A / 1mA~0.1A / $\pm(2.8\%+8)$
Resistance Range/Resolution/Accuracy	0~60M Ω / 0~10k Ω / $\pm(1.2\%+5)$
Capacitance Range/Resolution/Accuracy	100pF~40mF / 1pF~10uF / $\pm(6\%+10)$
Frequency Range/Resolution/Accuracy	10Hz~20MHz / 0.1Hz~10kHz / $\pm(4.0\%+10)$
Diode Test	Yes

Parameter	Value
Buzzer (Continuity)	Yes
Data Hold	Yes
Non-Contact Voltage (NCV) Test	Yes
Flashlight	Yes
Low Battery Indicator	Yes
Real-time Temperature Display	Yes
Range Selection	Auto Range
Automatic Power Off	15 minutes
Display Screen	Backlit LCD
Maximum Display Count	6000 counts
Power Source	2 x 1.5V AAA Batteries (not included)
Jaw Opening Size	36mm / 1.41 inches
Product Size	185 x 65 x 32 mm / 7.28 x 2.56 x 1.26 inches
Product Weight	136 grams / 4.80 ounces

CM81 parameters

Function	Range	Resolution	Precision
AC voltage	1V-600V	0.001V-1V	±(1.5%+8d)
DC voltage	1V-600V	0.001V-1V	±(1.2%+5d)
AC current	1A-600A	1mA-0.1A	±(2.8%+8d)
Resistance	0Ω-60MΩ	0Ω-10KΩ	±(1.2%+5d)
Capacitance	100P-40mF	1pF-10uF	±(6%+10d)
Hz Frequency	10Hz-20MHz	0.1Hz-10kHz	±(4.0%+10d)
NCV	✓	Automatic shut-down	✓
Data retention	✓	low battery indicator	✓
Diode	✓	Buzzer	✓
Real-time temperature	✓	Range	Automatic
Battery	2 AAA batteries	Weight	136g
Material	ABS	Max count	6000 count
Screen	HD backlit screen	Jaw opening size	36mm/1.41in
Overall length of the pen	95cm	Pen material	PVC/brass

The above parameters are for reference only, the actual measurement of the specific equipment shall prevail!

Figure 4.1: Detailed parameters of the CM81 Clamp Meter.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment cover on the back of the meter.
2. Use a screwdriver to open the battery compartment.
3. Insert two 1.5V AAA batteries, observing the correct polarity (+ and -).
4. Replace the battery compartment cover and secure it with the screw.

5.2 Connecting Test Leads

For voltage, resistance, capacitance, frequency, diode, and continuity measurements, connect the test leads:

- Insert the red test lead into the "VΩHz" input jack.
- Insert the black test lead into the "COM" input jack.

Turn on low power mode

...

If the clamp multimeter is turned on and not used within fifteen minutes, it will automatically turn off!



*Automatic
shut-down*



Figure 5.1: Connecting test leads for various measurements.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the red power button (U) to turn the meter on. The meter will automatically enter auto-ranging mode. To turn off the meter, press the power button again, or it will automatically shut down after 15 minutes of inactivity.

Automatic Identification

...

Only for voltage/current/resistance/capacitance /on-off function measurement, just measure it



Figure 6.1: The CM81 features an automatic shut-down function to conserve battery life.

6.2 Function Selection

The CM81 features automatic identification for most common measurements (voltage, current, resistance, capacitance, continuity). Simply connect the test leads or clamp the wire, and the meter will attempt to identify the measurement type.

For specific functions or to cycle through modes within a category (e.g., AC/DC voltage), press the "SELECT" button.

6.3 AC Current Measurement (Clamp Function)

1. Ensure the meter is in AC current mode (indicated by 'A~' on the display).
2. Open the clamp jaws by pressing the trigger.
3. Place the single conductor wire (not a power cord with multiple wires) to be measured within the jaws.
4. Close the jaws completely. The current reading will appear on the display.

Note: The clamp function is designed to measure current on a single conductor. Measuring multiple wires (e.g., a standard power cord) will result in an inaccurate reading as the magnetic fields will cancel each other out.



Figure 6.2: Measuring AC current with the clamp function.

6.4 Voltage Measurement (AC/DC)

1. Connect the red test lead to the "V Ω Hz" jack and the black test lead to the "COM" jack.
2. Select the appropriate voltage mode (AC or DC) using the "SELECT" button if not automatically detected.
3. Connect the test probes in parallel to the circuit or component you wish to measure.
4. Read the voltage value on the display.

6.5 Resistance, Capacitance, Frequency, Diode, Continuity Measurement

1. Connect the red test lead to the "V Ω Hz" jack and the black test lead to the "COM" jack.
2. Press the "SELECT" button to cycle through these functions until the desired mode is active.
3. Connect the test probes to the component or circuit.
4. Read the measurement on the display. For continuity, a buzzer will sound if the resistance is below a certain threshold.

6.6 Non-Contact Voltage (NCV) Test

1. Press the "H/ $\frac{1}{f}$ " button to activate NCV mode.
2. Move the top of the clamp meter near the conductor or outlet.

3. The meter will beep and the NCV indicator will light up if AC voltage is detected.

6.7 Flashlight Function

Long press the "H/ \odot " button to turn on the built-in flashlight. Long press again to turn it off. This is useful for working in dimly lit areas.



Figure 6.3: Using the built-in flashlight for improved visibility.

6.8 Data Hold

Press the "H/ \odot " button briefly to activate the Data Hold function. This will freeze the current reading on the display. Press the button again to release Data Hold and resume live readings.

7. MAINTENANCE

7.1 Cleaning

Wipe the meter's casing with a damp cloth and mild detergent. Do not use abrasives or solvents. Keep the input terminals clean to ensure accurate measurements.

7.2 Battery Replacement

When the low battery indicator appears on the display, replace the batteries immediately to ensure

accurate readings and proper operation. Refer to section 5.1 for battery installation instructions.

8. TROUBLESHOOTING

- Meter does not power on:** Check battery installation and ensure batteries are not depleted.
- Inaccurate readings:** Ensure test leads are properly connected, the correct function/range is selected, and batteries are not low. For current measurements, ensure only a single conductor is within the clamp jaws.
- Display shows "OL":** This indicates an overload, meaning the measured value is outside the selected range. Switch to a higher range or ensure the input is within the meter's maximum specifications.

9. PACKAGE CONTENTS

The ANENG CM81 Smart AC Clamp Meter package includes:

- 1 x ANENG CM81 Clamp Meter
- 2 x Test Leads (Red and Black)
- 1 x User Manual (English)



10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided by your retailer or visit the official ANENG website. Keep your purchase receipt as proof of purchase for any warranty claims.