

Tefal EY8018

Tefal Easy Fry & Grill XXL Air Fryer EY8018 Instruction Manual

Model: EY8018 | Brand: Tefal

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Tefal Easy Fry & Grill XXL Air Fryer, model EY8018. This 2-in-1 appliance combines air frying and grilling functionalities, offering a versatile solution for preparing healthy meals. It features a large 6.5-liter capacity and a Flexcook divider, allowing you to cook two different dishes simultaneously.

Please read these instructions thoroughly before first use and keep them for future reference.

2. IMPORTANT SAFETY INFORMATION

Always observe the following safety precautions to prevent electric shock, fire, injury, or damage to the appliance.

- Read and follow all instructions carefully.
- Protect the appliance from moisture.
- Remove all packaging materials, promotional labels, and stickers from the appliance before use. Ensure all materials are removed from the bottom of the removable bowl (depending on the model).
- Verify that your mains voltage matches the voltage indicated on the appliance's rating plate (alternating current).
- Due to varying standards, the appliance may not be usable in a country other than where it was purchased. Consult an authorized service center for verification.
- For models with removable power cords, use only the original power cord.
- Always plug the appliance into a grounded outlet.
- Use the appliance on a flat, stable, and heat-resistant work surface, away from water splashes.
- Always unplug the appliance from the mains: after use, before moving it, or before cleaning.
- In case of fire, unplug the power cord and smother flames with a damp cloth.
- To prevent damage, ensure you follow recipes in the instructions and recipe book. Use the correct quantity of ingredients.

3. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging.

2. **Remove Packaging Materials:** Ensure all internal and external packaging, including any protective films or stickers, are removed from the appliance and its components.
3. **Clean Components:** Before first use, wash the removable basket, grill plate, and Flexcook divider with warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
4. **Placement:** Place the appliance on a stable, flat, heat-resistant surface, ensuring adequate ventilation around it. Keep it away from walls and other appliances.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches your household's power supply.



Image: The Tefal Easy Fry & Grill XXL Air Fryer, model EY8018, displayed with a serving of steak and fries, showcasing its cooking capabilities. The main unit is black with a digital control panel.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

1. **Prepare Food:** Place your ingredients in the cooking basket or on the grill plate.
2. **Insert Basket:** Slide the cooking basket firmly into the appliance.
3. **Power On:** Press the power button to turn on the appliance.
4. **Select Program:** Choose one of the 8 automatic cooking programs (Fries, Nuggets, Roasted Chicken, Pizza, Meat,

Fish, Vegetables, Desserts) or manually set the temperature and time.

5. **Start Cooking:** Press the start button. The appliance will begin cooking.
6. **Monitor Progress:** Some programs may require shaking or turning food halfway through.
7. **Finish:** The appliance will beep when cooking is complete. Carefully remove the basket and serve.

4.2 Using the Flexcook Divider

The Flexcook divider allows you to cook two different dishes simultaneously, optimizing your cooking time.

- **Installation:** Insert the divider into the cooking basket to create two separate compartments.
- **Capacity:** The total capacity is 6.5 liters. With the divider, it effectively creates two 3.25-liter compartments.
- **Sync Mode:** Utilize the smart synchronization mode for perfect results when cooking two different items that require different cooking times or temperatures. The appliance will ensure both dishes finish at the same time.



Image: A hand demonstrating the insertion of the Flexcook divider into the cooking basket of the Tefal Easy Fry & Grill XXL, enabling dual-zone cooking.

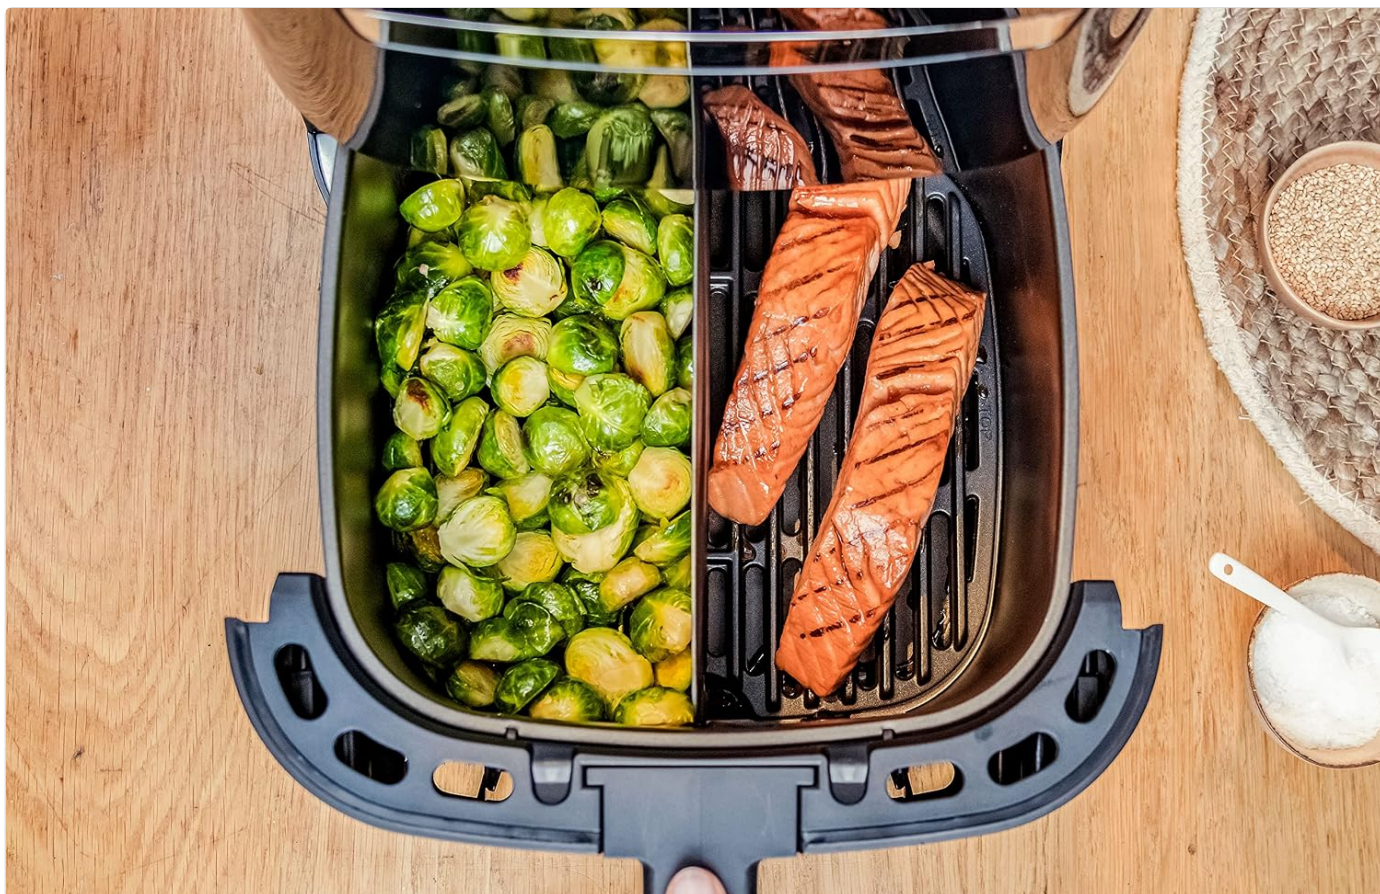


Image: An overhead view of the Tefal Easy Fry & Grill XXL cooking basket, divided into two sections. One section contains grilled salmon fillets, and the other contains roasted Brussels sprouts, illustrating simultaneous cooking.

4.3 Grilling Function

The appliance includes a die-cast aluminum grill plate for optimal grilling results with distinct grill marks, all with minimal smoke emission.

- Insert the grill plate into the basket.
- Select the "Grill" program or set the desired temperature and time manually.
- The non-stick coating ensures easy food release and cleaning.

RAUCHFREIER INDOOR-GRILL



Image: A large cut of steak being grilled on the dedicated grill plate within the Tefal Easy Fry & Grill XXL, demonstrating the appliance's grilling capability.


4.4 Healthy Cooking

The Easy Fry & Grill technology allows for crispy and golden results with little to no oil, reducing fat content by up to 99% compared to traditional deep frying (based on 1kg of fresh fries with 15ml oil vs. traditional deep fryers with 2L oil).

4.5 Recipe Application

A free recipe application is available to provide inspiration and guidance for various dishes that can be prepared with your Easy Fry & Grill XXL.

LASSEN SIE SICH VON DER REZEPTVIELFALT INSPIRIEREN

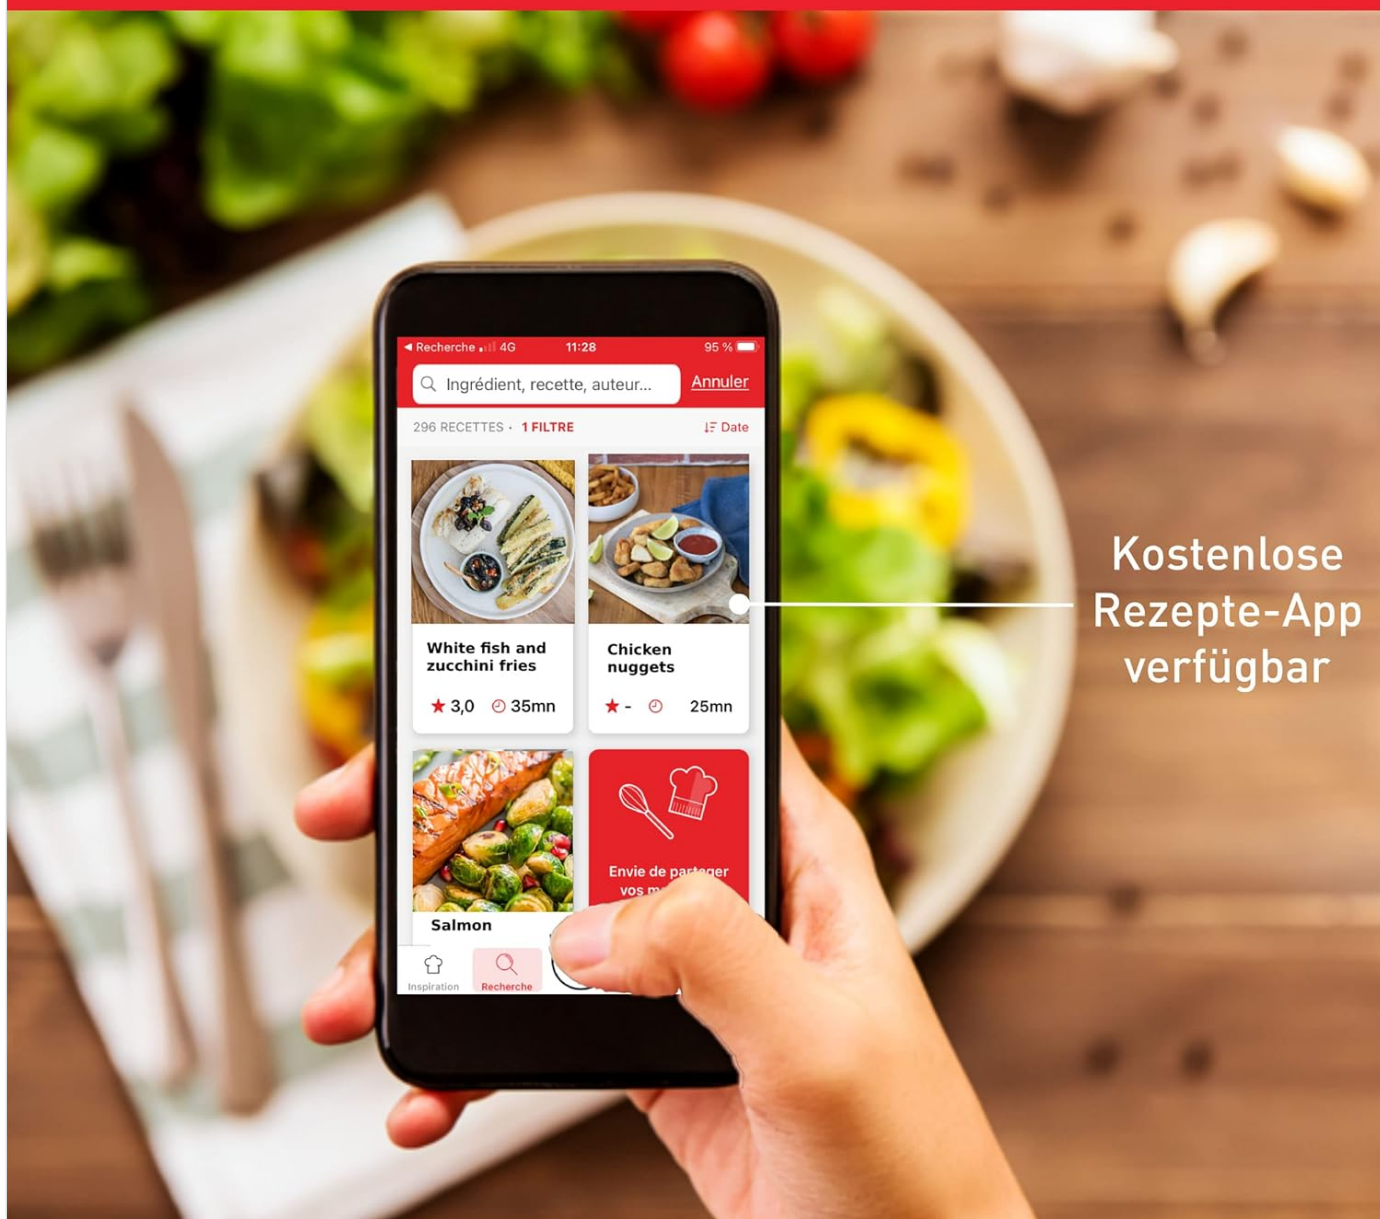

Kostenlose
Rezepte-App
verfügbar

Image: A smartphone screen showing the Tefal recipe application interface, featuring various meal ideas and cooking instructions for the air fryer.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your appliance.

1. **Unplug:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Removable Parts:** The cooking basket, grill plate, and Flexcook divider are dishwasher safe. Alternatively, wash them with warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before reassembly or storage.
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Interior:** Clean the interior of the appliance with a damp cloth. Avoid using abrasive cleaners or scouring pads.
5. **Storage:** Store the appliance in a dry place when not in use.

SPÜLMASCHINENGEEIGNET



Image: The removable cooking basket and grill plate of the Tefal Easy Fry & Grill XXL placed inside a dishwasher, illustrating their dishwasher-safe feature for convenient cleaning.

6. TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; appliance fault.	Check power cord connection; try a different outlet; contact customer support.
Food is not cooked evenly.	Overfilling the basket; food not shaken/turned.	Do not overfill; shake or turn food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and interior thoroughly; remove excess fat from ingredients.

Problem	Possible Cause	Solution
Appliance smells during first use.	Normal for new appliances.	The smell will dissipate after a few uses. Ensure good ventilation.

For issues not listed here, please contact Tefal Customer Service.

7. SPECIFICATIONS

Brand	Tefal
Model Number	EY8018
Color	Black
Dimensions (L x W x H)	43.2 x 30.3 x 36.1 cm
Capacity	6.5 Liters
Power	1680 Watts
Voltage	220 Volts
Material	Aluminum
Item Weight	5.53 Kilograms
Special Features	8 automatic programs, 99% less oil, Free recipe app, Die-cast grill plate, 6.5L capacity for up to 8 people

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Tefal products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Tefal website. Keep your proof of purchase for warranty claims.

8.2 Customer Support

If you require assistance, have questions about your appliance, or need to report a fault, please contact Tefal Customer Service. Contact details can typically be found on the official Tefal website or in the documentation provided with your product.

You can visit the official Tefal store for more information:[Tefal Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question