

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [ClearClick](#) /
- › [ClearClick Video to Digital Converter 3.0 User Manual](#)

ClearClick 3.0

ClearClick Video to Digital Converter 3.0 User Manual

Convert your old video and audio sources to digital format with ease.



PRODUCT OVERVIEW

The ClearClick Video to Digital Converter 3.0 is designed to simplify the process of digitizing your analog video and audio collections. This third-generation device allows you to convert video from sources like VCRs, VHS tapes, AV, RCA, Hi8, camcorders, and DVDs, as well as audio from turntables and cassette tapes, directly to digital files without the need for a computer.

It records video in MP4 format (720x480 or 640x480 pixels) and audio in WAV or MP3 format. Please note that this device does not upscale to HD resolution and does not record from modern HDMI sources.



Image: The ClearClick Video to Digital Converter 3.0, showing its screen and RCA input connections.

WHAT'S NEW IN VERSION 3.0

The Video2Digital® Version 3.0 introduces several enhancements for improved functionality and user experience:

- **Audio Sources Recording Feature:** Now supports direct recording from audio-only sources like cassette tapes and vinyl records.
- **Larger 5" Preview Screen:** Provides a more comfortable viewing experience during recording.
- **Built-In Rechargeable Battery:** Offers portability and convenience for recording on the go.
- **Custom Auto Stop Feature:** Allows setting an exact number of minutes for automatic recording cessation.
- **MicroSD Memory Card Slot:** Adds flexibility for storage options alongside USB flash drives.
- **USB-C Charging Port:** Modernized charging for wider compatibility.
- **2 Year Warranty:** Extended warranty for peace of mind.

ClearClick

The Easy Way To Convert Your Video & Audio To Digital Format.

Introducing the Video2Digital Converter 3.0

- Connects To Analog Video Sources (VCR/ Camcorder/AV Video) **OR** Audio Sources (Cassette Tape Player/Turntable/& More) To Convert Video and/or Audio To Digital
- No Computer or Drivers Required - Just Hook It Up & Start Recording
- Records in MP4 Video or MP3/WAV Audio Format Onto Any USB Flash Drive or MicroSD Card (Not Included; 512GB or Less)
- **NEW FEATURES IN VERSION 3.0:**
 - Audio/Music Recording Feature
 - Larger 5" Preview Screen
 - Built-In Rechargeable Battery
 - Custom Auto Stop Feature
 - MicroSD Memory Card Slot
 - USB-C Charging Port

Image: Overview of the new features in Version 3.0, including audio recording, larger screen, and rechargeable battery.

SETUP GUIDE

Before you begin, ensure you have a working VCR, camcorder, or other analog video/audio source, and a USB flash drive or MicroSD card (512 GB or less, not included).

Package Contents:



Image: The complete package contents of the ClearClick Video to Digital Converter 3.0.

- ClearClick Video to Digital Converter 3.0 Unit
- RCA AV Cable
- USB Power Adapter
- USB Charging Cable (USB-C)
- User Manual & Quick Start Guide

Connecting Your Device:

1. **Power Connection:** Connect the provided USB charging cable to the USB-C port on the converter and the other end to the USB power adapter. Plug the adapter into a wall outlet. The device can also run on its built-in rechargeable battery.
2. **Storage Device:** Insert a USB flash drive or MicroSD card (up to 512 GB, formatted to FAT32 or exFAT) into the corresponding port on the converter. Ensure it is securely inserted.
3. **Video Source Connection (RCA):**
 - Locate the "AV OUT" ports on your VCR, camcorder, or DVD player.
 - Connect the yellow (video), white (left audio), and red (right audio) plugs of the RCA AV cable to the corresponding "AV OUT" ports on your source device.
 - Connect the other end of the RCA AV cable to the "AV Video & Audio Input Ports" on the ClearClick converter.
4. **Video Source Connection (S-Video):** If your source device has an S-Video output, connect an S-Video cable to the "S-Video Video Input Port" on the converter. **Note:** S-Video only carries video. You must also connect the red and white RCA audio cables for sound.
5. **Audio Source Connection:** For audio-only recording (e.g., from a cassette player or turntable), connect the red and white RCA audio cables from your source's "AUDIO OUT" ports to the corresponding red and white "AV Video & Audio Input Ports" on the converter.



Image: Detailed view of the converter's ports and connection methods for video and audio sources.

Important Considerations:

- A working VCR or camcorder with a working "AV OUT" port is REQUIRED. The converter does NOT play video tapes by itself.
- Your VHS/Camcorder tapes MUST be in working condition.
- Use a brand name USB flash drive or SD card (512GB or less). Generic or slow drives may cause issues.
- Recording resolution is 640x480 pixels or 720x480 pixels. Does NOT upscale to HD quality. Does NOT record from HDMI sources.
- To avoid corrupt recording files, you MUST press the "Rec/Stop" button BEFORE removing your USB drive/SD card.



Video Recording Mode

Records Video+Audio To Digital MP4 Video Files



IMPORTANT

PLEASE READ BEFORE PURCHASING & USING DEVICE

- A **WORKING** VCR or Camcorder with a **WORKING** "AV OUT" Port is **REQUIRED** and not included. (Converter does **NOT** play tapes.)
- Your VHS/Camcorder tapes **MUST** be in working condition. (If your VCR/camcorder can't play it, our converter can't capture it!)
- A "**brand name**" USB flash drive or SD card is **REQUIRED** and not included. (512GB or less; external USB drives **NOT** supported.)
- Recording resolution: 640x480 pixels or 720x480 pixels. (Does **NOT** upscale to HD quality. Does **NOT** record from HDMI sources.)
- To avoid corrupt recording files, you **MUST** stop recording by pressing "Rec/Stop" **BEFORE** removing your USB drive/SD card.



Image: Key important notes for successful operation.

OPERATING INSTRUCTIONS

Powering On/Off:

- To power on, press and hold the Power button (LCD On/Off) located on the side of the device.
- To power off, press and hold the Power button again.

Navigating the Menu:

- Use the "Menu" button to access the main menu.
- Use the Up/Down arrow buttons to navigate through menu options.
- Use the "OK" button to select an option.
- Use the "Mode" button to switch between Video Recording Mode and Audio Recording Mode.

Recording Video:



Image: The converter displaying a video signal, indicating it's ready for video recording.

1. Ensure your video source (VCR, camcorder, etc.) is connected correctly and powered on.
2. Select "Video Recording Mode" using the "Mode" button if not already selected.
3. Start playback on your video source. You should see the video on the converter's 5" screen.
4. Press the "Rec/Stop" button (usually labeled with a red dot) on the converter to begin recording. A recording indicator will appear on the screen.
5. To stop recording, press the "Rec/Stop" button again. The recording will be saved to your USB drive or MicroSD card.

6. Wait 5-10 seconds after stopping recording before removing your storage device to ensure the file is saved properly.

Recording Audio:



Image: The converter in audio recording mode, displaying an audio equalizer on its screen.

1. Ensure your audio source (cassette player, turntable, etc.) is connected correctly to the red and white RCA audio input ports.
2. Select "Audio Recording Mode" using the "Mode" button. The screen will display an audio equalizer.
3. Start playback on your audio source.
4. Press the "Rec/Stop" button on the converter to begin recording.
5. To stop recording, press the "Rec/Stop" button again. The audio file will be saved to your USB drive or MicroSD card.
6. Wait 5-10 seconds after stopping recording before removing your storage device to ensure the file is saved properly.

MAINTENANCE

To ensure the longevity and optimal performance of your ClearClick Video to Digital Converter 3.0, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or aerosols, as they may damage the unit.
- **Storage:** When not in use, store the converter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the device will not be used for an extended period, charge the built-in battery periodically (e.g., every 3-6 months) to maintain its health.
- **Cable Management:** Avoid bending or kinking cables excessively to prevent internal damage.

TROUBLESHOOTING

If you encounter issues with your ClearClick Video to Digital Converter 3.0, please refer to the following troubleshooting steps:

1. **Issue: "No audio or video" / "Poor quality video" / "Intermittent signal" / "Defective transfer of image" / "Worked for a few minutes, but then the video image disappeared" / "Won't read VCR signal"**
 - Ensure your VCR or camcorder is in fully working condition, including its "AV OUT" port. If your VCR or camcorder hasn't been used in several years, it likely needs a tune-up, repair, or cleaning. Ensure your tapes are in working condition and are playable. To test, connect your video source directly to a TV to verify playback there.
 - Ensure your AV cable is securely plugged into your "AV OUT" ports (usually in the back) on your video source (VCR, camcorder, etc.), not the "AV IN" ports.
 - Ensure the "Video Source" setting in the converter's main menu is set correctly.
 - If you are using S-Video, ensure you have hooked up the red/white RCA audio connectors to receive audio as well, since S-Video only contains a video signal.
 - Camcorder users: ensure you are using the correct type of AV cable for your camcorder.
2. **Issue: "The recorded video is jerky or glitchy" or "Video is flickering" or "Picture is jumpy"**
 - This can be resolved by recording from your video source's "S-VIDEO OUT" port instead of "AV OUT" port. (Make sure you also change the Video Source to "S-Video" in the converter's main menu.)
 - If your video source does not have an "S-VIDEO OUT" port, please contact ClearClick and they may be able to mail you an "AV to S-VIDEO" adapter.
3. **Issue: "Converted MP4 file is unreadable or corrupt"**
 - Ensure you press the "Rec/Stop" button on the converter to stop recording, prior to removing your USB drive or SD card from the converter.
 - After pressing the "Rec/Stop" button to stop recording, wait 5-10 seconds before removing your USB drive or SD card from the converter, so that the converter can save the file properly.
4. **Issue: "Transferred video and audio is out of sync"**
 - Ensure you are using a brand name USB 3.0 drive or SD card (class 10 or higher). Generic brand drives are too slow to be used with the converter.
 - Ensure your USB drive or SD card is 512 GB or less.
5. **Issue: "Can't record from HDMI"**
 - The converter's HDMI port is an output port, not an input port. This device does not record from HDMI sources (only AV and S-Video).

SPECIFICATIONS

Brand	ClearClick
Model Number	3.0
Product Dimensions	6.2 x 3.5 x 1 inches
Item Weight	8 ounces
Compatible Devices	Devices with RCA or 3.5mm audio output (VCRs, Camcorders, DVD Players, Turntables, Cassette Players, etc.)
Connector Type	RCA, S-Video (input), HDMI (output only)
Video Recording Format	MP4 (720x480 or 640x480 Pixels)
Audio Recording Format	WAV or MP3
Storage Media	USB Flash Drive or MicroSD Card (up to 512 GB, not included)
Battery	1 Lithium Polymer battery (included)

WARRANTY & SUPPORT

The ClearClick Video to Digital Converter 3.0 includes a **2-Year Warranty** and dedicated technical support from ClearClick, a USA-Based Small Business.


For technical assistance or warranty claims, please refer to the contact information provided in your product's Quick Start Guide or visit the official ClearClick website.






For more information and video tutorials, you can visit: www.clearclick.tech/watch



© 2024 ClearClick. All rights reserved.

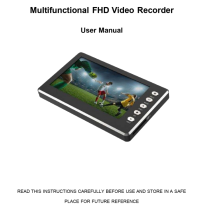
Related Documents - 3.0

	<p>ClearClick Video2Digital Converter 3.0 User's Manual & Quick Start Guide</p> <p>Comprehensive user's manual and quick start guide for the ClearClick Video2Digital Converter 3.0, detailing setup, operation, troubleshooting, and technical specifications for converting analog video to digital formats.</p>
---	--

 <p>Multifunctional FHD Video Recorder User Manual</p> <p>READ THIS INSTRUCTIONS CAREFULLY BEFORE USE AND STORE IN A SAFE PLACE FOR FUTURE REFERENCE</p>	<p>Multifunctional FHD Video Recorder User Manual</p> <p>User manual for the Multifunctional FHD Video Recorder, detailing its features, operation, charging, storage, connections, and troubleshooting. Learn how to record, play back, and transfer video content.</p>
 <p>AUGUST User Manual</p>	<p>August VGB100 USB Video Capture Stick User Manual and Software Guide</p> <p>Comprehensive user manual for the August VGB100 USB video capture stick. Learn how to connect hardware, install Honestech VHS to DVD 4.0 SE software, capture video from VHS and other sources, and troubleshoot common issues. Includes warranty information.</p>
 <p>AUGUST User Manual</p>	<p>August VGB100 USB 2.0 Video Capture Stick User Manual</p> <p>Comprehensive user manual for the August VGB100 USB 2.0 Video Capture Stick, detailing installation, software usage, troubleshooting, and warranty information.</p>
 <p>ezcap159 USB 2.0 Video Capture Quick Start Guide</p> <p>Download Link: http://www.honestech.com/Products/ezcap159/ezcap159_QuickStartGuide.pdf</p>	<p>ezcap159 USB 2.0 Video Capture Quick Start Guide</p> <p>Quick start guide for the ezcap159 USB 2.0 Video Capture device, providing instructions for Windows and Mac users on installation, software setup, and usage for capturing video from VHS, VCR, and other analog sources.</p>
 <p>AUGUST User Manual</p>	<p>August VGB100 USB 2.0 Video Capture Adapter Quick Start Guide and Troubleshooting</p> <p>A guide to installing and using the August VGB100 USB 2.0 Video Capture Adapter with honestech VHS to DVD 4.0 SE software. Includes setup, connection, and troubleshooting for common issues like black screen.</p>

**ClearClick®
HD Capture+Stream™**


4K60 HDMI Input & Passthrough
1080P60 Recording & Live Streaming



User's Manual & Quick Start Guide

2-Year Warranty & USA-Based Tech Support

For tech support, email us at: support@clearclick.tech
Extend your warranty to 3 years for free by registering at:
www.clearclicksoftware.com/Register/




www.clearclick.tech

[\[pdf\]](#) User Manual Quick Start Guide Guide Warranty Accessories

Keith Gilbert Download User s Manual Downloads Support ClearClick HDCaptureStream clearclicksoftware Manuals |||

ClearClick HD Capture Stream™ 4K60 HDMI Input Passthrough 1080P60 Recording Live Streaming User ... e you have connected the device with the included USB-C cable from the UVC / PC port to a USB 2.0/**3.0** port on your PC or Mac. 14 3. I pressed the Mode button, and now the device doesn t show vid...

lang:en score:33 filesize: 1.04 M page_count: 17 document date: 2022-05-25



LevelOne

FCS-4000 / FCS-4100 / FCS-4200
FCS-4300 / FCS-4400 / FCS-4500
Day/Night P/T/Z IP Speed Dome Camera

User Manual

Copyright © 2008 Digital Eye Communications, C.S., Ltd. All Rights Reserved.

[\[pdf\]](#) User Manual Installation Guide Instructions Troubleshooting Guide Guide Declaration of Conformity

Microsoft Word FCS 4XXX User Manual 0809 doc Nikki level1 tw ATTENTION 1 All operation please refer to the instruction 2 Please don t place product on unstable desk or bracket 3 avoid any liquid permeate inside of machine in case damage Quick installation guide before Network Camera is installed then carefully read and follow instructions Installation chapter damages due faulty assembly This also ensures used properly as intended The a network devic e its use should be straightforward 4XXXv2 x manual

LevelOne FCS-4000 / FCS-4100 / FCS-4200 FCS-4300 / FCS-4400 / FCS-4500 Day/Night P/T/Z IP Speed Dome ... pixels PAL 160x120: 30/25fps 320x240: 30/25fps 704x480: 30/25fps 1/4 Exview HAD CCD 4.0-72mm/F1.4-**3.0** 3.5-91mm/F1.6-3.8 3.4-122.4mm/F1.6-4.5 0.7Lux/F1.4 1.0Lux/F1.6 0.1Lux/F1.6 1/1-1/10,000 G.7...

lang:en score:31 filesize: 3.9 M page_count: 93 document date: 2008-09-23

**ClearClick® Virtuoso® 3.0
22MP Film & Slide Scanner**

Quick Start Guide & User's Manual



**2-Year Warranty &
Free USA-Based Tech Support**

This product comes with a 2-year warranty & free USA-based tech support from ClearClick®. As a small business, we're here to serve you! If you have any issues with our product, please contact us at support@clearclick.com.



[ClearClick Virtuoso 3.0 22MP Film & Slide Scanner User Manual](#)

User manual and quick start guide for the ClearClick Virtuoso 3.0 22MP Film & Slide Scanner, detailing setup, scanning, image management, and technical specifications.


lang:en score:30 filesize: 485.29 K page_count: 20 document date: 2022-12-03



[\[pdf\]](#) User Manual Installation Guide Instructions Troubleshooting Guide Guide Declaration of Conformity

Microsoft Word FCS 4XXX User Manual 0812 doc Nikki Camera LevelOne CD Utility Quick Installation Guide Functions and Operation directory Followed is the brief introduction of main functions operations LEVELONE IP SPEED DOME different operation platform may have operating methods generally base on manual Special demand please contact your dealers Pan Tilt Zoom installation guide before Network installed then carefully read follow instructions in chapter to avoid damages due faulty assembly This also ensures product used properly as intended The a network device its use should be straightforward for those who basic knowledge Troubleshooting refer trouble shooting section this instruction figure out 4X00 UM V2 3 fcs 4x00 um v2 level1 tw

LevelOne FCS-4000 / FCS-4100 / FCS-4200 FCS-4300 / FCS-4400 / FCS-4500 Day/Night P/T/Z IP Speed Dome Camera User Manual Ver:2.3.0-0812 Copyright c 2008 Digital Data Communications Co., Ltd. All Rights Reserved. Before You Use This Product The use of surveillance devices may be prohibited by law ... lang:en score:30 filesize: 3.9 M page_count: 94 document date: 2008-12-24

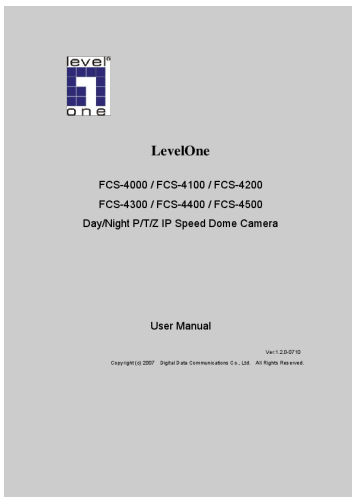

[\[pdf\]](#) User Manual Installation Guide Instructions Troubleshooting Guide Guide Declaration of Conformity

Microsoft Word FCS 4XXX User Manual 0710 doc Nikki level1 tw LevelOne CD Utility Quick Installation Guide Functions and Operation directory Followed is the brief introduction of main functions operations LEVELONE IP SPEED DOME different operation platform may have operating methods generally base on manual Special demand please contact your dealers Pan Tilt Zoom ATTENTION 1 All refer to instruction 2 Please don t place product unstable desk or bracket 3 avoid any liquid permeate inside machine in case damage Iris control The factory default auto iris ensuring best image quality In particular circumstances operator can also use feature carefully read follow instructions chapter trouble shooting section this figure out quality info

LevelOne FCS-4000 / FCS-4100 / FCS-4200 FCS-4300 / FCS-4400 / FCS-4500 Day/Night P/T/Z IP Speed Dome ... pixels PAL 160x120: 30/25fps 320x240: 30/25fps 704x480: 30/25fps 1/4 Exview HAD CCD 4.0-72mm/F1.4-3.0 3.5-91mm/F1.6-3.8 3.4-122.4mm/F1.6-4.5 0.7Lux/F1.4 1.0Lux/F1.6 0.1Lux/F1.6 1/1-1/10,000 G.7... lang:en score:26 filesize: 5.08 M page_count: 73 document date: 2007-10-25



[\[pdf\]](#) User Manual Quick Start Guide Guide Warranty Accessories

Keith Gilbert Email Us At support@clearclick tech ClearClick User s Manual Quick Start Guide 1 Full Year Warranty USA Based Tech Support Safety Precautions Do not disassemble the unit 2 Please note that device and or plugged in USB drives may become very warm during use HDMI video source to HD Capture Box Ultimate it will detect a signal allow you record ** However there are low cost splitters HDVideoCaptureBoxUltimate clearclicksoftware Manuals

User s Manual Quick Start Guide Full 1-Year Warranty USA-Based Tech Support Email Us At: support ... utput to an HDMI device in Playback mode. If your files still have this issue, please try a new USB 3.0 flash drive 128 GB or smaller . We recommend SanDisk brand drives. 13. The recorded files don... lang:en score:23 filesize: 743.97 K page_count: 14 document date: 2020-03-24



[ClearClick Video2Digital Converter 3.0 User's Manual & Quick Start Guide](#)

Comprehensive user's manual and quick start guide for the ClearClick Video2Digital Converter 3.0, detailing setup, operation, troubleshooting, and technical specifications for converting analog video to digital formats.

lang:en score:22 filesize: 592.55 K page_count: 26 document date: 2022-05-23



[\[pdf\] User Manual Quick Start Guide Guide Warranty Accessories Diagram](#)

Keith Gilbert User s Manual Quick Start Guide ClearClick HDMI Cable c AV Adapter d Power e USB f Remote Control g Device Diagram Explanation continued on next page HDUltimate4K clearclicksoftware Manuals 4 1 LED Indicator A red light appears when the device is either turned or charging blinks recording 2 Button Hold down to turn off To Year Warranty USA Based Tech Support Email Us At support@clearclick tech Extend Your Years For FREE! Get a FREE extra year of warranty just by registering your product at User s Manual Quick Start Guide 1-Year Warranty USA-Based Tech Support Email Us At: support clea ... old contacts facing toward you . NOTE: We highly recommend starting with a brand new, SanDisk USB 3.0/microSD drive. 7 7. Press the Record button on the HD Video Capture Box. 8. To stop recordin...

lang:en score:21 filesize: 744.53 K page_count: 14 document date: 2020-11-19



[\[pdf\] User Manual Quick Start Guide Guide Warranty Accessories](#)

Keith Gilbert User s Manual Quick Start Guide ClearClick For tech support email us at 1 Year Warranty USA Based Tech Support support@clearclick Extend your warranty to 2 years for free by registering Video2Digital2 clearclicksoftware Manuals We recommend using a new SanDisk USB 3 0 drive 128GB or less With most SD flash drives the side with logo should face Safety Precautions Important Please Read Do not disassemble unit permit children use play this device WATCH Video Tutorial How To Set Up Your Video2Digital Converter

User s Manual Quick Start Guide WATCH: Video Tutorial How To Set Up Your Video2Digital Converter 2 ... d. Plug in a USB flash drive or SD card into the converter. We recommend using a new, SanDisk USB 3.0 drive, 128GB or less. With most USB/SD flash drives, the side with the logo should face away f...

lang:en score:21 filesize: 517.7 K page_count: 24 document date: 2020-09-29



Viz Pilot User Guide
Version 8.8



[\[pdf\] Documentation Guide Warranty](#)


Viz Pilot User Guide Vizrt viz pilot guide 8 documentation vizrt |||

Viz Pilot User Guide Version 8.8 Copyright 2023 Vizrt. All rights reserved. No part of this softwa ... mum Supported Versions of Software Components Required by Viz Pilot Database, one of: Graphic Hub 3.0 with Graphic Hub REST 2.0 or newer, or Oracle 11 or 12.2 Media Sequencer 4.0 Viz Engine 3.3...

lang:en score:20 filesize: 11.02 M page_count: 451 document date: 2023-09-25



 Viz Pilot User Guide
Version 8.2



[\[pdf\]](#) Documentation Guide Warranty


Viz Pilot User Guide Vizrt viz pilot guide 8 2 docs vizrt |||

Viz Pilot User Guide Version 8.2 Copyright 2018 Vizrt. All rights reserved. No part of this softw ... imum supported versions of software components Viz Pilot depends on Database, one of: Graphic Hub **3.0** with Graphic Hub REST 2.0 or newer, or Oracle 11 or 12.2 Media Sequencer 4.0 Viz Engine 3.3...

lang:en score:20 filesize: 12.2 M page_count: 480 document date: 2018-07-23



 Viz Pilot User Guide
Version 8.5



[\[pdf\]](#) Documentation Guide Warranty


Viz Pilot User Guide Vizrt viz pilot guide 8 5 docs vizrt |||

Viz Pilot User Guide Version 8.5 Copyright 2019 Vizrt. All rights reserved. No part of this softw ... mum supported versions of software components required by Viz Pilot Database, one of: Graphic Hub **3.0** with Graphic Hub REST 2.0 or newer, or Oracle 11 or 12.2 Media Sequencer 4.0 Viz Engine 3.3...

lang:en score:20 filesize: 11.47 M page_count: 457 document date: 2019-12-16



 Viz Pilot User Guide
Version 8.7



[\[pdf\]](#) Documentation Guide Warranty


Viz Pilot User Guide Vizrt viz pilot guide 8 7 docs vizrt |||

Viz Pilot User Guide Version 8.7 Copyright 2023 Vizrt. All rights reserved. No part of this softwa ... mum Supported Versions of Software Components Required by Viz Pilot Database, one of: Graphic Hub **3.0** with Graphic Hub REST 2.0 or newer, or Oracle 11 or 12.2 Media Sequencer 4.0 Viz Engine 3.3...

lang:en score:20 filesize: 11.03 M page_count: 451 document date: 2023-09-25



 Viz Pilot User Guide
Version 8.3



[\[pdf\] Documentation Guide Warranty](#)

Viz Pilot User Guide Vizrt viz pilot guide 8 3 docs vizrt |||

Viz Pilot User Guide Version 8.3 Copyright 2018 Vizrt. All rights reserved. No part of this softw ... imum supported versions of software components Viz Pilot depends on Database, one of: Graphic Hub **3.0** with Graphic Hub REST 2.0 or newer, or Oracle 11 or 12.2 Media Sequencer 4.0 Viz Engine 3.3...

lang:en score:20 filesize: 11.46 M page_count: 460 document date: 2018-11-30



Viz Pilot User Guide
Version 8.9



 
[Viz Pilot User Guide v8.9](#)

This user guide provides comprehensive instructions and information on using Viz Pilot, including installation, configuration, and advanced features for managing broadcast graphics and content.

lang:en score:20 filesize: 11.12 M page_count: 452 document date: 2023-10-04



Viz Pilot User Guide
Version 8.6




[\[pdf\] Documentation Guide Warranty](#)

Viz Pilot User Guide Vizrt documentation center viz pilot guide 8 6 vizrt |||

Viz Pilot User Guide Version 8.6 Copyright 2020 Vizrt. All rights reserved. No part of this softw ... mum Supported Versions of Software Components Required by Viz Pilot Database, one of: Graphic Hub **3.0** with Graphic Hub REST 2.0 or newer, or Oracle 11 or 12.2 Media Sequencer 4.0 Viz Engine 3.3...

lang:en score:20 filesize: 11.46 M page_count: 458 document date: 2020-10-23

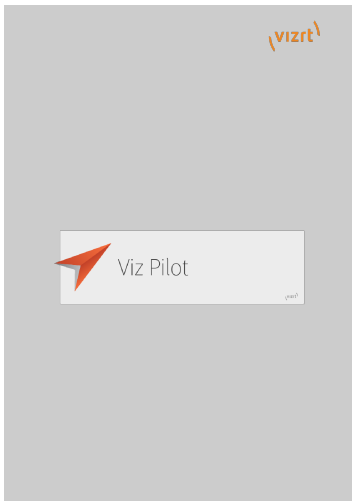


[\[pdf\]](#) Documentation Guide Warranty

viz pilot guide 7 2 docs vizrt |||

Viz Pilot User Guide Product Version 7.2 May 08, 2017 Copyright 2017 Vizrt. All rights reserved. ... inimum supported versions of software components Viz Pilot depends on Database, one of: Graphic Hub **3.0** with Graphic Hub REST 2.0 , or Oracle 11g Media Sequencer 4.0 Viz Engine 3.3 Recommended server...

lang:en score:18 filesize: 11.49 M page_count: 440 document date: 2017-05-08

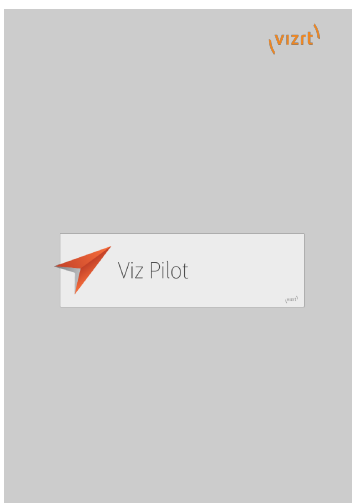


[\[pdf\]](#) Documentation Guide Warranty

viz pilot guide 8 0 docs vizrt |||

Viz Pilot User Guide Product Version 8.0 May 30, 2017 Copyright 2017 Vizrt. All rights reserved. ... inimum supported versions of software components Viz Pilot depends on Database, one of: Graphic Hub **3.0** with Graphic Hub REST 2.0 , or Oracle 11g Media Sequencer 4.0 Viz Engine 3.3 Recommended server...

lang:en score:18 filesize: 11.5 M page_count: 445 document date: 2017-05-30

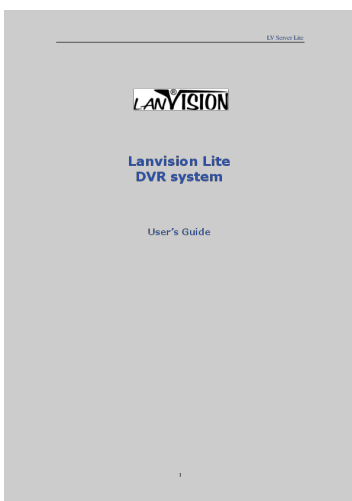

[\[pdf\]](#) User Manual Guide

EM LV Server v6 35Lite ftp asm cz Kameratev software LanVision Lite Manual |||

LV Server Lite Lanvision Lite DVR system User s Guide I LV Server Lite Contents Chapter1 Start up ... is selected, and it is darker when a smaller value is selected.

Selectable values are as follows: **3.0**, 2.6, 2.3, 2.0, 1.6, 1.3, 1.0, 0.6, 0.3, 0, -0.3, -0.6, -1.0, -1.3, -1.6, -2.0, -2.3, -2...

lang:nl score:13 filesize: 5.58 M page_count: 110 document date: 2011-11-15

Introducing the ClearClick Video2Digital Converter 2.0 (Second Generation).

Need to turn that box of old video tapes or camcorder tapes that's sitting in your closet or basement into digital format?

With the ClearClick Video To Digital Converter 2.0, you can transfer your videos to digital format with the touch of a button. Convert your VHS collection and enjoy your old movies again. Restore and share your family memories from 20 years ago. You can watch your digitized videos on your computer, tablet, smartphone, or your TV.

Here's how it works...

1. Connect your Video2Digital Converter 2.0 to your VCR or camcorder (**NOT INCLUDED**), or any other video source. (Accepts any input source with iRCA/AV output.)
2. Plug in a USB flash drive or SD card (**NOT INCLUDED; 512 GB or less**) into the converter. Your digitized video will be saved onto this drive.
3. Press the "Record" button on the converter. You'll be able to see your video on the 3.5" LCD as it transfers. (No computer is required to capture your videos!)
4. Press "Record" again to stop recording (or use the "Auto Stop" feature to stop recording after a preset amount of time).
5. Remove your USB flash drive or SD card from the converter, and insert it into your computer to transfer your digitized videos to your computer. Then put them on your tablet, smartphone, or burn a DVD. (DVD burning software not included.)

If you have questions at any point, this product also comes with ClearClick's US-based support.

What's New in Version 2.0? (Second Generation)


- Extra Large 3.5" Preview Screen
- Better Recording Quality (Recording Resolution: SD 720x480 Pixels **Not Intended For Modern HD Video Sources**)

[\[pdf\]](#) User Manual

videoconvertermanual 11 orig ai assets s3 amazonaws hicksvillelibrary |||

Introducing the ClearClick Video2Digital Converter 2.0 Second Generation . Need to turn that box of ... is completely reliant on your VCR/camcorder to successfully make quality digital conversions. USB **3.0** flash drive 512 GB or less or SD card 512 GB or less, Class 10 or higher - we recommend this...

lang:en score:13 filesize: 68.69 K page_count: 2 document date: 2023-07-20

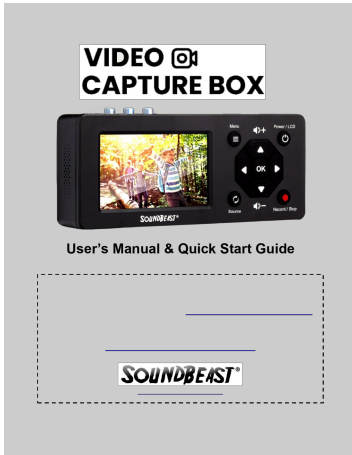

[\[pdf\]](#) User Manual Quick Start Guide Guide Warranty Accessories

Keith Gilbert SoundBeast® Video Capture Box 2 0Downloads SoundBeastVideo 0cdn shopify s files 1 0703 3500 4837 v 1745359141 |||

2.0 User s Manual Quick Start Guide 1-Year Warranty USA-Based Tech Support For tech support, ema ... USB flash drive or MicroSD card into the Video Capture Box. We recommend using a new, SanDisk USB **3.0** drive, 512GB or less. Most of the time, the side with the logo should face away from you as yo...

lang:en score:9 filesize: 796.52 K page_count: 24 document date: 2023-07-14