

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ThermoPro](#) /

› [ThermoPro TM03 Digital Timer Instruction Manual](#)

ThermoPro TM03

ThermoPro TM03 Digital Timer Instruction Manual

Model: TM03 | Brand: ThermoPro

INTRODUCTION

The ThermoPro TM03 Digital Timer is a versatile and user-friendly device designed for precise time management in various settings, including the kitchen, classroom, and during exercise. This manual provides detailed instructions for setting up, operating, and maintaining your TM03 timer to ensure optimal performance.

KEY FEATURES

- Countdown and Count-up Functionality:** Capable of both counting up and counting down, ideal for various timing needs.
- Adjustable 2-Level Alarm Volume:** Customize the alarm sound to suit your environment, ensuring it's heard even in noisy settings.
- Large, Easy-to-Read Display:** Features a clear digital display with large digits for easy viewing from any angle.
- Multiple Placement Options:** Includes a magnetic back for metal surfaces, a hanging hole, and a kickstand for flexible placement.
- Memory Function:** Stores the last set countdown time for quick and convenient reuse.
- Compact and Portable Design:** Small size allows for easy carrying and storage.

PACKAGE CONTENTS

- 1 x ThermoPro TM03 Digital Timer
- 1 x AAA Battery (pre-installed or included separately)
- 1 x User Manual

SETUP

Battery Installation

- Locate the battery compartment on the back of the timer.

2. Open the battery cover.
3. Insert one AAA battery, ensuring correct polarity (+/-). If a battery film is present, remove it before inserting the battery.
4. Close the battery cover securely.

Initial Power-On

The timer should automatically power on once the battery is correctly installed. The display will show '00:00'.

OPERATING INSTRUCTIONS

Setting the Countdown Timer

1. Press the 'M' button to set minutes. Hold to rapidly increase.
2. Press the 'S' button to set seconds. Hold to rapidly increase.
3. To start the countdown, press the 'START/STOP' button.
4. To pause the countdown, press 'START/STOP' again.
5. When the timer reaches '00:00', the alarm will sound and the display will flash.

Using as a Stopwatch (Count-up)

1. Ensure the timer display is at '00:00'. If not, press 'M' and 'S' simultaneously to clear.
2. Press the 'START/STOP' button to begin counting up.
3. Press 'START/STOP' again to pause the count-up.

Adjusting Alarm Volume

The TM03 timer features 2 alarm volume levels. Locate the volume switch on the side or back of the timer to select your preferred sound level (e.g., high or low).

Memory Function

After a countdown is completed and stopped, the timer will remember the last set time. To recall this time, simply press the 'START/STOP' button when the display is at '00:00' (after an alarm has sounded and been cleared, or if it was manually cleared to '00:00').

Clearing the Timer

To reset the timer to '00:00', press the 'M' and 'S' buttons simultaneously.

Placement Options

- **Magnetic Back:** Attach the timer to any metal surface, such as a refrigerator or oven.
- **Kickstand:** Pull out the integrated kickstand on the back to stand the timer upright on a countertop or desk.
- **Hanging Hole:** Use the small hole on the back to hang the timer on a hook.

CONVENIENT PLACEMENT OPTIONS



Image: The ThermoPro TM03 Digital Timer demonstrating its versatile placement options: hanging from a hook, standing on a surface using its kickstand, and magnetically adhering to a metal surface like a refrigerator.



Image: The ThermoPro TM03 Digital Timer illustrating its multiple placement options, including wall mounting, use with a display stand, and magnetic attachment to surfaces.

Your browser does not support the video tag.

Video: An official product video from ThermoPro Inc demonstrating the features and usage of the ThermoPro TM03-2 Digital Timers, including setting times, alarm functions, and placement options.

MAINTENANCE

Cleaning

Wipe the timer with a soft, damp cloth. Do not immerse in water or use abrasive cleaners.

Battery Replacement

When the display dims or the timer functions erratically, replace the AAA battery. Follow the battery installation steps in the Setup section.

TROUBLESHOOTING

- Timer not turning on:** Check battery installation and ensure the battery is fresh.
- Alarm not sounding:** Verify the alarm volume switch is not set to silent.
- Display is dim:** Replace the battery.
- Timer not responding:** Remove and reinsert the battery to perform a soft reset.

SPECIFICATIONS

Feature	Detail
Model Number	TM03-2
Brand	ThermoPro
Material	Plastic
Color	White
Item Weight	54 Grams (1.9 ounces)
Screen Size	1.5 Inches
Number of Settings	2 (Alarm Volume)
Batteries	1 AAA batteries required (included)
Max Timer Duration	99 minutes 59 seconds

SAFETY INFORMATION

- Keep out of reach of children.
- Do not expose to extreme temperatures or direct sunlight.
- Dispose of batteries properly according to local regulations.

WARRANTY & SUPPORT

ThermoPro provides a limited warranty for this product. For detailed warranty information, product registration, or technical support, please visit the official ThermoPro website or contact customer service through the contact information provided with your purchase.