

Manuals.plus /

- › Bosch /
- › Bosch AdvancedLeafBlower 36V-750 Cordless Leaf Blower User Manual

**Bosch 06008C6000**

# Bosch AdvancedLeafBlower 36V-750 Cordless Leaf Blower User Manual

Model: 06008C6000

## INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Bosch AdvancedLeafBlower 36V-750 Cordless Leaf Blower. Please read this manual thoroughly before first use and keep it for future reference.



Image: The Bosch AdvancedLeafBlower 36V-750, a cordless leaf blower in green and black, shown with its main body and nozzle attached.

## SAFETY INSTRUCTIONS

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury when operating power tools.

- Wear appropriate personal protective equipment (PPE), including eye protection, hearing protection, and sturdy footwear.
- Ensure the work area is clear of debris and other persons, especially children and pets.
- Do not operate the blower in wet conditions or near flammable liquids or gases.
- Before cleaning, servicing, or storing, always remove the battery pack.
- Use only Bosch original accessories and spare parts.

## SETUP

### Unpacking and Assembly

1. Carefully remove all components from the packaging. The box contents include: AdvancedLeafBlower 36V-750, 1x 2.0 Ah battery, charger AL 36V-20.
2. Attach the blower nozzle to the main unit. Align the nozzle with the opening on the blower body and twist until it locks securely into place.



Image: A person demonstrating how to attach the twist nozzle to the main body of the leaf blower, highlighting the secure connection mechanism.

3. Insert the fully charged 36V battery into the battery compartment until it clicks into place. Ensure it is seated firmly.

### Charging the Battery

Before first use, fully charge the battery. Connect the charger AL 36V-20 to a power outlet and then connect the battery to the charger. The charging indicator lights on the battery will show the charging status.



Image: A close-up of the battery pack inserted into the leaf blower, showing the green LED status indicator lights that display the battery charge level.

## OPERATING INSTRUCTIONS

---

### Starting and Stopping

1. To start the leaf blower, press and hold the trigger switch.
2. To stop the leaf blower, release the trigger switch.

### Speed Control

The Bosch AdvancedLeafBlower 36V-750 features a rotary wheel for continuous speed control, allowing you to adjust the airflow for different tasks.

- Rotate the wheel towards '+' for increased airflow and power, suitable for stubborn debris or large areas.
- Rotate the wheel towards '-' for reduced airflow, ideal for lighter debris, longer running time, or noise-sensitive environments.



Image: A close-up of the leaf blower's handle, showing the red trigger and the rotary speed control dial with a 'Speed Control' icon.

## Effective Use

For optimal performance, sweep debris into piles rather than scattering it. Use a sweeping motion from side to side.



Image: A person operating the Bosch AdvancedLeafBlower 36V-750 in a garden, effectively blowing leaves into a pile near a wooden raised bed.



Image: The leaf blower being used to clear light debris and small toys from a paved patio area, demonstrating its versatility.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your leaf blower.

- **Cleaning:** After each use, wipe down the exterior of the blower with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the air intake vents are clear of debris.
- **Storage:** Store the leaf blower in a dry, secure location, out of reach of children. Remove the battery pack before storing for extended periods.
- **Battery Care:** Store batteries in a cool, dry place. Do not store fully discharged batteries. Recharge them periodically if not in use for a long time.



Image: A top-down view of the leaf blower's air intake, showing the axial fan and protective grille, emphasizing the importance of keeping this area clear.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Blower does not start	Battery not inserted correctly or discharged.	Ensure battery is fully inserted. Charge battery if necessary.
Reduced airflow	Air intake or nozzle blocked. Speed control set too low.	Clear any obstructions from intake or nozzle. Increase speed using the rotary wheel.
Short operating time	Battery not fully charged. Operating at maximum speed continuously.	Ensure battery is fully charged before use. Reduce speed for longer runtime. Consider a higher capacity battery if available.

## SPECIFICATIONS

Feature	Detail
Brand	Bosch
Model Name	Bosch Akku-Laubbläser AdvancedLeafBlower
Item Model Number	06008C6000
Power Source	Battery Powered
Voltage	36 Volts
Included Components	AdvancedLeafBlower 36V-750, 1x 2.0 Ah battery, charger AL 36V-20, box
Item Weight	3.5 Kilograms (7.7 pounds)
Product Dimensions	33.5"L x 7.91"W x 11.42"H
Volume Flow	780 m <sup>3</sup> /h
Air Speed Range	100-200 km/h
Max. Running Time (with 4.0 Ah battery)	75 min
Sound Power Level	98 dB

## WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase genuine spare parts and accessories, please visit the

official Bosch website or contact Bosch customer service.

You can find more information and support on the Bosch Store on Amazon.

