

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ARMODD](#) /

› [ARMODD Silentwatch 4 Pro Smartwatch User Manual](#)

ARMODD Silentwatch 4 Pro

ARMODD Silentwatch 4 Pro Smartwatch User Manual

Model: Silentwatch 4 Pro | Brand: ARMODD

INTRODUCTION

Welcome to the user manual for your ARMODD Silentwatch 4 Pro Smartwatch. This guide provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your device. The Silentwatch 4 Pro is designed to enhance your daily life with features such as Bluetooth calling, health monitoring, and various sports modes, all within a durable IP67 waterproof design.

Please read this manual carefully to ensure proper use and to maximize the functionality of your smartwatch.

PRODUCT OVERVIEW

The ARMODD Silentwatch 4 Pro features a 1.32-inch touch screen with a sharp 360x360 pixel resolution, housed in a high-quality stainless steel body. It is compatible with both iOS and Android smartphones.



Figure 1: Front view of the ARMODD Silentwatch 4 Pro, displaying the time and step count on its black watch face.

Konzipiert für Männer



Figure 2: The ARMODD Silentwatch 4 Pro worn by a man, showcasing its classic and robust design.

SETUP

1. Charging the Device

Before first use, fully charge your smartwatch. A full charge takes approximately 2 hours. The battery lasts up to 3 days with normal use and up to 15 days in standby mode.

- Connect the magnetic charging cable to the charging points on the back of the watch.
- Plug the USB end of the cable into a standard USB power adapter (not included) or a computer USB port.
- The watch display will indicate charging status.

2. Installing the WearPro Application

The ARMODD Silentwatch 4 Pro requires the WearPro application for full functionality and synchronization with your smartphone.

1. Scan the QR code provided in the watch's initial setup screen or in the small printed manual to download the WearPro app. Alternatively, search for "WearPro" in your smartphone's app store (Google Play Store for Android, Apple App Store for iOS).
2. Install the application on your smartphone.
3. Open the WearPro app and follow the on-screen instructions to create an account or log in.

3. Pairing with Your Smartphone

Ensure Bluetooth is enabled on your smartphone.

1. Turn on your ARMODD Silentwatch 4 Pro by pressing and holding the power button.
2. In the WearPro app, navigate to the "Device" or "Add Device" section.
3. The app will search for available devices. Select "Silentwatch 4 Pro" from the list.
4. Confirm the pairing request on both your watch and smartphone if prompted.
5. Once paired, the watch's time and date will synchronize with your phone, and you can begin customizing settings.

OPERATING INSTRUCTIONS

Basic Navigation

- **Touch Screen:** Swipe up, down, left, or right to navigate through menus and functions. Tap to select.
- **Side Buttons:** The watch features multiple side buttons. Typically, one acts as a power/home button, while others may provide quick access to specific functions or act as rotatable crowns for scrolling.
- **Wake Screen:** Raise your wrist or press a side button to wake the screen.

Key Functions

- **Bluetooth Calls:**

Make and receive calls directly from your watch. Access the dial pad or contacts through the watch menu. The watch has a built-in speaker and microphone.

Bluetooth Telefonieren



Figure 3: The smartwatch displaying the dial pad for making Bluetooth calls directly from your wrist.

- **Health Monitoring:**

Monitor your heart rate, blood pressure, ECG, and sleep patterns. Access these features from the watch's health menu. Data is synchronized with the WearPro app for detailed analysis.

Misst die Herzfrequenz



Figure 4: The smartwatch displaying real-time heart rate measurements with a graphical representation.

- **Sports Modes:**

The watch supports seven sports modes: walking, running, cycling, jump rope, badminton, basketball, and soccer. Select your activity to track pedometer steps, distance, and calories burned.

- **Notifications:**

Receive notifications for incoming calls, SMS messages, and alerts from applications like Facebook and Messenger. Ensure notification permissions are enabled in the WearPro app.

- **Watch Faces:**

Customize your watch face from 12 pre-installed options or over 100 additional designs available in the WearPro app. You can also use your own photos as a watch face.



Figure 5: The smartwatch showcasing a customizable blue watch face with multiple sub-dials.



Figure 6: The smartwatch displaying a clean white watch face with blue accents and battery indicator.



Figure 7: The smartwatch featuring a vibrant green watch face with a date display.

- **Other Features:**

Includes remote phone camera shutter, music control, find phone function, alarm clock (vibration), weather updates, calculator, breath training, and password protection.

MAINTENANCE

Cleaning

- Wipe the watch screen and body with a soft, lint-free cloth.
- For stubborn marks, dampen the cloth slightly with water. Avoid using harsh chemicals or abrasive materials.
- Ensure the charging contacts are clean and dry before charging.

Water Resistance (IP67)

The ARMODD Silentwatch 4 Pro is IP67 waterproof, meaning it is protected from dust and can withstand immersion in water up to 1 meter for up to 30 minutes. It is suitable for daily use, such as washing hands or light rain exposure. It is not recommended for swimming, diving, or showering with hot water, as steam and high pressure can compromise the seal.

Strap Replacement

The 22-mm wide strap is replaceable. A silicone strap is included as a gift in the package. To replace the strap, locate the quick-release pins on the underside of the strap and gently slide them to detach the strap from the watch body. Attach the new strap by aligning the pins with the holes on the watch and releasing the pins into place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch does not turn on.	Low battery.	Charge the watch for at least 30 minutes.
Cannot pair with smartphone.	Bluetooth is off; app not running; watch not discoverable.	Ensure Bluetooth is on. Restart WearPro app. Restart watch. Forget device in phone's Bluetooth settings and re-pair.
Notifications not received.	Notification permissions not granted; app not running in background.	Check WearPro app settings for notification permissions. Ensure app is allowed to run in the background. Check phone's notification settings.
Inaccurate health data.	Improper wearing; sensor obstruction.	Ensure the watch is worn snugly on the wrist, not too tight or too loose. Clean the sensor on the back of the watch. Note that health data is for reference only and not for medical diagnosis.
Bluetooth call quality is poor.	Distance from phone; environmental interference.	Keep the watch within close proximity to your paired smartphone. Avoid environments with strong electromagnetic interference.

SPECIFICATIONS

Feature	Detail
Model Name	Silentwatch 4 Pro
Brand	ARMODD
Display Size	1.32 Inches
Display Resolution	360 x 360 px
Display Type	Digital
Water Resistance	IP67
Compatibility	iOS, Android
Connectivity	Bluetooth
Battery Type	Lithium Ion (1 included)

Feature	Detail
Battery Life (Normal Use)	Up to 3 days
Battery Life (Standby)	Up to 15 days
Charging Time	Approx. 2 hours
Weight	70 g
Included Components	Silicone strap
Health Monitoring	Heart Rate Monitor, Sleep Duration, ECG, Blood Pressure (reference only)
Sports Modes	Walking, Running, Cycling, Jump Rope, Badminton, Basketball, Soccer
GPS	No GPS

WARRANTY AND SUPPORT

ARMODD provides a **2-year warranty** for the Silentwatch 4 Pro. For any technical issues, questions, or warranty claims, please contact ARMODD customer service through their official website or the contact information provided with your purchase documentation.

Please retain your proof of purchase for warranty validation.

© 2023 ARMODD. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.