

[manuals.plus](#) /

› [GreenPan](#) /

› [GreenPan Elite Essential Smart Electric 6QT Skillet Pot Instruction Manual](#)

GreenPan CC005095-001

GreenPan Elite Essential Smart Electric 6QT Skillet Pot Instruction Manual

Model: CC005095-001

Brand: GreenPan

1. INTRODUCTION

The GreenPan Elite Essential Smart Electric 6QT Skillet Pot is a versatile kitchen appliance designed for efficient and healthy cooking. This multi-functional unit combines the capabilities of a skillet, slow cooker, steamer, and more, offering 10 preset cooking modes. Its healthy ceramic nonstick coating is PFAS-free, ensuring worry-free meal preparation. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to help you get the most out of your appliance.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Electrical Safety:** Always ensure the appliance is plugged into a grounded outlet of the correct voltage (120V). Do not immerse the base unit in water or other liquids. Keep the power cord away from hot surfaces.
- Heat Safety:** The appliance generates heat during operation. Use oven mitts or pot holders when handling hot parts, especially the removable inner pot and lid. The heat-resistant base helps protect countertops, but caution is always advised.
- Nonstick Coating:** The ceramic nonstick coating is PFAS-free, PFOA-free, lead-free, and cadmium-free. To maintain the integrity of the nonstick surface, use only silicone, wooden, or plastic utensils. Avoid abrasive cleaners or metal scouring pads.
- Children and Pets:** Keep the appliance out of reach of children and pets during operation and cooling.
- Ventilation:** Ensure adequate ventilation around the appliance during use. Do not operate near

flammable materials.

- **Maintenance:** Always unplug the appliance and allow it to cool completely before cleaning or storing.

3. PARTS AND COMPONENTS

Familiarize yourself with the components of your GreenPan Elite Essential Smart Electric Skillet:

- **Main Unit (Base):** Houses the heating element and control panel.
- **Removable Inner Pot:** 6-quart capacity, hard anodized with healthy ceramic nonstick coating. Features measurement markings on the inside.
- **Tempered Glass Lid:** Allows you to monitor cooking progress without lifting.
- **Control Panel:** Features an easy-to-read LCD display, menu buttons for cooking modes, time and temperature adjustment buttons, and a Start/Stop button.
- **Handles:** Integrated handles on the main unit and inner pot for easy handling.

6QT ESSENTIAL SMART SKILLET | OXFORD BLUE



STIR-FRY



SAUCE



SOUP



STEAM



SIMMER



SEAR/SAUTÉ



WHITE RICE



BROWN RICE



GRAINS



WARM

Image: Overview of the GreenPan Elite Essential Smart Electric Skillet, highlighting its key features including the Thermolon Volt ceramic nonstick, tempered glass lid, heavy-duty removable 6QT pan, easy-to-read LCD display, 10 modes, and cast-in heating element.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the appliance. Retain packaging for future storage or disposal.
2. **Initial Cleaning:** Before first use, wash the removable inner pot and tempered glass lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Assemble:** Place the clean, dry inner pot securely into the main unit. Ensure it is properly seated.
4. **Power Connection:** Plug the power cord into a standard 120V electrical outlet. The LCD display will illuminate.

5. OPERATING INSTRUCTIONS

The GreenPan Elite Essential Smart Electric Skillet features an intuitive control panel with 10 preset cooking modes. Your Essential Pan automatically selects a temperature and time once you choose a cooking program. While cooking, the display will count down as time elapses. At the end of the cooking program, the Essential Pan automatically switches to the Keep Warm setting (except for Warm mode).

Control Panel Overview:

- **Menu Button:** Press to cycle through cooking program modes.
- **Time Button:** Press to adjust the remaining cooking time.
- **Temp Button:** Press to adjust the cooking temperature.
- **Start/Stop Button:** Press to start or stop a cooking function.
- **+/- Buttons:** Use to reduce/increase time or temperature.

Cooking Modes and Presets:

The table below outlines the preset cooking temperatures and times for each mode. You can adjust these settings using the Time and Temp buttons, followed by the +/- buttons.



Image: Visual representation of the 10 cooking modes available on the GreenPan Elite Essential Smart Electric Skillet: Stir-Fry, Sauce, Soup, Steam, Simmer, Sear/Sauté, White Rice, Brown Rice, Grains, and Warm.

Preset Cooking Guide

Program	Preset Cooking Temperature	Temperature Range	Preset Cooking Time	Time Range	Preset Keep Warm*
Manual Operation	400°F	160°F - 450°F	00:30	00:10 - 01:00	Yes
Stir-Fry	450°F	300°F - 450°F	00:20	00:10 - 01:00	Yes

Program	Preset Cooking Temperature	Temperature Range	Preset Cooking Time	Time Range	Preset Keep Warm*
Sauce	350°F	250°F - 450°F	00:20	00:10 - 01:00	Yes
Simmer	200°F	180°F - 200°F	04:00	00:30 - 08:00	Yes
Steam	N/A	N/A	00:20	00:10 - 02:00	Yes
White Rice	N/A	N/A	00:50	00:45 - 01:05	Yes
Brown Rice	N/A	N/A	01:15	01:05 - 01:45	Yes
Grains	N/A	N/A	01:15	01:05 - 01:45	Yes
Soup	170°F	170°F - 220°F	01:00	00:10 - 02:00	Yes
Sear/Sauté	400°F	200°F - 450°F	00:20	00:10 - 01:00	Yes
Warm	160°F	N/A	04:00	00:30 - 08:00	No

*At end of cooking program.

General Operation Steps:

1. Ensure the inner pot is clean and properly seated in the base.
2. Add your ingredients to the inner pot.
3. Press the **Menu** button to select your desired cooking program (e.g., Stir-Fry, Simmer, Rice). The display will show the default time and temperature.
4. If desired, adjust the **Time** and **Temp** using the respective buttons and the +/- buttons.
5. Press the **Start/Stop** button to begin cooking. The display will show "PREHEAT" until the desired temperature is reached, then it will switch to the cooking countdown.
6. Once cooking is complete, the appliance will beep and automatically switch to the Keep Warm setting (if applicable).
7. To stop cooking at any time, press the **Start/Stop** button.

THE GREENPAN DIFFERENCE

	GREENPAN ELITE ESSENTIAL SMART SKILLET	TRADITIONAL COUNTERTOP PANS
Diamond-Infused Ceramic Nonstick	<input checked="" type="radio"/>	<input type="radio"/>
Free of PFAS & PFOA	<input checked="" type="radio"/>	<input type="radio"/>
Powerful Cast-In Element	<input checked="" type="radio"/>	<input type="radio"/>
10 One-Touch Presets	<input checked="" type="radio"/>	<input type="radio"/>
Removable Die-Cast Pan	<input checked="" type="radio"/>	<input type="radio"/>

Image: The GreenPan Elite Essential Smart Electric Skillet in use, demonstrating the powerful cast-in heating element for searing chicken pieces evenly.

6. MAINTENANCE AND CLEANING

Proper care and cleaning will extend the life of your GreenPan Elite Essential Smart Electric Skillet.

Cleaning the Inner Pot and Lid:

- The removable inner pot and tempered glass lid are **dishwasher safe**.
- For best results and to prolong the life of the nonstick coating, hand washing with warm, soapy water and a soft sponge is recommended.
- Always allow the pot and lid to cool completely before washing.
- Avoid using abrasive cleaners, steel wool, or metal scouring pads, which can damage the nonstick surface.

Cleaning the Main Unit (Base):

- Ensure the main unit is unplugged and completely cool before cleaning.
- Wipe the exterior of the main unit with a soft, damp cloth.
- **Never immerse the main unit in water or any other liquid.**
- Do not use abrasive cleaners or harsh chemicals on the main unit.



Diamond-Infused Ceramic Nonstick



Powerful Cast-In Heating Element



Removable 6QT Die-Cast Pan



Easy-to-Read LCD Display



Dishwasher Safe Pot



Simple One-Touch Presets

Image: A hand rinsing the removable inner pot of the GreenPan Elite Essential Smart Electric Skillet under a faucet, illustrating its easy-to-clean and dishwasher-safe design.

7. TROUBLESHOOTING

If you encounter any issues with your GreenPan Elite Essential Smart Electric Skillet, refer to the following common problems and solutions:

- **Appliance Not Turning On:**

- Ensure the power cord is securely plugged into both the appliance and a working electrical outlet.
- Check if the outlet is functioning by plugging in another appliance.

- **Food Sticking to the Pot:**

- Ensure you are using a small amount of cooking oil or butter, even with nonstick.
- Avoid using metal utensils that can scratch and damage the nonstick coating.
- Ensure the cooking temperature is appropriate for the food being cooked.

- **Uneven Heating:**

- Verify the inner pot is correctly seated in the main unit.
- The cast-in heating element is designed for even heat distribution; if issues persist, contact customer support.

- **Display Not Working Correctly:**

- Unplug the appliance for a few minutes, then plug it back in to reset the system.
- If the issue continues, contact customer support.

For problems not listed here, please contact GreenPan customer support.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	CC005095-001
Capacity	6 Quarts (6QT)
Wattage	1800 watts
Voltage	120V
Material	Healthy Ceramic Nonstick, PFAS-Free
Product Dimensions	12"D x 12"W x 12"H
Item Weight	15.82 pounds (7.19 Kilograms)
Included Components	Electric Skillet Base, Removable Inner Pot, Tempered Glass Lid
Special Features	Dishwasher Safe (removable pot), Easy-to-read backlit LCD display, Keep Warm Setting, Max temperature: 450°F, Programmable, 10 Cooking Modes (Stir-Fry, Sauce, Soup, Steam, Simmer, Warm, Sear/Sauté, White Rice, Brown Rice, Grains)
UPC	885837027433

9. WARRANTY AND SUPPORT

GreenPan products are manufactured to high-quality standards and are warranted against defects in materials and workmanship. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your product or visit the official GreenPan website.

Customer Support:

If you have any questions, require assistance, or need to make a warranty claim, please contact GreenPan customer support through their official website or the contact information provided in your product documentation.