

GreenPan CC009985-001

GreenPan Elite 8-in-1 Programmable 6QT Electric Slow Cooker User Manual

Model: CC009985-001

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your GreenPan Elite 8-in-1 Programmable 6QT Electric Slow Cooker. Please read all instructions carefully before first use and retain for future reference.

The GreenPan Elite Slow Cooker is designed to create flavorful dishes and family-sized meals with ease. Its versatile functions allow you to sear, sauté, brown, slow cook, roast, and steam, all within a single appliance. The large LCD screen and easy-to-use presets simplify the cooking process, while the Thermolon™ Volt ceramic nonstick coating ensures healthy cooking and effortless cleanup.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS



Overall view of the GreenPan Elite 8-in-1 Programmable 6QT Electric Slow Cooker with its lid and control panel.



The removable 6-quart hard anodized pot, designed for quick and even heating, shown with food inside.



The tempered glass lid, designed for quick and even heating, shown with food inside.

The tempered glass lid, allowing visibility of the cooking process.



Close-up of the digital control panel with an XL green backlit LCD display for easy setting selection.

The slow cooker consists of the main heating unit, a removable 6-quart hard anodized pot with Thermolon™ Volt ceramic nonstick coating, a tempered glass lid, and a stainless steel steamer basket.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the slow cooker.
2. **Cleaning:** Before first use, wash the removable pot, tempered glass lid, and steamer basket in warm, soapy water. Rinse thoroughly and dry completely. The removable pot, lid, and steamer are dishwasher safe. Wipe the exterior of the main heating unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the slow cooker on a stable, flat, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
4. **Power Connection:** Ensure the voltage of your power outlet matches the appliance's requirements (220V). Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The GreenPan Elite Slow Cooker features 8 powerful one-touch presets for versatile cooking.



The in-pot browning function allows you to sear meats or sauté vegetables directly in the removable pot before slow cooking.



The Thermolon™ Volt healthy ceramic nonstick coating is PFAS-free, PFOA-free, lead-free, and cadmium-free, ensuring worry-free cooking.

Using the Presets:

- **Slow Cook:** For traditional slow cooking recipes.
- **Sauté/Brown:** To sear ingredients before slow cooking, enhancing flavor.
- **Steam:** Use with the included stainless steel steamer basket for steaming vegetables, dumplings, etc.
- **Simmer/Buffer:** Ideal for keeping food warm or gently simmering.
- **Proof:** For dough proofing.
- **Bake:** For baking certain dishes.
- **Reheat:** To warm up cooked food.
- **High/Low:** Manual temperature settings for various cooking needs.
- **Warm:** Automatically switches to warm mode after cooking is complete, or can be selected manually.

To select a function, press the corresponding button on the control panel. Use the Time and Temp buttons to adjust

settings as needed. Press Start/Stop to begin or end a cooking cycle.

Official Product Video:

Your browser does not support the video tag.

This video demonstrates the various functions and ease of use of the GreenPan Elite 8-in-1 Programmable 6QT Electric Slow Cooker, including in-pot browning and different cooking modes. Duration: 30 seconds.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your slow cooker.

EASY TO CLEAN & DISHWASHER SAFE



MAKES CLEANUP SIMPLE
THE REMOVABLE POT IS DISHWASHER SAFE AND WIPES CLEAN

The removable pot is designed for easy cleaning, either by hand or in the dishwasher.

- **Always unplug** the slow cooker from the power outlet and allow it to cool completely before cleaning.
- **Removable Pot, Lid, and Steamer:** These components are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Avoid using harsh detergents, abrasive pads, or steel wool, as these can damage the nonstick coating.
- **Main Heating Unit:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main unit in water or any other liquid.
- **Storage:** Ensure all parts are clean and dry before storing. Store the slow cooker in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; unit not properly assembled.	Ensure power cord is securely plugged into a working outlet. Check if the removable pot is correctly seated in the main unit.
Food not cooking evenly.	Too much food; lid not sealed properly; incorrect temperature setting.	Do not overfill the pot. Ensure the lid is securely placed. Verify the selected temperature and cooking mode are appropriate for the recipe.

Problem	Possible Cause	Solution
Nonstick coating appears damaged.	Use of metal utensils; abrasive cleaning.	Always use silicone, wooden, or plastic utensils. Clean with soft sponges and non-abrasive cleaners.
Error code displayed.	Internal malfunction or sensor issue.	Unplug the unit, wait a few minutes, then plug it back in. If the error persists, contact customer support.

SPECIFICATIONS

- Brand:** GreenPan
- Model:** CC009985-001
- Color:** Black
- Material:** Ceramic, Stainless Steel, Tempered Glass
- Product Dimensions:** 11.81"D x 22.13"W x 16.1"H
- Capacity:** 6 Quarts
- Wattage:** 1350 watts
- Voltage:** 220.0 volts
- Item Weight:** 21 pounds (approx. 9.53 kg)
- Dishwasher Safe:** Yes (Pot, Lid, Steamer)
- Control Method:** Push Button
- Control Type:** Digital
- UPC:** 885837027556



Visual representation of the GreenPan Elite Slow Cooker's dimensions.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official user manual provided by GreenPan. A digital version of the user manual can be accessed via the following link:

[Download Official User Manual \(PDF\)](#)

For further assistance, you may also visit the [GreenPan Store on Amazon](#).

© 2023 GreenPan. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question