

[Manuals.plus](#) /

› [GreenPan](#) /

› GreenPan Elite Essential Smart Electric 6QT Skillet Pot User Manual

GreenPan CC005093-001

GreenPan Elite Essential Smart Electric 6QT Skillet Pot User Manual

Model: CC005093-001

INTRODUCTION

Thank you for choosing the GreenPan Elite Essential Smart Electric 6QT Skillet Pot. This versatile appliance is designed to simplify your cooking experience with its 10-in-1 functionality and healthy ceramic nonstick coating. Please read this manual thoroughly before first use to ensure safe and optimal performance.

IMPORTANT SAFETY INFORMATION

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

PRODUCT COMPONENTS

10 MODES TO MASTER YOUR MEALS

EASY ONE-TOUCH PRESETS



STIR-FRY



SAUCE



SOUP



STEAM



SIMMER



SEAR/SAUTÉ



WHITE RICE



BROWN RICE



GRAINS



WARM

Image 1: Overview of the GreenPan Elite Essential Smart Electric Skillet, highlighting its key components including the tempered glass lid, Thermolon Volt ceramic nonstick interior, heavy-duty removable 6QT pan, PFAS-free construction, easy-to-read LCD display, 10 cooking modes, and cast-in heating element.

- **Tempered Glass Lid:** Allows monitoring of cooking progress.
- **Removable 6QT Pan:** Features Thermolon Volt ceramic nonstick coating.
- **Main Unit with Control Panel:** Houses the heating element and LED display.
- **Easy-to-Read LCD Display:** Shows cooking settings and status.
- **Control Buttons:** For selecting modes, adjusting time and temperature.
- **Power Cord:** For electrical connection.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and inspect the appliance for any damage.
2. **Cleaning:** Before first use, wash the removable inner pot and tempered glass lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Assembly:** Place the clean, dry removable inner pot securely into the main unit. Ensure it is properly seated.
4. **Placement:** Place the electric skillet on a stable, heat-resistant, and dry surface away from the edge of the counter. Ensure adequate ventilation around the unit.
5. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet. The display will illuminate.

OPERATING INSTRUCTIONS

The GreenPan Elite Essential Smart Electric Skillet features 10 pre-set cooking modes for various culinary tasks.

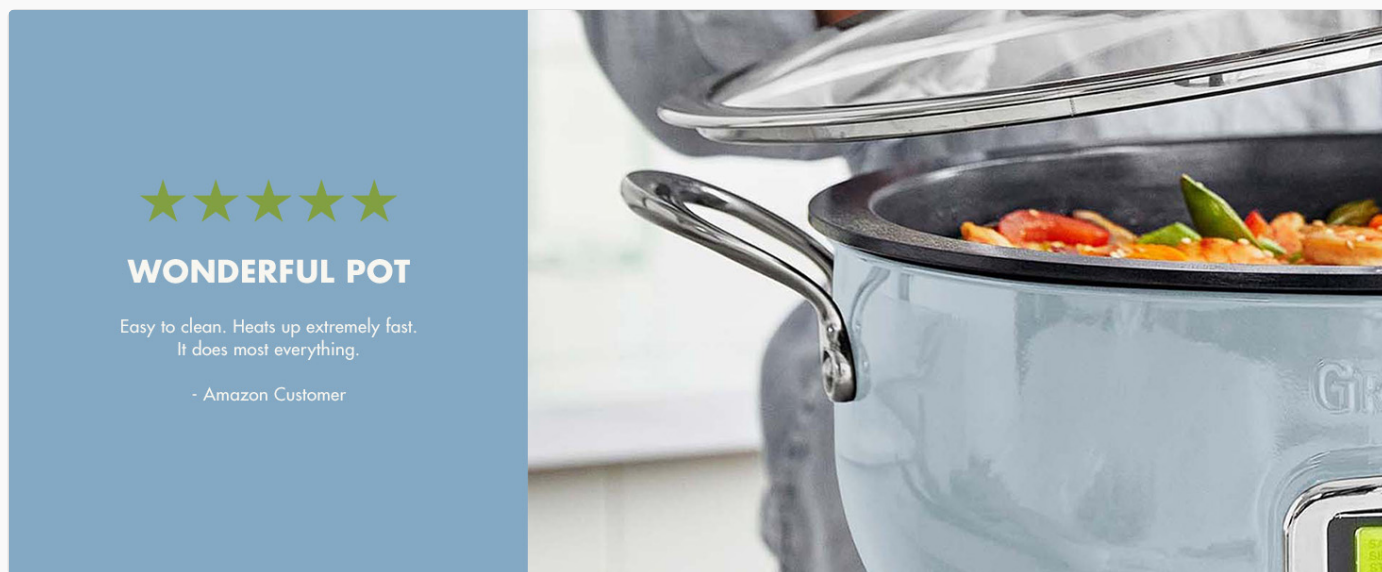


Image 2: Visual representation of the 10 one-touch cooking presets on the GreenPan Elite Essential Smart Electric Skillet, including Stir-Fry, Sauce, Soup, Steam, Simmer, Sear/Sauté, White Rice, Brown Rice, Grains, and Warm.

General Operation:

1. **Select Mode:** Use the "MENU" button to cycle through the 10 available cooking modes: Stir-Fry, Sauce, Soup, Steam, Simmer, Warm, Sear/Sauté, White Rice, Brown Rice, Grains. The selected mode will be highlighted on the LCD display.
2. **Adjust Settings (if applicable):** For modes like Sear/Sauté, you may be able to adjust temperature using the "TEMP" buttons (+/-). For timed modes, adjust cooking duration using the "TIME" buttons (+/-).
3. **Start Cooking:** Press the "START" button to begin the cooking cycle. The display will show the remaining time or current temperature.
4. **Monitoring:** The tempered glass lid allows you to monitor your food without releasing heat.
5. **Cancel/Stop:** Press the "STOP" button to cancel the current cooking program at any time.
6. **Keep Warm:** Some modes may automatically switch to a "Warm" setting after cooking is complete.

Specific Mode Guidance:

- **Sear/Sauté:** Ideal for browning meats and vegetables. Use the temperature controls to achieve desired searing levels. The cast-in element ensures quick and even heating.
- **Stir-Fry:** High heat cooking for quick and even stir-frying. The high sides help contain ingredients.
- **Rice (White/Brown) & Grains:** Follow recommended water-to-grain ratios. The skillet will automatically adjust

cooking time for optimal results.

- **Soup/Sauce/Simmer:** For slow cooking and simmering. Adjust time as needed for desired consistency.
- **Steam:** Add water to the bottom of the pot, place ingredients in a steamer basket (not included), and select the steam function.
- **Warm:** Maintains food at a serving temperature without overcooking.

MAINTENANCE AND CLEANING

Proper care ensures the longevity and performance of your electric skillet.

EASY TO CLEAN & DISHWASHER SAFE



MAKES CLEANUP SIMPLE

THE REMOVABLE POT WIPES CLEAN AND IS DISHWASHER SAFE

Image 3: The removable inner pot of the GreenPan Elite Essential Smart Electric Skillet being rinsed under running water, illustrating its dishwasher-safe and easy-to-clean design.

1. **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet and allow it to cool completely.
2. **Removable Pot and Lid:** The removable inner pot and tempered glass lid are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Avoid using harsh scourers or metal utensils that could

damage the nonstick coating.

- 3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid. Ensure no water enters the control panel area.
- 4. **Stubborn Food Residue:** For stubborn food residue in the inner pot, fill it with warm, soapy water and let it soak for a short period before cleaning.
- 5. **Storage:** Ensure all parts are clean and dry before storing. Store the appliance in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure power cord is securely plugged into a working outlet. Check household circuit breaker. If problem persists, contact customer support.
Food sticks to the nonstick surface.	Nonstick coating damaged; improper cooking temperature; insufficient oil/fat.	Ensure you are using appropriate cooking temperatures. Use a small amount of cooking oil or butter. Avoid using metal utensils that can scratch the coating. If coating is severely damaged, consider replacement.
Display shows an error code.	Internal sensor issue; pan not properly seated.	Unplug the unit, wait a few minutes, then plug it back in. Ensure the inner pot is correctly placed. If the error persists, contact customer support.
Uneven heating.	Inner pot not seated correctly; food overloaded.	Ensure the inner pot is fully and correctly seated in the main unit. Avoid overfilling the pot, which can hinder even heat distribution.

SPECIFICATIONS

- **Model Number:** CC005093-001
- **Capacity:** 6 Quarts
- **Power:** 1800 Watts
- **Voltage:** 120V
- **Dimensions:** 15.47"D x 15.47"W x 7.87"H
- **Weight:** 10.14 Pounds
- **Material:** Healthy Ceramic Nonstick (Thermolon Volt), PFAS-Free
- **Special Features:** 10 Cooking Modes, Easy-to-read backlit LCD display, Dishwasher Safe (removable pot and lid), Cast-in Heating Element, Tempered Glass Lid
- **UPC:** 885837027419

WARRANTY AND SUPPORT

GreenPan products are manufactured with quality and durability in mind. For warranty information, product registration, or customer support, please visit the official GreenPan website or contact their customer service department.

Online Support: www.greenpan.us

Please have your model number (CC005093-001) and UPC (885837027419) available when contacting support.

© 2023 GreenPan. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B8DZJC9H>

More documents and user manuals: <https://manuals.plus/>