

Daewoo DFP-732

Daewoo DFP-732 Food Processor Instruction Manual

Model: DFP-732 | Brand: Daewoo

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Daewoo DFP-732 Food Processor. Retain this manual for future reference.

- Ensure the appliance is connected to a 220-240V, 50/60Hz power supply. This product is not designed for use in regions with 110-120V power (e.g., USA or Canada).
- Always unplug the appliance from the power outlet before assembling, disassembling, cleaning, or when not in use.
- Keep hands and utensils away from moving blades or discs while processing food to prevent injury.
- Do not operate the food processor if any part is damaged or if the cord or plug is damaged. Contact qualified service personnel for repair.
- The appliance features a double safety lock. Ensure all parts are correctly assembled and locked into place before operation. The motor will not start if the safety lock is not engaged.
- Do not immerse the motor base in water or any other liquid.
- This appliance is for household use only.

2. PRODUCT OVERVIEW

The Daewoo DFP-732 is a versatile food processor designed to simplify various kitchen tasks. It features a powerful 600W motor, a 1.2-liter processing container, and multiple speed settings including a pulse function.



Figure 2.1: The Daewoo DFP-732 Food Processor, showing the motor base, processing bowl, lid, and feed chute.

3. COMPONENTS AND ACCESSORIES

Your Daewoo DFP-732 Food Processor comes with several components and accessories to enhance its functionality.

- **Motor Base:** Contains the 600W motor and speed control knob.
- **Processing Bowl:** 1.2-liter capacity plastic container for chopping and mixing.
- **Lid with Feed Chute:** Secures the bowl and allows adding ingredients during operation.
- **Food Pusher:** Used with the feed chute to guide food into the processing bowl.
- **Chopping Blade:** Stainless steel blade for chopping, mincing, and pureeing.
- **Citrus Juicer Attachment:** For extracting juice from citrus fruits.
- **Various Discs:** Includes discs for shredding and slicing (specific types may vary).



Figure 3.1: Assortment of accessories including the chopping blade, citrus juicer, and various slicing/shredding discs.



Figure 3.2: Close-up top view of the stainless steel chopping blade, designed for efficient processing.



Figure 3.3: The food processor assembled with the citrus juicer attachment, ready for use.

4. SETUP AND ASSEMBLY

1. **Initial Cleaning:** Before first use, wash all detachable parts (processing bowl, lid, blades, accessories) in warm soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.
2. **Place Motor Base:** Position the motor base on a clean, dry, and stable surface. Ensure the non-slip feet are securely placed.
3. **Attach Processing Bowl:** Place the processing bowl onto the motor base. Rotate it clockwise until it locks securely into position.
4. **Insert Attachment:** Carefully place the desired attachment (e.g., chopping blade, shredding disc, or citrus juicer) onto the central shaft inside the processing bowl.
5. **Secure Lid:** Place the lid onto the processing bowl. Rotate it clockwise until it locks securely. The double safety lock mechanism will prevent the appliance from operating if the lid is not correctly secured.
6. **Connect Power:** Plug the power cord into a suitable 220-240V electrical outlet.

5. OPERATING INSTRUCTIONS

The Daewoo DFP-732 features a speed control knob with two speeds and a pulse function.

1. **Prepare Ingredients:** Cut food into appropriate sizes to fit through the feed chute or to be processed efficiently by the chosen attachment. Do not overload the bowl; the maximum capacity for liquids is 1.2 liters, and for dry food, it is up to 2.1 liters.
2. **Add Ingredients:** For chopping or mixing, place ingredients directly into the processing bowl. For slicing or shredding, use the feed chute and food pusher.
3. **Select Speed:** Turn the speed control knob to the desired setting:
 - **'0' (Off):** Appliance is off.
 - **'1' (Low Speed):** Suitable for softer ingredients or lighter tasks.
 - **'2' (High Speed):** Ideal for harder ingredients or more intensive processing.
 - **'P' (Pulse):** Provides short bursts of power at maximum speed. Hold the knob at 'P' for as long as needed, then release. This is useful for coarse chopping or when precise control is required.
4. **Process Food:** Allow the appliance to process food until the desired consistency is achieved. Do not operate continuously for more than 1 minute. Allow the motor to rest for at least 2 minutes between cycles.
5. **Switch Off:** Once processing is complete, turn the speed control knob to '0' (Off) and unplug the appliance.
6. **Remove Food:** Carefully remove the lid, then the attachment, and finally the processed food from the bowl. Be cautious with sharp blades.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your food processor.

1. **Unplug:** Always unplug the appliance before cleaning.
2. **Disassemble:** Carefully disassemble all removable parts: lid, processing bowl, blades, and other accessories.
3. **Wash Parts:** Wash all detachable parts by hand in warm, soapy water. Rinse thoroughly and dry immediately. **Note:** The processing bowl and accessories are **not dishwasher safe**.
4. **Clean Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
5. **Storage:** Store the food processor and its accessories in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your Daewoo DFP-732 Food Processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not start.	Power cord not plugged in; Safety lock not engaged (bowl or lid not secured).	Ensure the power cord is firmly plugged in. Check that the processing bowl and lid are correctly assembled and locked into place.
Motor runs, but food is not processed.	Attachment not correctly installed; Overloaded bowl.	Ensure the blade or disc is properly seated on the central shaft. Reduce the amount of food in the bowl.
Appliance emits a burning smell.	Overheating due to continuous operation or overloading.	Switch off the appliance immediately and unplug it. Allow the motor to cool down for at least 30 minutes. Reduce load and processing time. If the smell persists after cooling, discontinue use and contact customer support.
Excessive vibration or noise.	Uneven load; Appliance not on a stable surface.	Ensure food is evenly distributed. Place the appliance on a flat, stable surface.

8. SPECIFICATIONS

Detailed technical specifications for the Daewoo DFP-732 Food Processor.

Feature	Specification
Brand	Daewoo
Model Name	DFP-732
Power Source	AC (220-240V, 50/60Hz)
Motor Power	600W
Processing Bowl Capacity	1.2 Liters (liquid), up to 2.1 Liters (dry food)
Number of Speeds	2 + Pulse function
Safety Feature	Double Safety Lock
Blade Material	Stainless Steel
Product Dimensions (approx.)	9"D x 8"W x 14"H (20cm D x 19cm W x 37cm H)
Item Weight	4.4 pounds
Product Care Instructions	Hand Wash (not dishwasher safe)



Figure 8.1: Approximate dimensions of the Daewoo DFP-732 Food Processor (19cm W x 20cm D x 37cm H).

For further assistance, please contact Daewoo customer support.