



**Manuals.plus /**

- › **Cosmopolitan /**
- › Cosmopolitan Flat Iron Hair Straightener User Manual

## **Cosmopolitan VRD928982390**

# **Cosmopolitan Flat Iron Hair Straightener User Manual**

Model: VRD928982390

## **INTRODUCTION**

---

This user manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Cosmopolitan Flat Iron Hair Straightener. Designed for both long and short hair, this portable travel straightener features dual voltage capability, ceramic plates, fast heat-up, and 5-level LED temperature control up to 446°F. Please read this manual thoroughly before first use and retain it for future reference.



Image: The Cosmopolitan Flat Iron Hair Straightener in its closed position, showcasing its sleek blue and silver design.

## IMPORTANT SAFETY INFORMATION

---

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- **Burn hazard:** Surfaces get extremely hot during use. Avoid direct contact with skin.
- **Electric shock risk:** Keep away from water. Do not use near bathtubs, sinks, showers, or any other water sources.
- **Fire risk:** Always unplug the device when not in use. Do not leave the straightener unattended when it is plugged into an electrical outlet.
- Keep out of reach of children.
- Allow the straightener to cool down completely before storing it to prevent burns or fires.
- Always use a heat protectant spray on your hair before styling to prevent heat damage.

## PRODUCT FEATURES

---

The Cosmopolitan Flat Iron Hair Straightener is equipped with advanced features for optimal styling:

- **Ceramic Coating Technology:** Delivers even heat distribution to reduce frizz and enhance shine, resulting in healthy-looking hair.
- **Rapid Heat Up:** Achieves desired temperature quickly, allowing for efficient styling.
- **Advanced 5-Level LED Temperature Control:** Adjustable variable heat levels from 300°F to 446°F (149°C to 230°C), suitable for all hair types.
- **Fabulous Frizz Control:** Anti-static, ceramic-coated plates glide smoothly over hair, providing a slick, salon-finished look.
- **Slim and Lightweight Design:** Ultra-portable and easy to handle, ideal for both home use and travel.
- **Automatic Shut-off:** Features a 1-hour automatic shut-off for added safety.
- **Locking Switch:** Convenient locking mechanism for secure storage and travel.
- **360° Swivel Cord:** Provides flexibility and prevents tangling during use.




Image: An annotated diagram highlighting key features of the Cosmopolitan Hair Straightener, including its slim design, temperature control, swivel cord, locking mechanism, and frizz control.




Image: The ultra-slim design of the straightener allows for better handling during styling, as shown while being used on blonde hair.



Image: The ceramic coating on the plates helps to reduce frizz and provide a smooth finish.



Image: The straightener features a 5-level LED temperature control, allowing precise heat adjustments from 302°F to 446°F.

## SETUP

---

Before using your Cosmopolitan Flat Iron Hair Straightener for the first time, please follow these simple setup steps:

1. Unpack the hair straightener and all accessories from the packaging.
2. Inspect the device for any visible damage. If damaged, do not use and contact customer support.
3. Ensure your hands are dry before plugging the straightener into a suitable electrical outlet.
4. Place the straightener on a heat-resistant surface, away from flammable materials.

## OPERATING INSTRUCTIONS

---

Follow these steps for effective and safe hair styling:

1. **Prepare Hair:** Ensure your hair is clean, dry, and detangled. Apply a heat protectant spray evenly throughout your hair.
2. **Power On:** Plug in the hair straightener and turn it on using the power button.
3. **Set Temperature:** Allow the straightener to heat up to your desired temperature. Use the LED temperature control to select a setting between 300°F and 446°F (149°C to 230°C). Lower temperatures are recommended for fine or damaged hair, while higher temperatures are suitable for thick or coarse hair.
4. **Section Hair:** Divide your hair into small, manageable sections, approximately 1-inch wide.
5. **Straightening:** Starting from the roots, gently clamp a section of hair between the plates. Slowly and steadily glide

the straightener down the length of your hair, maintaining consistent pressure. Release the clamp when you reach the ends. Repeat this process for each section, using multiple passes if necessary to achieve the desired straightness.

6. **Creating Waves (Optional):** For wavy styles, twist sections of hair around the straightener and clamp them in place before slowly gliding down and releasing.
7. **Cool Down:** After styling, turn off the straightener and unplug it from the outlet. Allow the device to cool down completely on a heat-resistant surface before storing.



Image: Demonstrating the use of the straightener on a section of hair, highlighting the ease of styling.

## MAINTENANCE

---

Proper maintenance ensures the longevity and performance of your hair straightener:

- **Cleaning:** Ensure the straightener is unplugged and completely cool before cleaning. Wipe the ceramic plates and exterior with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.

- **Storage:** Store the straightener in a dry, safe place, away from moisture and extreme temperatures. Utilize the locking switch to keep the plates closed for compact storage.
- **Cord Care:** Do not wrap the power cord tightly around the straightener, as this can damage the cord. Store the cord loosely.

## TROUBLESHOOTING

If you encounter any issues with your Cosmopolitan Flat Iron Hair Straightener, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Straightener does not turn on.	Not plugged in correctly; power outlet issue; internal fault.	Ensure the plug is fully inserted into a working outlet. Test the outlet with another device. If the issue persists, contact customer support.
Straightener does not heat up.	Power issue; temperature setting too low; internal heating element fault.	Check power connection. Increase the temperature setting. Allow sufficient time for heating. If still no heat, contact customer support.
Hair gets pulled or snagged.	Hair not properly detangled; plates not fully closed; damaged plates.	Ensure hair is thoroughly detangled before use. Make sure the plates are clean and free of debris. If plates appear damaged, discontinue use.
Automatic shut-off activates too soon.	Normal operation (1-hour auto shut-off).	The device has a 1-hour automatic shut-off feature for safety. If it shuts off significantly sooner, contact customer support.

For issues not listed above, or if troubleshooting steps do not resolve the problem, please contact Cosmopolitan customer support.

## SPECIFICATIONS

Attribute	Detail
Product Dimensions	12 x 1 x 1 inches
Item Weight	0.63 ounces
Model Number	VRD928982390
Manufacturer	AROVO BV
Brand	Cosmopolitan
Hair Type Compatibility	All
Plate Material	Ceramic
Temperature Range	300°F to 446°F (149°C to 230°C)
Voltage	Dual Voltage (implied by "Portable Travel Straightener Dual Voltage")

## WARRANTY AND SUPPORT

---

Information regarding product warranty and customer support is typically provided with your product packaging or on the official Cosmopolitan brand website. Please refer to these resources for details on warranty coverage, returns, and how to contact customer service for assistance with your Cosmopolitan Flat Iron Hair Straightener.

For additional information or to explore other products, visit the official Cosmopolitan Store on Amazon.