

[Manuals.plus](#) /

> [ONN](#) /

> User Manual for ONN 24-Inch Class HD LED Smart TV

ONN ONN2022

User Manual for ONN 24-Inch Class HD LED Smart TV

Model: ONN2022

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your ONN 24-Inch Class HD LED Smart TV. Please read this manual thoroughly before using the product and retain it for future reference. This television features a 720p HD LED display, 60 Hz refresh rate, DLED display technology, and wireless streaming capabilities, including compatibility with Alexa and Google Assistant.

2. SETUP

2.1 Unpacking

Carefully remove all components from the packaging. Ensure all parts listed in the packing list are present and undamaged. Keep packaging materials for future transport or if the product needs servicing.

2.2 Attaching the Stands

To ensure stability, attach the included stands to the bottom of the television. Align the stands with the designated slots on the TV's base and secure them using the provided screws. Refer to the diagram below for proper attachment.



Image: Front view of the ONN 24-inch TV, illustrating its compact size and the attached stands. The TV measures approximately 23 inches wide, 5 inches deep, and 16 inches high.

Alternatively, the TV can be wall-mounted using a compatible VESA mount (not included). Consult a professional for wall-mounting installation.

2.3 Connecting Power

Plug the power cord into the TV's power input, then into a standard electrical outlet (110 Volts). The TV will enter standby mode, indicated by a small red light.

2.4 Initial Setup

Upon first power-on, the TV will guide you through an initial setup wizard. This includes connecting to your Wi-Fi network, signing into or creating a Roku account, and scanning for available channels if using an antenna. Follow the on-screen prompts to complete the setup.

3. OPERATING INSTRUCTIONS

3.1 Remote Control Functions

The included remote control provides full functionality for navigating your ONN Roku TV. Familiarize yourself with the button layout:



Image: The ONN Roku TV remote control, featuring a purple directional pad, dedicated streaming service buttons (Netflix, Disney+, Hulu), and standard TV controls.

- **Power Button:** Turns the TV on or off.
- **Directional Pad (Purple):** Navigates menus and selects items.
- **OK Button:** Confirms selections.
- **Home Button:** Returns to the Roku Home screen.
- **Back Button:** Returns to the previous screen.
- **Volume Up/Down:** Adjusts audio volume.
- **Mute Button:** Mutes or unmutes audio.
- **Dedicated Streaming Buttons:** Quick access to popular streaming services like Netflix, Disney+, and Hulu.

3.2 Navigating the Smart TV Interface

The ONN Roku TV features an intuitive smart TV interface. From the Home screen, you can access installed apps, input sources, and settings. Use the directional pad on your remote to highlight options and the OK button to select.



Image: The ONN Roku TV screen showing the main interface with various streaming app icons such as Netflix, Disney+, Apple TV, Roku

3.3 Accessing Streaming Services

Your TV provides instant access to a wide selection of apps from top streaming services. You can launch these directly from the Home screen or by using the dedicated buttons on your remote. Ensure your TV is connected to the internet for streaming functionality.

3.4 Voice Assistant Compatibility

This TV is compatible with Alexa and Google Assistant. You can control your TV, play movies, TV shows, and more using voice commands through a compatible voice assistant device (sold separately).

3.5 Input Selection

To switch between different input sources (e.g., HDMI, Antenna), navigate to the "Inputs" section on the Home screen or use the input button on your remote (if available).

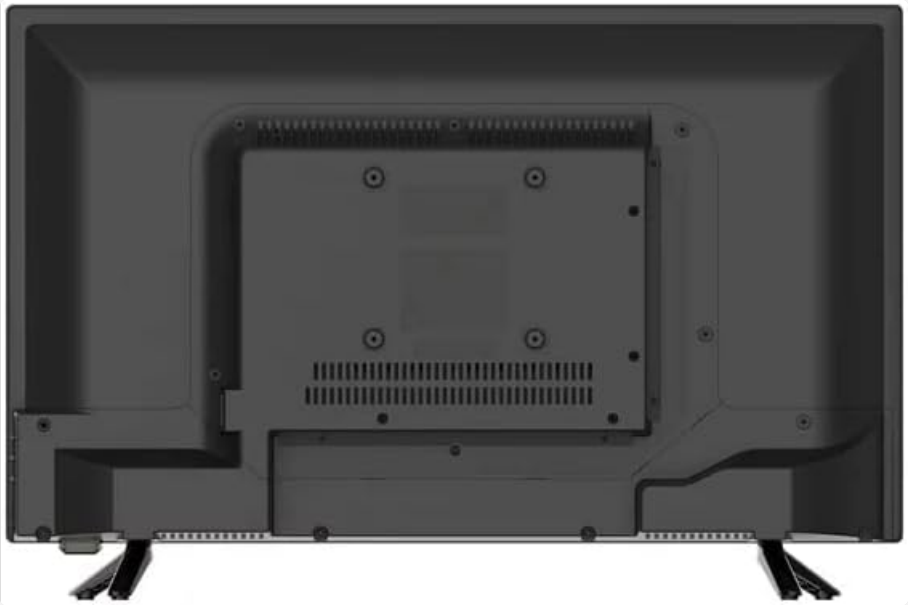


Image: Rear view of the ONN 24-inch TV, highlighting the various input ports available for connecting external devices.

4. MAINTENANCE AND CARE

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, dampen the cloth with a small amount of water or a screen-cleaning solution. Avoid harsh chemicals.
- **Cleaning the Cabinet:** Use a soft, dry cloth to clean the TV cabinet.
- **Ventilation:** Ensure the ventilation openings on the TV are not blocked to prevent overheating.
- **Power Cord:** Regularly check the power cord for any damage.

5. TROUBLESHOOTING

Problem	Possible Solution
No Power	Check if the power cord is securely plugged into both the TV and the outlet. Ensure the outlet is functional.

Problem	Possible Solution
No Picture/Sound	Verify the correct input source is selected. Check cable connections to external devices. Restart the TV.
Remote Not Working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.
Network Connection Issues	Check your Wi-Fi router. Restart the TV and router. Re-enter Wi-Fi password in TV settings.

For more complex issues, refer to the online support resources or contact customer service.

6. SPECIFICATIONS

Feature	Detail
Brand	ONN
Model Number	ONN2022
Screen Size	24 Inches (61 cm diagonal)
Display Technology	LED (DLED Display)
Resolution	720p
Refresh Rate	60 Hz
Product Dimensions	23"D x 5"W x 16"H (approx. 23 x 5 x 16 inches)
Item Weight	6.78 pounds
Connectivity Technology	Wireless
Special Features	Movil app, Works with Alexa & Google Assistant
Included Components	Optical-out
Voltage	110 Volts
Aspect Ratio	16:9

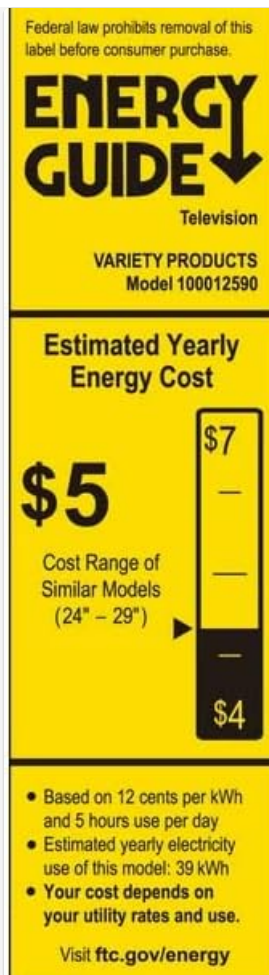


Image: Energy Guide label for the ONN TV, indicating an estimated yearly energy cost of \$5 based on 12 cents per kWh and 5 hours use per day.

7. WARRANTY INFORMATION

This product is part of the Amazon Renewed program. Pre-owned or refurbished products are professionally inspected and tested to work and look like new. If not satisfied with the purchase, renewed products are eligible for replacement or refund under the Amazon Renewed Guarantee. Please refer to the Amazon Renewed Guarantee terms and conditions for full details regarding coverage and duration.

8. CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact the seller or Amazon customer support. Have your product model number (ONN2022) and purchase details ready when contacting support.

© 2023 ONN. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B8H46CZQ>

More documents and user manuals: <https://manuals.plus/>