

[Manuals.plus](#) /

> [WANGCL](#) /

> WANGCL HOA26727 Universal Learning Remote Control User Manual

## WANGCL HOA26727

# WANGCL HOA26727 Universal Learning Remote Control User Manual

Model: HOA26727

## 1. INTRODUCTION

---

The WANGCL HOA26727 Universal Learning Remote Control is designed to replace multiple original infrared (IR) remote controls for various devices such as TVs, Satellite receivers, and DVD players. Its programmable learning function allows you to easily copy and consolidate the functions of your existing remotes into a single, convenient unit.

## 2. PRODUCT OVERVIEW

---

This remote control features a standard layout with dedicated buttons for TV, SAT, and DVD modes, along with a full numeric keypad, navigation buttons, and media controls. It is constructed from durable ABS material and comes in a black finish.



Figure 2.1: Front view of the WANGCL Universal Learning Remote Control, highlighting all buttons.



Figure 2.2: WANGCL Universal Learning Remote Control held in hand, showing the button layout.



Figure 2.3: Battery compartment of the WANGCL Universal Learning Remote Control with cover removed.



Figure 2.4: Back view of the WANGCL Universal Learning Remote Control.

### 3. SETUP: BATTERY INSTALLATION

---

The WANGCL HOA26727 remote control requires two AAA batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

**Note:** Always use new batteries and dispose of old batteries responsibly. Do not mix old and new batteries, or different types of batteries.

### 4. OPERATING INSTRUCTIONS: LEARNING FUNCTION

---

This remote control features a learning function, allowing it to copy commands from your original remote controls. Follow these steps to program the remote:

1. **Preparation:** Place the WANGCL universal remote control and your original remote control head-to-head, with the infrared emitters facing each other. Ensure the distance between them is less than 1 cm (approximately 0.4 inches).
2. **Enter Learning Mode:** Select the desired learning mode (TV, SAT, or DVD) by pressing the corresponding button in the upper left corner of the universal remote. Press and hold the selected mode button until the red indicator light flashes. Release the button.
3. **Select Button to Program:** Press the button on the WANGCL universal remote control that you wish to program. The red indicator light will remain steadily lit, indicating it is ready for programming.
4. **Transmit Signal:** Press the corresponding button on your original remote control. The WANGCL universal remote will receive the infrared signal and begin programming. The red indicator light will flash three times to confirm successful programming.
5. **Program Additional Buttons:** To program more buttons, press the next button on the WANGCL remote you wish to teach and repeat steps 3 and 4.
6. **Exit Learning Mode:** To exit the learning mode, press the learning mode button again, or the remote will automatically exit if no operation is performed within 15 seconds.

After programming, test the learned functions to ensure they operate correctly with your devices.

## 5. MAINTENANCE

---

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Replace batteries when the remote's performance degrades.
- **Storage:** Store the remote in a cool, dry place, away from direct sunlight and extreme temperatures.

## 6. TROUBLESHOOTING

---

### Remote is not responding:

- Check if the batteries are inserted correctly with the correct polarity.
- Replace the batteries with new ones.
- Ensure there are no obstructions between the remote and the device.
- Verify that the remote is pointed directly at the device's IR receiver.

### Learning function fails or programmed buttons do not work:

- Ensure the distance between the universal remote and the original remote is less than 1 cm during the learning process.
- Make sure both remotes have fresh batteries.
- Repeat the learning procedure carefully, ensuring the red indicator light flashes correctly at each step.
- Some original remotes may have weaker IR signals; try adjusting the angle or distance slightly during learning.
- Ensure the original remote is functioning correctly.

### Remote only controls one device:

- Remember to switch between TV, SAT, and DVD modes using the dedicated buttons at the top of the remote to control different devices.
- Ensure you programmed the correct functions under the desired mode.

## 7. SPECIFICATIONS

---

<b>Model Number</b>	HOA26727
<b>Brand</b>	WANGCL
<b>Material</b>	ABS
<b>Color</b>	Black
<b>Compatible Devices</b>	TV, Satellite (SAT), DVD, and other Infrared (IR) devices
<b>Connectivity Technology</b>	Infrared (IR)
<b>Power Source</b>	2 x AAA Batteries (not included)
<b>Dimensions (L x W x H)</b>	18.4 cm x 4.7 cm x 2.2 cm (7.24 x 1.85 x 0.87 inches)
<b>Item Weight</b>	10 Grams (0.35 ounces)
<b>Maximum Range</b>	1 Meter (3.3 feet)
<b>Special Feature</b>	IR, Universal, Learning Function

## 8. WARRANTY AND SUPPORT

---

Specific warranty information for the WANGCL HOA26727 Universal Learning Remote Control is not provided in this manual. Please refer to the retailer's return policy or contact the seller directly for details regarding warranty coverage and customer support.

For further assistance or inquiries, please contact WANGCL customer service through the platform where the product was purchased.

