

ACEMAX ACEMAX Smart Voice Replacement Remote Control

ACEMAX Smart Voice Replacement Remote Control User Manual

Model: ACEMAX Smart Voice Replacement Remote Control

1. INTRODUCTION

This manual provides comprehensive instructions for the ACEMAX Smart Voice Replacement Remote Control. This remote is designed to replace original remote controls for various streaming devices and smart TVs, offering smart voice control functionality and essential navigation. Please read this manual carefully to ensure proper setup and operation.

2. PACKAGE CONTENTS

- ACEMAX Smart Voice Replacement Remote Control
- (Batteries are typically not included and must be purchased separately. Refer to the battery compartment for required type, usually AAA.)

3. SETUP AND PAIRING

3.1 Battery Installation

Open the battery compartment cover on the back of the remote control. Insert two AAA batteries, ensuring correct polarity (+ and -). Close the battery compartment cover securely.

3.2 Pairing with Your Device

The ACEMAX Smart Voice Replacement Remote Control uses Bluetooth for connection. To pair the remote with your compatible device:

1. Ensure your device (e.g., MECOOL box, Chromecast with Google TV) is powered on and within range.
2. Simultaneously press and hold the **Home Button** and the **RETURN Button** on the remote control.
3. Continue holding until the LED indicator on the remote flashes quickly. This indicates the remote is in pairing mode.
4. Follow the on-screen instructions on your device to complete the Bluetooth pairing process. The remote should appear as an available device to connect.

If pairing fails, ensure the batteries are fresh and correctly inserted, and try the pairing process again. You may

also need to remove any previously paired remotes from your device's Bluetooth settings.

4. OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation and control of your compatible device.

4.1 Button Functions Overview



Image 1: Front view of the ACEMAX Smart Voice Replacement Remote Control, showing all buttons including power,

voice assistant, navigation, volume, and app shortcuts.

- **Power Button:** Turns the connected device on or off.
- **Voice Assistant Button:** Activates the voice control feature for commands and searches.
- **Navigation Pad (Directional Ring and OK Button):** Used to navigate menus and select items.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Returns to the main home screen of your device.
- **Volume Up/Down:** Adjusts the audio volume.
- **Mute Button:** Mutes or unmutes the audio.
- **Channel Up/Down (P+/P-):** Navigates through channels or pages.
- **App Shortcut Buttons (e.g., YouTube, Netflix, Prime Video, Google Play):** Direct access to specific applications.

4.2 Using Voice Control



Image 2: Diagram illustrating how to use the voice control feature to find movies, play music, and control volume.

To use the voice control feature, press and hold the **Voice Assistant Button**. Speak clearly into the remote's microphone. Release the button when you are finished speaking. You can use voice commands to:

- Search for movies, TV shows, or music.
- Open applications.
- Control playback (e.g., "Play," "Pause," "Fast Forward").
- Adjust settings (e.g., "Increase volume," "Mute").
- Ask questions (e.g., "What's the weather?").

Ensure your device has an active internet connection for voice commands to function correctly.

4.3 App Shortcut Button Functionality

The remote includes dedicated shortcut buttons for popular applications. **Important Note:** While basic navigation and voice control functions are widely compatible, the four dedicated app shortcut buttons (e.g., YouTube, Netflix, Prime Video, Google Play) may not function or may not be compatible with all listed devices. This is due to variations in device software and coding by different manufacturers. Their functionality is primarily guaranteed for devices using the Real Google TV Reference Design, but even then, specific app shortcuts might not work.

5. COMPATIBILITY

This ACEMAX Smart Voice Replacement Remote Control is compatible with a range of devices, including but not limited to:

- **MECOOL Devices:** KM2, KM2 Plus, KM2 Plus Deluxe, KM7 Plus, KD3, KD5, KT2, KM9 PRO MAX, MEgo 1 4K, MEgo 1, MEon 1, KP1 Projector, LEAP-S1, LEAP-S3.
- **Google Chromecast with TV:** Basic buttons work; 4 app shortcut buttons are not compatible.
- **Devices using Real Google TV Reference Design:** Basic buttons work; 4 app shortcut buttons may not work.
- **Other Compatible Devices:** Shield TV, MI BOX, Xiao MI Realme 4K TV Stick, NEBULA 4K Streaming Dongle, EKO 4K Streaming Dongle, Dynalink TV Box, Tivo Stream, Ematic TV Box, ONN TV Box, Homatics Box, and other Google Licensed Reference Design TV Boxes and Sticks. (Basic buttons work; 4 app shortcut buttons may not work).

Note: This remote is **not compatible** with Fire TV Sticks.

6. TROUBLESHOOTING

If you encounter issues with your ACEMAX Smart Voice Replacement Remote Control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Check if the batteries are correctly inserted and have sufficient charge. Replace batteries if necessary.
 - Ensure the remote is within effective range of your device.
 - Re-pair the remote with your device by following the instructions in Section 3.2.
- **Voice Control Not Working:**
 - Ensure the remote is successfully paired via Bluetooth.
 - Verify that your streaming device has an active internet connection.
 - Speak clearly and directly into the remote's microphone.
 - Confirm that the voice assistant feature is enabled on your device's settings.
- **App Shortcut Buttons Not Functioning:**
 - As noted in Section 4.3, these buttons may not be compatible with all devices due to varying software implementations. This is expected behavior for some compatible devices.
 - Ensure the specific app is installed and updated on your device.
- **Lag or Delayed Response:**
 - Check for any obstructions between the remote and your device.
 - Ensure no other Bluetooth devices are causing interference.
 - Try re-pairing the remote.

7. MAINTENANCE

To ensure the longevity and optimal performance of your remote control:

- Keep the remote clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners.
- Do not expose the remote to extreme temperatures, direct sunlight, or moisture.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.
- Avoid dropping the remote or subjecting it to strong impacts.

8. SPECIFICATIONS

| | |
|--|--|
| Brand | ACEMAX |
| Model | Smart Voice Replacement Remote Control |
| Item Weight | 1.06 ounces |
| Color | Black |
| Special Feature | Voice Search |
| Max Number of Supported Devices | 1 (one device at a time) |
| Connectivity | Bluetooth |

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. ACEMAX strives to provide reliable products and support.

Please retain your proof of purchase for any warranty claims.