

GiiKER JKJM001

GiiKER Super Blocks

INSTRUCTION MANUAL

Model: JKJM001

Welcome to the GiiKER Super Blocks instruction manual. This guide will help you understand how to set up, operate, and maintain your new brain-teasing puzzle game. Enjoy countless hours of challenging fun!

Product Overview

The GiiKER Super Blocks is an electronic pattern-matching puzzle game designed to develop critical thinking, reasoning, and planning skills. It features over 1000 built-in challenges across various modes, providing a screen-free and engaging experience for all ages.



Figure 1: GiiKER Super Blocks Device and Puzzle Pieces

Setup

1. Battery Installation

The GiiKER Super Blocks requires 2 AAA batteries (not included). To install:

1. Locate the battery compartment on the back of the device.
2. Open the battery cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely.

2. Components

- GiiKER Super Blocks Main Unit
- Colorful Puzzle Pieces (various shapes and colors)
- Storage Bag

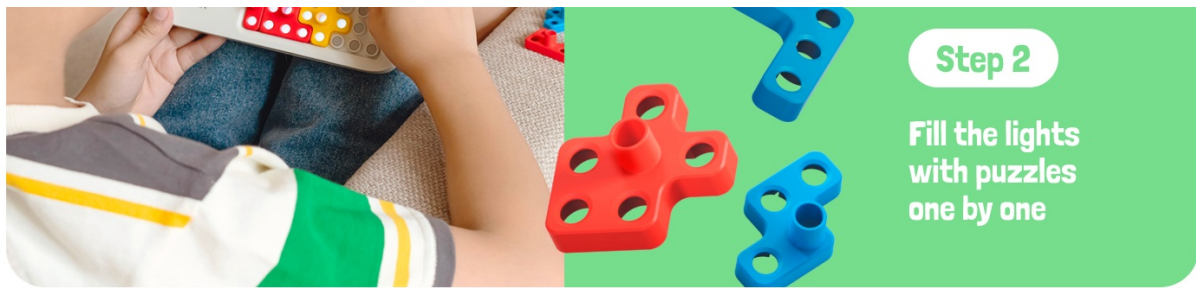


Figure 2: Puzzle Pieces and Main Unit

Operating Instructions

1. Powering On/Off

- To turn on: Long press the red power button.
- To turn off: Long press the red power button again. The device will automatically turn off after 10 minutes of inactivity.

2. Basic Gameplay

1. Upon powering on, the device will display a challenge pattern using illuminated lights on the grid.
2. Observe the indicator lights on the left side of the device. These lights determine which colored puzzle pieces you are allowed to use for the current challenge.
3. Select the appropriate colored puzzle pieces from your collection.
4. Place the selected puzzle pieces onto the grid to cover all the illuminated lights. Ensure the pieces are pressed down firmly to register correctly.
5. Once all illuminated lights are covered with the correct pieces, the device will indicate a successful completion and automatically advance to the next challenge.



Figure 3: Observing the Challenge Pattern

Game Modes & Challenges

The GiiKER Super Blocks offers over 1000 unique challenges, increasing in difficulty as you progress. The challenges are categorized by the number of colors required to solve them, starting with single-color puzzles and advancing to multi-color combinations.

- **Learning Mode:** Provides hints to guide you through challenges. Double short press the power button to enter/exit learning mode.
- **Time-Limits Challenge:** Test your speed and problem-solving under pressure. Short press the power button during a challenge to restart.
- **Challenge Selection:** Use the arrow buttons to navigate forward or backward through challenges. Long press the arrow buttons to fast forward/backward.
- **Saving Progress:** Long press both arrow buttons simultaneously to save the current challenge.



Figure 4: Engaging Brain Game with 1000+ Challenges

Care & Maintenance

- **Cleaning:** Wipe the device and puzzle pieces with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Battery Replacement:** Replace batteries when the device lights dim or functionality is reduced. Always use new AAA batteries and dispose of old batteries responsibly.
- **Storage:** Store the GiiKER Super Blocks and all its pieces in the provided storage bag when not in use to prevent loss and damage.



Figure 5: Portable Design for Easy Storage and Travel

Troubleshooting

- **Puzzle Zone Lights Not Clearing:** Ensure all puzzle pieces are removed from the grid.
- **Puzzle Zone Keeps Flashing:** This indicates a piece is placed incorrectly or in the wrong color. Remove the piece, replace it with the correct color, and ensure it is flat within the lighting area.
- **No Successful Hints When Challenge is Completed:** It is likely that a puzzle piece has not been placed properly. Remove all pieces, replace them, and try again.
- **No Flash When a Puzzle is Placed:** This suggests the puzzle piece is not properly placed. Try to replace the piece. If correctly placed, the lights underneath it will flash once to confirm.

Specifications

Brand	GiiKER
Model Number	JKJM001
Product Dimensions	7.2 x 4.49 x 1 inches
Item Weight	13.2 ounces
Recommended Age	6 years and up
Language	English

Warranty & Support

GiiKER products come with a standard manufacturer's warranty. For specific warranty details, support, or to

inquire about replacement pieces, please contact GiiKER customer service through their official website or the retailer where the product was purchased.