

[Manuals.plus](#) /

› [Samsung](#) /

› Samsung 7 kg Fully-Automatic Top Load Washing Machine User Manual

Samsung WA70BG4441YYTL

Samsung 7 kg Fully-Automatic Top Load Washing Machine User Manual

Model: WA70BG4441YYTL

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Samsung 7 kg Fully-Automatic Top Load Washing Machine. Please read this manual thoroughly before using the appliance and keep it for future reference. This washing machine features Eco Bubble Technology, a Digital Inverter Motor, and a Soft Closing Door, designed for optimal wash quality and ease of use.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the washing machine is properly grounded.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Unplug the machine before cleaning or performing any maintenance.
- Do not attempt to repair or replace any part of the appliance unless specifically recommended in this manual.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your washing machine.



Figure 1: Front view of the Samsung 7 kg Top Load Washing Machine, highlighting the rear control panel and soft closing door.


Washing Brand of the Year

20
Years

Motor
Warranty

2
Years

Comprehensive
Warranty

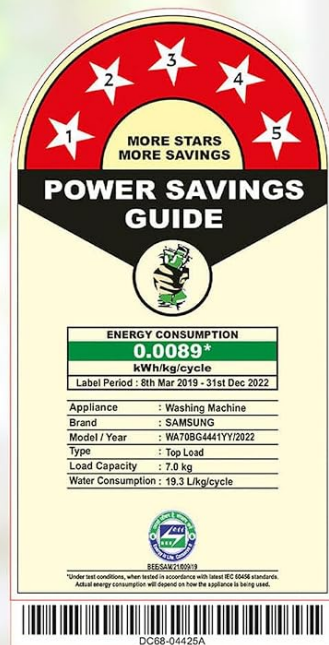

support.india@samsung.com



1800 40 7267864



1800-57-267864

mysmartprice
Presents

BOT
BEST OF TECH AWARDS

Figure 2: Side view with dimensions (54 cm W x 98.8 cm H x 56.8 cm D) and an energy savings guide. For detailed information on the power savings guide, refer to document [DC68-04425A](#).



Figure 3: Close-up of the control panel, showing various wash cycle options and digital display.



Figure 4: View of the detergent dispenser tray, designed for easy loading of detergent.



Figure 5: Interior view of the Diamond Drum, Dual Storm pulsator, and Magic Filter, designed for gentle yet effective washing and lint collection.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine.

Unpacking

- Remove all packaging materials, including the base packaging and any internal packing.
- Check for any damage during transit. Contact your dealer immediately if any damage is found.
- Ensure all included components are present: 1 Washing Machine, Hose Drain, Hose Inlet.

Location Requirements

- Place the machine on a firm, level surface to minimize vibration and noise.
- Avoid direct sunlight or heat sources.
- Ensure adequate ventilation around the machine.

Water Supply Connection

- Connect the inlet hose to a cold water tap with a standard 3/4-inch thread.
- Ensure connections are tight to prevent leaks.
- Water pressure should be between 0.01-0.78 Mpa (0.1-8.0 kg.f/cm²).

Drain Hose Installation

- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fastened to prevent

dislodging during operation.

- The drain hose should not be kinked or blocked.

Leveling the Machine

- Use a spirit level to check if the machine is perfectly level.
- Adjust the leveling feet at the bottom of the machine until it is stable and level.

Rear Control



Soft Closing Door



Rust-proof Body



Figure 6: Rear view of the washing machine, illustrating the water inlet and drain hose connections.

OPERATING INSTRUCTIONS

Follow these steps for effective and efficient washing.

Loading Laundry

- Sort laundry by fabric type, color, and degree of soiling.

- Open the soft closing door and load items loosely into the drum. Do not overload.
- The machine has a 7 kg capacity, suitable for 3-4 members.

Adding Detergent and Additives

- Pull out the detergent dispenser tray (Figure 4).
- Add the recommended amount of detergent to the main wash compartment.
- If using fabric softener, add it to the designated compartment.
- The Eco Bubble technology creates bubbles that penetrate fabric 2.5x faster for efficient cleaning.

Selecting a Wash Program

Your washing machine offers 9 wash programs:

- **Normal:** For daily laundry.
- **Quick Wash:** For lightly soiled items that need a fast wash (15 minutes).
- **Bedding:** For blankets, duvets, and other large items.
- **Delicates:** For sensitive fabrics requiring gentle care.
- **Eco Tub Clean:** For cleaning the washing machine drum.
- **Energy Saving:** Optimized for lower energy consumption.
- **Jeans:** Specific program for denim.
- **Rinse + Spin:** For rinsing and spinning items without a full wash cycle.

Use the control panel (Figure 3) to select your desired program. You can also adjust the water level (5 levels available) and use the Delay End option.

Starting the Wash

- Close the door securely.
- Press the Start/Pause button to begin the cycle.
- The Digital Inverter Motor ensures quiet operation (48 dB noise level) and energy efficiency.

MAINTENANCE AND CARE

Regular maintenance helps keep your washing machine in optimal condition.

Cleaning the Magic Filter

The Magic Filter collects lint and debris during washing. Clean it regularly for best performance.

1. Open the washing machine door.
2. Locate the Magic Filter inside the drum (Figure 5).
3. Remove the filter by pulling it out.
4. Open the filter and remove any accumulated lint or debris.
5. Rinse the filter under running water.
6. Reinsert the clean filter back into its slot until it clicks into place.

Eco Tub Clean Cycle

Run the "Eco Tub Clean" program periodically to clean the washing machine drum and prevent mold and mildew buildup.

Do not add laundry or detergent during this cycle.

Exterior Cleaning

- Wipe the exterior with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- The machine features a rust-proof body for durability.

TROUBLESHOOTING

Before contacting service, try these solutions for common issues.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed, power outage.	Check power connection, ensure door is fully closed, check household circuit breaker.
No water filling	Water tap off, inlet hose kinked, water pressure too low.	Open water tap, straighten hose, check water supply pressure.
Machine vibrates excessively	Machine not level, laundry unevenly distributed.	Adjust leveling feet, redistribute laundry evenly in the drum.
Water not draining	Drain hose kinked or blocked, drain pump filter clogged.	Check and clear drain hose, clean drain pump filter (refer to full manual for location).
Child Lock activated	Child Lock feature is on.	Refer to the control panel (Figure 3) for instructions on deactivating Child Lock, usually by pressing and holding specific buttons.

SPECIFICATIONS

Feature	Detail
Model Number	WA70BG4441YYTL
Capacity	7 kg
Type	Fully-Automatic Top Load
Motor Type	Digital Inverter Motor
Spin Speed	700 RPM
Energy Rating	5 Star
Wash Programs	9 (Quick Wash, Bedding, Delicates, Eco Tub Clean, Energy Saving, Jeans, Normal, Rinse + Spin, Delay End)

Feature	Detail
Drum Type	Diamond Drum
Pulsator	Dual Storm & Wing Pulsator
Noise Level	48 dB
Dimensions (LxWxH)	56.6 x 54 x 98.8 Centimeters
Item Weight	29.5 Kilograms
Included Components	1 Washing Machine, Hose Drain, Hose Inlet

WARRANTY AND SUPPORT

Your Samsung washing machine comes with comprehensive warranty coverage and dedicated support.

Warranty Information

- **2 Years** comprehensive warranty on the product.
- **20 Years** warranty on the Digital Inverter Motor.
- Warranty can be availed using the seller invoice.

Customer Support

For any queries, service requests, or technical assistance, please contact Samsung customer support:

- **Email Support:** support.india@samsung.com
- **Toll-Free Numbers:** 1800 40 7267864, 1800-57-267864
- You can also visit the official [Samsung Brand Page](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I use the Delay End function on the Samsung WA70BG4441YYTL washing machine?

The Delay End function on your Samsung WA70BG4441YYTL washing machine allows you to set the machine to finish a wash cycle at a specific time in the future. This is useful for ensuring your...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0B8NHX62W>

More documents and user manuals: <https://manuals.plus/>