

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Tamagotchi](#) /

› Tamagotchi Nano x SPY x Family - Spy Green Instruction Manual

Tamagotchi 88981

Tamagotchi Nano x SPY x Family - Spy Green Instruction Manual

Model: 88981

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Tamagotchi Nano x SPY x Family - Spy Green virtual pet. Please read these instructions carefully to ensure proper use and enjoyment of your device.

SAFETY INFORMATION

WARNING: Contains button or coin cell battery. Hazardous if swallowed. See instructions.

This product is recommended for ages 8 and up. Adult supervision is advised for younger users, especially during battery replacement.

WHAT'S IN THE BOX

- 1x Tamagotchi Nano x SPY x Family - Spy Green device
- 2x LR44 batteries (pre-installed)

SETUP

1. Initial Activation

Your Tamagotchi Nano comes with pre-installed batteries. To activate the device, locate the small plastic tab protruding from the battery compartment on the back of the unit. Gently pull this tab out to establish battery contact. The screen will then display the initial setup sequence.



Figure 1: Front view of the Tamagotchi Nano device.

2. Setting the Time

After activation, the device will prompt you to set the time. Use the control buttons (typically the left and right buttons to adjust values, and the middle button to confirm) to set the current hour and minute. Accurate time setting is crucial for the virtual pet's daily schedule.

Video 1: This official product overview video demonstrates the initial setup, including pulling the battery tab and setting the time, as well as basic interaction with the virtual pet.

OPERATING YOUR TAMAGOTCHI NANO

Your Tamagotchi Nano features three primary buttons for interaction:

- **Left Button:** Navigates through menu options or decreases values.
- **Middle Button:** Selects an option, confirms an action, or displays the current time.

- **Right Button:** Navigates through menu options or increases values.

Caring for Anya

Your primary goal is to care for Anya, the virtual pet. Her needs will be indicated by icons or animations on the screen. Neglecting her needs may cause her to become upset or run away.

- **Feeding:** When Anya is hungry, navigate to the food menu. You can feed her stew or her favorite food, peanuts.
- **Playing:** Engage Anya in mini-games to keep her happy and entertained.
- **Attention:** Respond promptly to her calls for attention.
- **Character Evolution:** Depending on how you care for Anya, she may evolve into different outfit styles and facial expressions. There are up to 14 different costumes to discover.



Figure 2: Interacting with the Tamagotchi Nano using the control buttons.

MINI-GAMES

The Tamagotchi Nano x SPY x Family includes three mini-games to play with Anya:

- **Dodgeball:** A game to test your reflexes.
- **Word Matching Game:** A cognitive challenge.

- *(Third game details not specified in product data)*

Playing these games regularly helps keep Anya happy and contributes to her development.

CHARACTER EVOLUTION

Anya's appearance and expressions will change based on your care. Consistent and attentive care can lead to her adopting various outfits and expressions. Special characters, such as Henry Henderson, may also appear during gameplay.

MAINTENANCE

Battery Replacement

The Tamagotchi Nano uses 2 LR44 batteries. When the battery level is low, the device will indicate this on the screen. To replace the batteries:

1. Locate the battery compartment on the back of the device.
2. Use a small screwdriver to open the compartment.
3. Carefully remove the old batteries and insert new LR44 batteries, ensuring correct polarity.
4. Close the compartment and secure it with the screw.

The device is designed to retain your pet's progress even during battery changes, so you won't lose your progress.



Figure 3: Back of the Tamagotchi Nano, indicating the battery compartment.

Cleaning

Wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials that could damage the screen or casing.

TROUBLESHOOTING

- **Device not turning on:** Ensure the battery tab has been fully removed and that the LR44 batteries are correctly installed and not depleted.
- **Pet is unhappy/runs away:** This indicates neglect. Ensure you are feeding Anya, playing with her, and responding to her needs regularly.
- **Resetting the device:** If you wish to restart your game, locate the small reset button on the back of the device (often recessed). Use a thin, pointed object like a paperclip to press this button. This will reset the game progress.

SPECIFICATIONS

Feature	Detail
Model Number	88981
Brand	Tamagotchi
Product Dimensions	0.98"L x 1.18"W x 1.57"H
Item Weight	1.13 ounces (0.03 Kilograms)
Power Source	Battery Powered (2x LR44 batteries included)
Display Type	LCD
Material	PC, Plastic, SI
Recommended Age	8 years and up

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Bandai Namco Toys & Collectibles America