

[Manuals.plus](#) /

› [Kärcher](#) /

› Kärcher FC 7 Electric Mop & Sanitize Hard Floor Cleaner User Manual

Kärcher FC 7

Kärcher FC 7 Cordless Hard Floor Cleaner User Manual

Model: FC 7 (1.055-733.0)

1. INTRODUCTION

The Kärcher FC 7 Cordless Hard Floor Cleaner is an advanced cleaning device designed to efficiently clean all types of hard floors, including laminate, wood, tile, LVT, vinyl, and stone. It eliminates the need for pre-vacuuming by collecting both dry and wet everyday dirt simultaneously. Its innovative four-roller technology ensures fast, effective cleaning with high dirt removal, leaving floors up to 20% cleaner than conventional mopping methods.



Figure 1: Kärcher FC 7 Cordless Hard Floor Cleaner

2. SAFETY INFORMATION

Before operating the Kärcher FC 7, please read all safety instructions carefully to prevent injury and damage. A comprehensive Safety Information PDF is available for download: [Safety Information \(PDF\)](#).

- Always ensure the device is unplugged before performing any maintenance or cleaning.
- Do not immerse the device in water.
- Use only Kärcher approved cleaning solutions.

- Keep hands and loose clothing away from moving parts during operation.
- Store the device in a dry, safe place away from children.

3. WHAT'S INCLUDED

Your Kärcher FC 7 package includes the following components:

- FC 7 Cordless Hard Floor Cleaner Unit
- 4 Microfiber Multi-Surface Rollers
- Floor Cleaning Solution (16.9 Fluid Ounces)
- Charging Cable
- Clean & Park Charging Station
- Cleaning Brush



Figure 2: Included Components of the Kärcher FC 7

4. SETUP

4.1 Assembly

The Kärcher FC 7 comes largely pre-assembled. Simply attach the handle to the main body until it clicks securely into place. Ensure all four microfiber rollers are properly installed on the cleaning head.

4.2 Charging the Battery

Before first use, fully charge the device. Place the FC 7 on its Clean & Park Charging Station and connect the charging cable to a power outlet. The battery indicator lights on the handle will show the charging status. A full charge provides approximately 45 minutes of cleaning time.

4.3 Filling the Water Tanks

The FC 7 features a dual-tank system. The fresh water tank is located on the upper part of the handle. Open the tank, fill it with clean water, and add the recommended amount of Kärcher floor cleaning solution. The dirty water is collected in a separate tray located in the base unit.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Selecting Mode

To power on the device, press the power button on the handle. The FC 7 offers two cleaning modes, which can be adjusted to match the floor type and level of dirt. There is also a boost function for stubborn dirt. Refer to the display on the handle for current mode selection.

Video 1: Official Kärcher FC 7 Cordless Floor Cleaner Campaign. This video demonstrates the FC 7's ability to clean various types of dry and wet dirt on hard floors, highlighting its efficiency and ease of use.

5.2 Cleaning Process

The FC 7's counter-rotating rollers propel the device across the floor, making cleaning effortless. Simply guide the cleaner over the desired area. The device simultaneously applies fresh water and detergent, scrubs the floor, and suctions away dirty water and debris into the waste water tray. Floors dry within approximately 2 minutes due to the minimal amount of cleaning solution used.



Figure 3: The flexible hinge allows cleaning under furniture.



Figure 4: Efficient cleaning on various hard floor surfaces.

5.3 Edge-to-Edge Cleaning

The design of the FC 7 allows for effective cleaning right up to the edges of walls, stairs, corners, and baseboards, ensuring no spot is missed.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your Kärcher FC 7.

6.1 Emptying the Dirty Water Tray

When the dirty water tray is full, or after each cleaning session, remove it from the base unit. The tray is designed for easy removal and emptying without direct contact with the dirt. Rinse the tray thoroughly under running water.



Figure 5: Easy removal of the dirty water tray for emptying.

6.2 Cleaning the Rollers

The microfiber rollers can be easily removed for cleaning. They can be rinsed under running water or placed in a washing machine for a more thorough clean. Ensure rollers are dry before reattaching.

6.3 Self-Cleaning Function

The FC 7 is equipped with an integrated self-cleaning function. Place the device on its Clean & Park Charging Station and activate the self-clean cycle. This helps to clean the rollers and internal components, reducing manual effort.



Figure 6: The FC 7 on its Clean & Park Station.

7. TROUBLESHOOTING

If you encounter issues with your Kärcher FC 7, refer to the following common solutions:

- **Device not turning on/charging:** Ensure the charging cable is securely connected to both the station and a working power outlet. Check if the battery is fully depleted; it may take a few minutes for the indicator lights to appear.
- **Poor cleaning performance:** Check if the fresh water tank is filled and the dirty water tray is not full. Ensure the rollers are clean and properly installed.

- **Excessive streaking:** This may indicate too much cleaning solution or dirty rollers. Reduce detergent amount or clean the rollers.
- **Unusual noises:** Check for any obstructions in the roller area or debris caught in the suction channels.

For persistent issues, consult the full user manual (linked in Section 2) or contact Kärcher customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Kärcher
Model Name	FC 7
Item Model Number	1.055-733.0
Power Source	Battery Powered (Lithium-Ion)
Run Time	Up to 45 minutes
Dry Time	Within 2 minutes
Surface Recommendation	Hard Floors (Laminate, Wood, Tile, LVT, Vinyl, Stone)
Item Weight	9.48 pounds
Product Dimensions	12.2 x 9.1 x 47.7 inches
Water Tank Volume	14 oz (Clean Water)
Cleaning Path Width	11.9 inches



Figure 7: Key specifications and dimensions of the FC 7.

9. WARRANTY AND SUPPORT

The Kärcher FC 7 Cordless Hard Floor Cleaner comes with a **3 Year Limited Warranty**. For warranty claims, technical support, or replacement parts, please contact Kärcher customer service. Refer to the official Kärcher website or the Safety Information PDF for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question