

[Manuals.plus](#) /

› [Kärcher](#) /

› Kärcher T 7 Plus T-Racer Surface Cleaner Instruction Manual

Kärcher 2.644-082.0

Kärcher T 7 Plus T-Racer Surface Cleaner

Instruction Manual

Model: 2.644-082.0 | Brand: Kärcher

1. PRODUCT OVERVIEW

The Kärcher T 7 Plus T-Racer is an advanced surface cleaner attachment designed for Kärcher K 4 through K 5 series electric pressure washers. It provides efficient and splash-free cleaning for various outdoor surfaces.

Key features include:

- **Efficient Cleaning:** Features a twin-jet rotating arm and an 11-inch cleaning width, significantly reducing cleaning time compared to standard spray lances.
- **Versatile Nozzles:** Equipped with both a power nozzle for stubborn dirt and an integrated rinsing nozzle to wash away loosened debris, ensuring a thorough clean.
- **Adjustable Nozzle Height:** Allows for cleaning of both hard surfaces (like stone and concrete) and more delicate surfaces (like wood) by adjusting the distance between the nozzle and the cleaning surface.
- **Splash-Free Operation:** The shroud and splash-free skirt minimize overspray, keeping the user dry during operation.
- **Multi-Surface Application:** Ideal for large flat areas such as driveways, patios, decks, and sidewalks. Can also be used on vertical surfaces like garage doors by removing extension wands and utilizing the integrated handle.
- **Extension Wands:** Includes two 17.5-inch extension wands for extended reach and comfortable use.

2. COMPONENTS

The Kärcher T 7 Plus T-Racer surface cleaner comes with the following main components:

- T 7 Plus T-Racer Surface Cleaner Unit
- Two (2) 17.5-inch Extension Wands
- Integrated Power Nozzle
- Integrated Rinsing Nozzle



Figure 2.1: Kärcher T 7 Plus T-Racer Surface Cleaner unit with included extension wands.

3. SETUP AND ASSEMBLY

Follow these steps to assemble and connect your T 7 Plus T-Racer surface cleaner to your Kärcher pressure washer:

1. **Ensure Compatibility:** Verify that your pressure washer is a Kärcher K 4 or K 5 series model. This attachment is designed specifically for these series.
2. **Connect Extension Wands:** Attach one or both 17.5-inch extension wands to the handle of your pressure washer. Ensure they click securely into place.
3. **Attach Surface Cleaner:** Connect the T 7 Plus T-Racer unit to the end of the extension wand(s). Again, ensure a secure, click-in connection.
4. **Connect Water Supply:** Connect your pressure washer to a suitable water supply and power source as per your pressure washer's instructions.
5. **Check Connections:** Before starting, double-check all connections for tightness to prevent leaks and ensure optimal performance.





Figure 3.1: The T 7 Plus T-Racer assembled with an extension wand, ready for use.

4. OPERATION

Operating the Kärcher T 7 Plus T-Racer is straightforward. Follow these guidelines for effective cleaning:

1. **Start Pressure Washer:** Turn on your Kärcher pressure washer according to its operating instructions.
2. **Adjust Nozzle Height:** The T 7 Plus T-Racer features an adjustable knob on top to set the distance between the nozzles and the cleaning surface. Rotate the knob to select the appropriate setting for your surface type (e.g., closer for hard surfaces like concrete, further for delicate surfaces like wood).



Figure 4.1: Adjusting the nozzle height for different surface types.

3. **Begin Cleaning:** Place the T 7 Plus T-Racer flat on the surface to be cleaned. Press the trigger on your pressure washer handle to start the water flow. Move the unit slowly and steadily over the surface in overlapping passes for an even clean.



Figure 4.2: The T 7 Plus T-Racer in action, effectively cleaning a paved surface.

4. **Cleaning Vertical Surfaces:** For vertical surfaces like garage doors, detach the extension wands and hold the T 7 Plus T-Racer directly by the practical handle on its shroud. This allows for easy maneuverability.



Figure 4.3: The integrated handle on the shroud for cleaning vertical surfaces.

5. **Rinsing Function:** The integrated rinsing nozzle helps to wash away loosened dirt. Ensure the surface is thoroughly rinsed after cleaning.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your T 7 Plus T-Racer surface cleaner:

- **Cleaning the Unit:** After each use, rinse the surface cleaner thoroughly with clean water to remove any dirt or debris.

- **Nozzle Inspection:** Periodically check the nozzles for any blockages or damage. Clear any obstructions using a small pin or the nozzle cleaning tool provided with your pressure washer.
- **Brush Skirt Inspection:** Inspect the brush skirt around the base of the unit for wear or damage. Replace if necessary to maintain splash-free operation.
- **Storage:** Store the T 7 Plus T-Racer in a dry, frost-free environment. Disconnect it from the pressure washer and drain any remaining water before storage.



Figure 5.1: The underside of the T 7 Plus T-Racer, showing the rotating arm and brush skirt for maintenance inspection.

6. TROUBLESHOOTING

If you encounter issues with your T 7 Plus T-Racer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Low or no pressure from nozzles	Clogged nozzles or rotating arm.	Clean the nozzles and rotating arm. Refer to your pressure washer manual for nozzle cleaning tools.
Uneven cleaning results	Incorrect nozzle height setting or inconsistent movement.	Adjust the nozzle height according to the surface type. Ensure slow, overlapping passes during operation.
Excessive water splash-back	Damaged or worn brush skirt.	Inspect the brush skirt and replace if damaged.
Unit not moving smoothly	Debris under the shroud or damaged hovercraft mechanism.	Clean the underside of the unit. If the issue persists, contact Kärcher customer support.

For further assistance, please refer to your Kärcher pressure washer's main instruction manual or contact Kärcher customer support.

7. SPECIFICATIONS

Brand	Kärcher
Model Number	2.644-082.0
Maximum Pressure	2600 PSI (Pound per Square Inch)
Item Weight	4.2 Pounds
Product Dimensions (L x W x H)	30.3" x 11.3" x 39.2"
Compatibility	Kärcher K 4 - K 5 series electric pressure washers

8. WARRANTY AND SUPPORT

Kärcher products are manufactured to the highest quality standards and come with a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your product or visit the official Kärcher website. For technical support, spare parts, or service inquiries, please contact Kärcher customer service through their official website or the contact information provided in your product packaging. Always provide your model number (2.644-082.0) when seeking support.

[Visit Kärcher Support Website](#)

© 2025 Kärcher. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B8PCTZ3R>

More documents and user manuals: <https://manuals.plus/>