

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [KODAK](#) /

> [KODAK PIXPRO Friendly Zoom FZ45-BK Digital Camera Instruction Manual](#)

## KODAK FZ45-BK

# KODAK PIXPRO Friendly Zoom FZ45-BK Digital Camera Instruction Manual

Model: FZ45-BK | Brand: KODAK

## 1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your KODAK PIXPRO Friendly Zoom FZ45-BK Digital Camera. Please read it thoroughly before using your camera and keep it for future reference.



Figure 1: Front view of the KODAK PIXPRO FZ45-BK Digital Camera.

## 2. SETUP

### 2.1. Unpacking and Contents

Carefully unpack your camera and check that all items are present. The standard package includes:

- FZ45 Camera Body
- AA Batteries (2)
- USB Cable
- Wrist Strap
- Quick Start Guide



Figure 2: Included items in the camera package.

### 2.2. Battery Installation

The KODAK PIXPRO FZ45-BK uses two AA batteries. Open the battery compartment cover located on the bottom of the camera. Insert the batteries according to the polarity indicators (+/-) inside the compartment. Close the cover securely.

**Note:** For optimal performance and longevity, it is recommended to use high-quality rechargeable AA batteries.

### 2.3. Memory Card Installation

This camera supports SD, SDHC, and SDXC memory cards up to 512GB, with a minimum requirement of Class 10 for optimal performance. The memory card slot is located within the battery compartment. Insert the memory card with the gold contacts facing the front of the camera until it clicks into place. To remove, push the card in slightly until it springs out.

**Important:** Some users have reported issues with SDXC cards. If you experience problems saving photos, ensure your SDXC card is formatted correctly or consider using an SDHC card.



Figure 3: Side view of the camera, highlighting the USB port and the battery/SD card compartment.

### 3. OPERATING THE CAMERA

### 3.1. Powering On/Off

Press the power button located on the top of the camera to turn it on or off. The lens will extend when powered on.



Figure 4: Top view of the camera, highlighting the power and shutter buttons.

### 3.2. Taking Photos

To take a photo, frame your subject using the 2.7-inch LCD screen. Press the shutter button halfway down to focus, then press it all the way down to capture the image.



Figure 5: Rear view of the camera, displaying the 2.7-inch LCD screen.

### 3.3. Optical Zoom

The camera features a 4x optical zoom. Use the zoom lever (W/T) located near the shutter button to zoom in (T) or out (W) on your subject. Optical zoom maintains image quality, unlike digital zoom.



Figure 6: Angled view of the camera with the lens extended for optical zoom.

### 3.4. Video Recording

To record 1080p Full HD video, press the dedicated video record button. Press it again to stop recording. The camera is suitable for capturing everyday moments and vlogging.



Figure 7: The FZ45 can record 1080p Full HD video, allowing you to capture action in high definition.

### 3.5. Scene Modes and Settings

The camera offers various scene modes to optimize settings for different shooting conditions. Use the 'MODE' button to cycle through options like Auto, Program AE, Manual, Movie, Scene (SCN), Panorama, and Face

Beautifier. Adjust settings like flash mode (Auto, Red-Eye Reduction, Fill Flash, Force Off, Slow Synchro) using the directional pad.



Figure 8: Overview of camera features including 2.7-inch LCD, 4X Optical Zoom, 27mm Wide Angle Lens, and Scene Modes.

### 3.6. Image Transfer

To transfer photos and videos, connect the camera to a computer using the provided USB cable. Alternatively, remove the SD card and use an SD card reader to transfer files to your computer or smartphone.

## 4. MAINTENANCE

### 4.1. Cleaning

Use a soft, lint-free cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid using abrasive materials or harsh chemicals.

### 4.2. Battery Care

Remove batteries if the camera will not be used for an extended period. Store batteries in a cool, dry place. Dispose of depleted batteries responsibly according to local regulations.

### 4.3. Storage

Store the camera in a dry, dust-free environment, away from extreme temperatures and direct sunlight. Use the wrist strap to prevent accidental drops during use.

## 5. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

- **Camera not powering on:** Check battery installation and ensure batteries are charged or replaced.
- **Photos appear blurry:** Ensure proper focus by pressing the shutter button halfway. For close-up shots, consider taking a broader shot and cropping later to maintain clarity.
- **Memory card error / Photos not saving:** Verify the memory card is inserted correctly. Ensure the card is compatible (Class 10 or higher, SD/SDHC/SDXC). If using SDXC, try reformatting the card or using an SDHC card if issues persist.
- **Battery drains quickly:** Use high-quality rechargeable batteries. Reduce flash usage and screen brightness if possible.

For more detailed troubleshooting, please consult the full User Manual (PDF) available online or via the provided link in your product documentation.

## 6. SPECIFICATIONS

Feature	Detail
Brand	KODAK
Model Name	Kodak PIXPRO FZ45 Digital Camera
Photo Sensor Resolution	16 MP
Optical Zoom	4x
Wide Angle Lens	27mm
Video Resolution	1080p Full HD
Screen Size	2.7" LCD
Battery Type	2 AAA batteries (included)
Image Stabilization	Digital
Connectivity Technology	USB
Supported File Format	JPEG

## 7. WARRANTY AND SUPPORT

### 7.1. Warranty Information

Your KODAK PIXPRO FZ45-BK Digital Camera comes with a Limited 1-Year Warranty. Please retain your proof of purchase for warranty claims.

### 7.2. Customer Support

For further assistance, technical support, or warranty service, please refer to the contact information provided in the full User Manual (PDF) or visit the official KODAK PIXPRO website.

You can also find the full User Manual (PDF) [here](#).

