

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER Kitchen Wand Cordless Immersion Blender (Model BCKM1016KS06) Instruction Manual

BLACK+DECKER BCKM1016KS00

BLACK+DECKER Kitchen Wand Cordless Immersion Blender (Model BCKM1016KS06) Instruction Manual

6-in-1 Multi-Tool Set with Charging Dock

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your BLACK+DECKER Kitchen Wand. This versatile cordless multi-tool system is designed to assist with various kitchen tasks, offering convenience and functionality. Please read these instructions thoroughly before first use and retain them for future reference.

IMPORTANT SAFETY INFORMATION

- Always ensure the appliance is switched off and unplugged from the charging dock before assembling, disassembling, or cleaning.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Do not immerse the main motor unit in water or other liquids. Only the detachable shafts and accessories are washable.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only manufacturer-recommended attachments and accessories.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.

PRODUCT OVERVIEW AND COMPONENTS

Your BLACK+DECKER Kitchen Wand is a versatile 6-in-1 multi-tool designed for various kitchen tasks. It includes a cordless main unit and several interchangeable attachments.



Figure 1: Complete BLACK+DECKER Kitchen Wand set, including the main unit, various attachments, measuring cup, charging dock, and storage cases.



Figure 2: An array of the BLACK+DECKER Kitchen Wand attachments, showcasing the immersion blender, whisk, milk frother, can opener, 2-in-1 salt and pepper grinder, and the main power unit.

Included Components:

- Red Wand Base (Main Unit)
- Immersion Blender Attachment
- Whisk Attachment
- Milk Frother Attachment
- Wine Opener Attachment
- Can Opener Attachment
- 2-in-1 Salt and Pepper Grinder Attachment
- Mixing Cup with Lid
- Charging Dock + Cord
- (2) Storage Cases with Tray Inserts

SETUP

1. Charging the Main Unit

Before initial use, fully charge the Kitchen Wand main unit. The unit is cordless and operates on a rechargeable battery.

1. Connect the charging cord to the charging dock.
2. Plug the charging cord into a standard electrical outlet.
3. Place the main wand base into the charging dock. Ensure it is seated correctly.
4. The battery state-of-charge indicator lights on the wand base will illuminate to show charging progress. A full charge provides up to 30 minutes of continuous runtime.



Figure 3: The charging dock and power adapter for the Kitchen Wand.

Your browser does not support the video tag.

Video 1: This video demonstrates the charging process and how to attach the immersion blender to the main unit. It also shows the unit in use for blending.

2. Attaching and Detaching Accessories

To attach an accessory, align the accessory with the main unit and twist until it locks securely into place. To detach, press the release buttons (if applicable) and twist to unlock.

OPERATING INSTRUCTIONS

General Operation

- **Power On/Off:** Press and hold the power button on the main unit to turn it on or off.
- **Adjusting Speed:** The variable speed dial allows for easy transition from low to high speeds, providing precise control for different tasks.

Using Specific Attachments

Immersion Blender Attachment

Ideal for blending soups, sauces, smoothies, and baby food directly in pots, bowls, or the included mixing cup.

1. Attach the immersion blender shaft to the main unit.
2. Immerse the blade guard into the ingredients before turning on the unit to prevent splashing.

3. Press the power button and adjust the speed as needed. Move the blender up and down gently for even blending.



Figure 4: The main unit with the immersion blender attachment.



Drills & Drivers

Figure 5: Demonstrates the immersion blender in use for blending soup directly in a pot.

Whisk Attachment

Perfect for whipping cream, beating eggs, or mixing batters.

1. Attach the whisk accessory to the main unit.
2. Insert the whisk into the ingredients.
3. Turn on the unit and select the desired speed. Move the whisk gently through the mixture.



Figure 6: The whisk attachment for the Kitchen Wand.



Outdoor Power Tools

Figure 7: The whisk attachment in action, mixing ingredients in a bowl.

Milk Frother Attachment

Create frothy milk for coffee, lattes, and cappuccinos.

1. Attach the milk frother to the main unit.

2. Immerse the frother into milk (warm milk works best).
3. Turn on the unit and move it gently to create foam.



Hand Vacuums

Figure 8: The milk frother attachment being used to froth milk in a measuring cup.

Can Opener Attachment

Effortlessly open cans with the electric can opener attachment.

1. Attach the can opener to the main unit.
2. Position the can opener on the rim of the can.
3. Press the power button to activate. The can opener will automatically cut around the lid.



Figure 9: The can opener attachment for the Kitchen Wand.



Stick Vacuums

Figure 10: The can opener attachment in use on a can.

2-in-1 Salt and Pepper Grinder Attachment

Conveniently grind fresh salt and pepper with a single attachment.

1. Attach the grinder to the main unit.
2. Fill the respective compartments with salt crystals and peppercorns.
3. Press the power button to activate grinding.



Figure 11: The 2-in-1 salt and pepper grinder attachment.

Why choose us?

- › Over a century of innovation and expertise in home and garden tools
- › Trusted by millions to make everyday tasks easier
- › Comprehensive product guarantees for peace of mind.
- › Thousands of happy customers

available at
amazon

Figure 12: The 2-in-1 salt and pepper grinder in use over a salad.

Wine Opener Attachment

Open wine bottles with ease using the dedicated wine opener attachment.

1. Attach the wine opener to the main unit.

2. Place the wine opener over the wine bottle, ensuring it is centered.
3. Press the power button to activate. The corkscrew will automatically remove the cork.

Helping you enjoy every part of your home, inside and out.

From a modest machine shop in Baltimore to the surface of the moon, we've proudly provided innovative solutions for over a century.

Our goal has always been simple: to make daily tasks easier, so you can spend more time enjoying your space, inside and out.

Easy by Design™

Figure 13: The wine opener attachment in use on a wine bottle.

Mixing Cup with Lid

The included mixing cup is ideal for preparing smoothies, sauces, or frothing milk. It features measurement markings for convenience and a lid for storage.



Figure 14: The mixing cup with lid, featuring measurement markings.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Kitchen Wand.

- **Main Unit:** Wipe the main wand base with a damp cloth. Do not immerse it in water or any other liquid.
- **Attachments:** The immersion blender shaft, whisk, milk frother, and mixing cup are dishwasher safe. For the can opener and grinder, detach from the main unit and clean according to their specific instructions (usually wiping with a damp cloth and ensuring no food particles remain).
- **Storage:** Use the provided storage cases with insert trays to keep all components organized and protected when not in use.



Figure 15: One of the storage cases with tray inserts for organizing attachments.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Battery is depleted.	Charge the unit fully using the charging dock.
Attachment is not working.	Attachment not securely connected.	Ensure the attachment is twisted and locked into place on the main unit.
Poor blending/mixing performance.	Incorrect speed setting or overloaded.	Adjust to a higher speed or reduce the amount of ingredients. Ensure ingredients are cut into appropriate sizes.
Unit stops during operation.	Overheating or low battery.	Allow the unit to cool down or recharge the battery.

SPECIFICATIONS

- **Brand:** BLACK+DECKER
- **Model Number:** BCKM1016KS06
- **Color:** Red
- **Power Source:** Battery Powered (Cordless)
- **Voltage:** 8V
- **Number of Speeds:** 5 (Variable)
- **Capacity (Mixing Cup):** 3 Liters
- **Blade Material:** Stainless Steel
- **Material Type Free:** BPA Free
- **Product Dimensions:** 19 x 11.5 x 7.4 inches
- **Item Weight:** 7.8 pounds
- **UPC:** 885911834599

WARRANTY AND SUPPORT

This BLACK+DECKER Kitchen Wand comes with a Limited Warranty. For detailed warranty information, product support, or service inquiries, please refer to the warranty card included in your product packaging or visit the official BLACK+DECKER website.