

[manuals.plus](#) /› [BLACK+DECKER](#) /› [BLACK+DECKER 5-Speed Versatile Hand Mixer \(Model: B0B8QDB15H\) Instruction Manual](#)**BLACK+DECKER B0B8QDB15H**

## BLACK+DECKER 5-Speed Versatile Hand Mixer Instruction Manual

Model: B0B8QDB15H

### PRODUCT OVERVIEW

The BLACK+DECKER 5-Speed Hand Mixer is designed for a variety of mixing tasks, offering convenience and efficiency in the kitchen. Its powerful motor and versatile attachments make it suitable for stirring, beating, whisking, whipping, and even working with dough. The thoughtful design includes a storage case for all accessories, ensuring a clutter-free kitchen.

### Key Features

- **Attachments:** Tackle a number of kitchen tasks with two professional-style wire beaters and two whisks. All are dishwasher-safe.
- **Less Mess!:** The mixer starts out 20% slower\* to prevent splatter and loss of ingredients.  
\*compared to BLACK+DECKER MX300.
- **250-Watt Motor:** This powerful motor has 5 speeds so you can start slow and finish fast.
- **5 Speeds + Power Boost:** A range of speed options for every mixing task, plus a power boost option for the toughest mixing tasks.
- **Comfort Grip:** The lightweight mixer features an ergonomic grip for comfortable operation.



## 250W 5-SPEED MOTORT

The BLACK+DECKER 5-Speed Hand Mixer, showcasing its sleek design and included attachments.

### SETUP

Before first use, ensure all attachments are clean. Wash beaters and whisks in warm, soapy water or in the dishwasher. Dry thoroughly.

- 1. Insert Beaters:** Select the desired beaters (wire beaters or whisks). Insert the stems of the beaters into the openings on the underside of the mixer. Push firmly until they click into place. Ensure the beater with the collar (if applicable) is inserted into the larger opening.
- 2. Connect Power:** Plug the mixer into a standard electrical outlet.



The underside of the hand mixer showing the insertion points for the beaters, ensuring proper setup before use.

## OPERATING INSTRUCTIONS

The BLACK+DECKER hand mixer features 5 speeds and a Turbo Boost button for optimal mixing control.

- Select Speed:** Use the speed selector switch to choose your desired mixing speed from 1 to 5. The mixer starts at a slower speed to minimize splatter.
- Turbo Boost:** For tougher mixing tasks or to quickly incorporate ingredients, press and hold the Turbo Boost button. Release the button to return to the selected speed.
- Mixing:** Immerse the beaters into the ingredients before turning the mixer on. Move the mixer slowly through the mixture to ensure even blending.
- Turn Off:** Once mixing is complete, move the speed selector switch to the '0' (Off) position.



## 250W 5-SPEED MOTORT

A detailed view of the mixer's speed dial (1-5) and the Turbo Boost button for enhanced power.



## TURBO BOOST FOR THICK INGREDIENTS

The Turbo Boost feature is ideal for mixing thick ingredients, as demonstrated by the smooth frosting on these cupcakes.

### ATTACHMENTS AND STORAGE

The hand mixer comes with a variety of attachments and a convenient storage case to keep everything organized.

- **Wire Beaters:** Ideal for general mixing, beating, and creaming.
- **Whisks:** Perfect for whipping cream, egg whites, and light batters.
- **Storage Case:** All attachments and the power cord fit neatly into the included storage case, which snaps onto the bottom of the mixer for compact storage.



## INCLUDES STORAGE CASE, BASE, WHISK, DOUGH HOOKS, AND WIRE BEATERS

The hand mixer displayed with its comprehensive set of attachments and the dedicated storage case.



## XL STORAGE CASE HOLDS ALL INCLUDED ACCESSORIES

The hand mixer securely attached to its XL storage case, designed to hold all included accessories for easy organization.



## AUTO EJECT BUTTON AND DISHWASHER SAFE PARTS FOR EASY CLEAN UP

The compact design of the hand mixer, with dimensions of 8.3 inches high and 6.3 inches wide, allows for convenient space-saving storage.

### MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your hand mixer.

- Eject Attachments:** After use, unplug the mixer. Press the Easy Eject button to release the beaters or whisks.
- Clean Attachments:** All removable attachments (beaters and whisks) are dishwasher-safe for easy cleaning.
- Clean Mixer Body:** Wipe the exterior of the mixer body with a damp cloth. Do not immerse the mixer body in water or any other liquid.



## AUTO EJECT BUTTON AND DISHWASHER SAFE PARTS FOR EASY CLEAN UP

The Auto Eject button simplifies the removal of attachments, which are also dishwasher-safe for easy cleanup.


### TROUBLESHOOTING

- Mixer Not Turning On:** Ensure the mixer is securely plugged into a working electrical outlet. Check the speed selector is not in the '0' (Off) position.
- Attachments Not Fitting:** Verify that the correct beaters are being used for the designated slots. The beater with the collar should go into the larger opening. Push firmly until a click is heard.
- Excessive Splatter:** Start mixing at the lowest speed (Speed 1) and gradually increase as needed. Ensure beaters are fully immersed in ingredients before starting.

### SPECIFICATIONS

Brand	BLACK+DECKER
Color	Black
Product Dimensions	9"D x 4"W x 10"H

<b>Special Feature</b>	Adjustable Speed Control
<b>Controls Type</b>	Push Button
<b>Model Name</b>	5-Speed Versatile Hand Mixer
<b>Is Dishwasher Safe</b>	Yes
<b>UPC</b>	810173034333
<b>Item Weight</b>	3.19 pounds
<b>ASIN</b>	B0B8QDB15H
<b>Material</b>	Metal
<b>Wattage</b>	250 watts

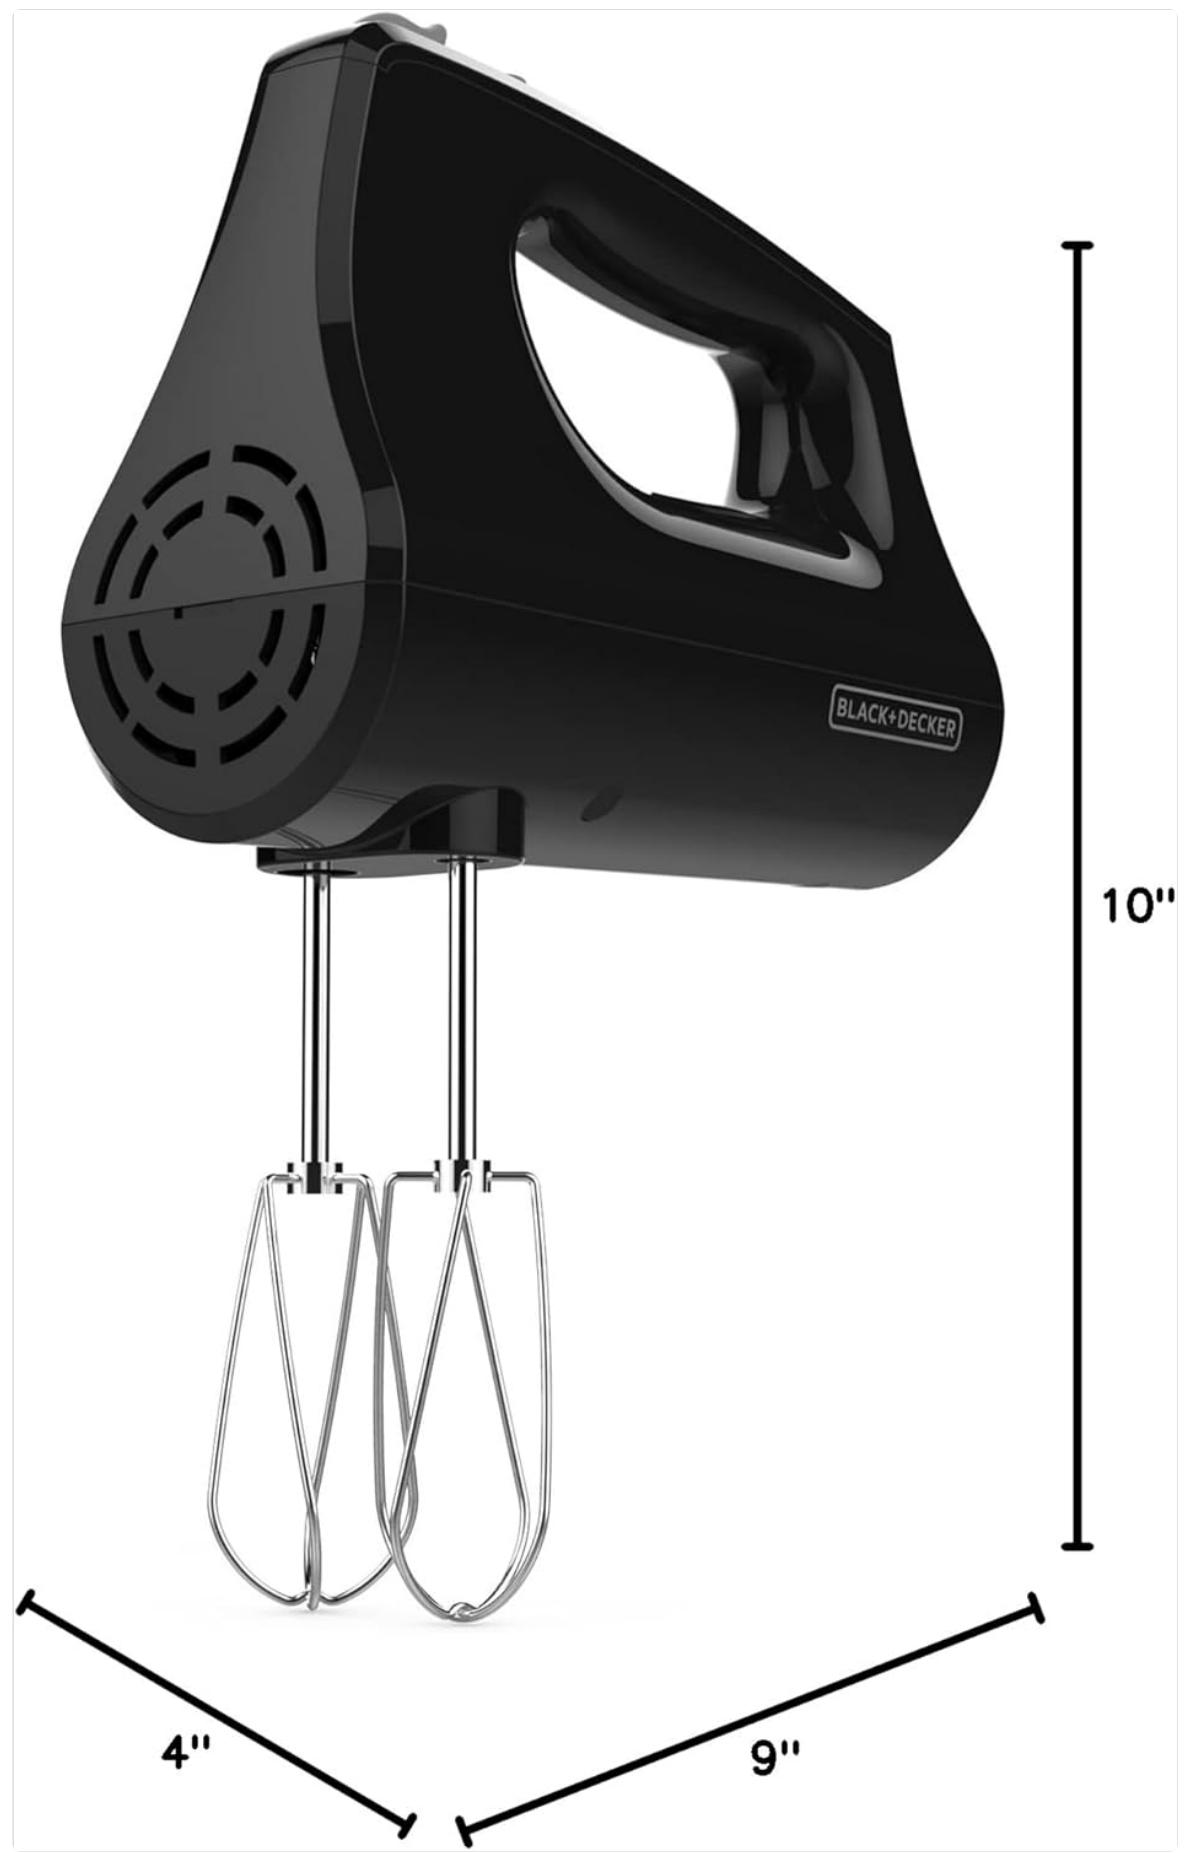

Visual representation of the hand mixer's dimensions: 10 inches high, 4 inches wide, and 9 inches deep.

## WARRANTY AND SUPPORT

This BLACK+DECKER product is covered by a limited warranty. Please refer to the product packaging or the manufacturer's official website for specific warranty details and registration information. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact BLACK+DECKER customer service through their official website or the contact information provided in your product documentation.