

Gevi DCMF0-BK0A1

Gevi 10-Cup Drip Coffee Maker with Built-in Grinder

Model: DCMF0-BK0A1

INTRODUCTION

Thank you for choosing the Gevi 10-Cup Drip Coffee Maker with Built-in Grinder. This appliance is designed to provide you with fresh, delicious coffee from whole beans or pre-ground coffee with ease and convenience. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- Scalding may occur if the lid is removed during the brewing cycles.

WHAT'S IN THE BOX

Upon unpacking, please ensure all components are present and in good condition:

- 1 x Gevi Drip Coffee Maker
- 1 x Glass Coffee Carafe
- 1 x Scoop
- 1 x Permanent Filter
- 1 x Filter Ring
- 1 x Removable Filter Holder
- 1 x User Manual (this document)



Image: Included Accessories

PRODUCT OVERVIEW

Familiarize yourself with the various parts of your Gevi coffee maker:





Image: Gevi 10-Cup Drip Coffee Maker

Control Panel & Display

LED Smart Touchscreen

One-Touch Recipes



Image: LED Smart Touchscreen

The intuitive LED smart touchscreen allows for easy selection of brew size, strength, and programming options.

Bean Hopper & Grinder

Brew Whole Beans or Per-Ground



Image: Brew Whole Beans or Pre-Ground

The integrated burr grinder allows you to grind fresh coffee beans directly before brewing. The bean hopper is removable for easy cleaning.

Water Reservoir

Product Dimensions



Image: 1.5L Visible & Removable Water Tank

The 1.5L visible and removable water tank is perfect for brewing up to 10 cups without interruption and simplifies refilling.

Glass Carafe & Keep Warm Plate

Adjustable Keep Warm Timer

60–240 minutes



Image: Adjustable Keep Warm Timer

The durable glass carafe collects the brewed coffee, and the integrated warming plate keeps your coffee hot for up to 4 hours.

SETUP

1. **Unpack and Clean:** Remove all packaging materials. Wash the glass carafe, permanent filter, and filter holder in warm, soapy water. Wipe the exterior of the coffee maker with a damp cloth.
2. **Position the Coffee Maker:** Place the coffee maker on a flat, stable surface away from the edge of the counter. Ensure there is enough space around the unit for proper ventilation and access to the water tank.
3. **Initial Cleaning Cycle:** Before first use, run two full brewing cycles with only water to clean the internal components. Fill the water tank to the MAX level, place the empty carafe on the warming plate, and start a brew cycle without coffee. Discard the water after each cycle.
4. **Add Water:** Fill the removable water tank with fresh, cold water up to the desired cup marking. Ensure the tank is securely placed back into the unit.

5. Add Coffee:

- **For Whole Beans:** Open the bean hopper lid and pour whole coffee beans into the hopper. Close the lid and ensure it is locked. Adjust the grinding level using the knob on top of the hopper.
- **For Pre-Ground Coffee:** Place the permanent filter into the filter holder. Add the desired amount of pre-ground coffee into the permanent filter. Do not overfill.

Video not supported. Description: This video demonstrates how to make coffee using whole coffee beans with the Gevi coffee maker, including adding beans to the hopper and setting the grind level.

Video: Make Coffee with Coffee Beans

Video not supported. Description: This video demonstrates how to make coffee using pre-ground coffee with the Gevi coffee maker, showing the process of adding ground coffee to the filter.

Video: Make Coffee with Ground Coffee

6. **Place Carafe:** Ensure the glass carafe is correctly positioned on the warming plate.

OPERATING INSTRUCTIONS

Brewing Coffee

1. Ensure the coffee maker is set up as described in the "Setup" section.
2. **Select Brew Size:** On the touchscreen, adjust the brew size from 4 to 10 cups according to your needs.
3. **Choose Brew Style:** Select your desired brew style: **CLASSIC**, **INTENSE**, **RICH**, or **ICE**. Each setting adjusts the brewing parameters for optimal flavor.
4. **Start Brewing:** Press the Start/Stop button to begin the brewing process. If using whole beans, the grinder will activate first, followed by brewing.
5. **Enjoy:** Once brewing is complete, the coffee maker will beep. The keep warm function will automatically activate.



Image: Different Flavor Options

Programmable Features

- **Delay Brew (24-hour Programmable Timer):**
Set the coffee maker to automatically start brewing at a specific time. Press the 'DELAY BREW' button and use the

touchscreen to set the desired start time. Confirm your selection. The machine will brew at the programmed time.

Video not supported. Description: This video demonstrates how to set the delay brew function on the Gevi coffee maker, allowing users to schedule brewing for a later time.

Video: How to set the delay brew

Video not supported. Description: This video provides instructions on how to schedule the brewing time for the Gevi coffee maker, ensuring coffee is ready when needed.

Video: How to Scheduled Brewing Time

• **Keep Warm Feature:**

The coffee maker automatically keeps coffee warm for up to 4 hours after brewing. You can customize this duration between 60 and 240 minutes via the touchscreen settings.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

Daily Cleaning

- **Carafe and Filter:** After each use, discard coffee grounds. Wash the glass carafe, permanent filter, and filter holder in warm, soapy water. Rinse thoroughly and dry. These parts are also dishwasher safe (top rack only).
- **Exterior:** Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

Descaling

Mineral deposits (limescale) can build up in your coffee maker over time, affecting performance. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.

1. Fill the water tank with a mixture of white vinegar and water (1:2 ratio).
2. Place the empty carafe on the warming plate.
3. Start a brew cycle. After about 1 minute, turn off the coffee maker and let it soak for 20 minutes.
4. Turn the coffee maker back on and let the brewing cycle complete.
5. Discard the vinegar solution.
6. Run 2-3 cycles with fresh, clean water to rinse out any remaining vinegar taste.

Video not supported. Description: This video provides a step-by-step guide on how to descale the Gevi 10 Cup Drip Coffee Maker to remove mineral buildup and maintain performance.

Video: How to Descal Gevi 10 Cup Drip Coffee Maker

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No water in reservoir; Carafe not properly placed; Power issue.	Fill water tank; Ensure carafe is correctly on warming plate; Check power connection.

Problem	Possible Cause	Solution
Coffee tastes weak.	Insufficient coffee grounds; Grind size too coarse; Water-to-coffee ratio incorrect.	Add more coffee; Adjust grinder to a finer setting; Refer to recommended ratios in operating instructions.
Grinder is not working.	Bean hopper empty; Hopper lid not closed/locked; Grinder clogged.	Add whole beans; Ensure hopper lid is securely closed and locked; Clean the grinder components.
Coffee overflows from filter.	Too much coffee grounds; Filter clogged; Carafe removed during brewing.	Reduce coffee amount; Clean permanent filter; Do not remove carafe during brewing.
Loud grinding noise.	Normal operation.	This is normal during the grinding process.

SPECIFICATIONS

Feature	Detail
Brand	Gevi
Model Name	Drip Coffee Machine (DCMF0-BK0A1)
Color	Black
Product Dimensions (D x W x H)	10.7"D x 7.9"W x 17.8"H
Coffee Maker Type	Drip Coffee Machine with Built-in Grinder
Capacity	10 Cups (1.5 Liters)
Filter Type	Permanent Filter (Reusable)
Operation Mode	Fully Automatic
Voltage	120 Volts
Special Features	Keep Warm (up to 4 hours), Touch Screen, Programmable (24-hour timer), Adjustable Grind Size, Multiple Brew Styles (Classic, Intense, Rich, Ice)
Item Weight	10.34 pounds

1.5L Visible & Removable Water Tank

Perfect for Brewing up to 10 Cups without Interruption



Image: Product Dimensions

WARRANTY AND SUPPORT

Every Gevi product (purchased through official or authorized channels) enjoys a **12-month warranty** and lifetime technical support. If you encounter any problems when using your Gevi coffee machine, please feel free to contact us. For support, please visit the official Gevi website or contact their customer service directly. Refer to the contact information provided with your purchase or on the Gevi brand store page on Amazon.

Gevi Official Store: <https://www.amazon.com/stores/Gevi/page/4A79346F-82BF-4EF3-B0CB-26C5D19322B8>

© 2025 Gevi. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question