

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal FV5780 Easygliss Eco Steam Iron User Manual

Tefal FV5780

Tefal FV5780 Easygliss Eco Steam Iron User Manual

Model: FV5780 | Brand: Tefal

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Tefal FV5780 Easygliss Eco Steam Iron. Please read these instructions carefully before using the appliance and keep them for future reference. The Easygliss Eco steam iron is designed for optimal performance with an emphasis on ecological design and energy efficiency.



Image 1.1: The Tefal Easygliss Eco Steam Iron FV5780.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the voltage indicated on the iron's rating plate matches your mains voltage.
- Do not leave the iron unattended while it is switched on or connected to the mains.
- Keep the iron and its cord out of reach of children when it is switched on or cooling down.
- Never immerse the iron, its cord, or plug in water or any other liquid.
- Unplug the iron before filling the water tank, cleaning, or after each use.
- Use the iron only for its intended purpose, which is ironing clothes.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Place the iron on a stable, heat-resistant surface when resting.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Tefal Easygliss Eco Steam Iron.

1. Water spray nozzle

2. Water filling inlet
3. Steam control lever (Dry ironing / Eco / Max Steam)
4. Spray button
5. Steam boost button
6. Temperature control dial
7. Indicator light
8. Handle
9. Power cord
10. Durilium AirGlide Soleplate
11. Water tank



Image 3.1: Overview of the iron with key dimensions.

4. SETUP AND FIRST USE


4.1 Before First Use

- Remove any stickers or protective covers from the soleplate.
- It is normal for a small amount of smoke or odor to be produced during the first few uses. This will disappear quickly.
- For the first use, iron an old piece of fabric to ensure no residue is left on your garments.

4.2 Filling the Water Tank

- Ensure the iron is unplugged from the mains.
- Set the steam control lever to the "STOP" or "No Steam" position to prevent water leakage.
- Open the water filling inlet cover.
- Fill the water tank with clean tap water up to the "MAX" mark. Do not overfill.
- Close the water filling inlet cover securely.

Wichtiger Hinweis

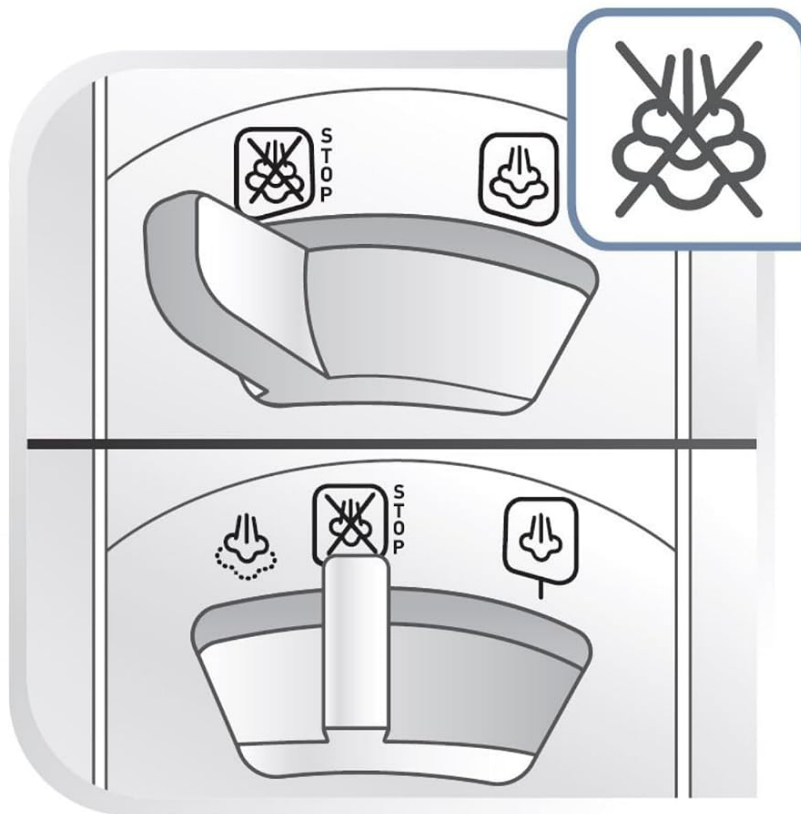

Bitte stellen Sie den Dampfgregler vor der Befüllung des Wassertanks immer auf "Stop" bzw. "Kein Dampf", um auslaufendes Wasser zu vermeiden. Nach dem Aufheizen können Sie den Regler je nach Bedarf verstellen.

Image 4.2.1: Ensure the steam regulator is set to "STOP" before filling the water tank.

5. OPERATING INSTRUCTIONS

5.1 Preparing for Ironing

- Sort laundry according to fabric type and recommended ironing temperature.
- Plug the iron into a suitable mains socket.
- Set the temperature control dial to the desired setting for your fabric. The indicator light will illuminate.

- Wait for the indicator light to turn off, indicating the iron has reached the selected temperature.

5.2 Steam Ironing

- Ensure the water tank is filled.
- Once the iron has reached the desired temperature (indicator light off), set the steam control lever to the "Eco" or "Max Steam" position.
- The iron will automatically deliver steam up to 50 g/min for efficient ironing.
- For stubborn creases, press the steam boost button to deliver an extra powerful shot of steam (up to 240 g/min).



Image 5.2.1: The iron producing steam for efficient results.

MAXIMALE DAMPFVERTEILUNG



Image 5.2.2: The Durilium AirGlide soleplate ensures maximum steam distribution.

5.3 Dry Ironing

- Set the steam control lever to the "STOP" or "No Steam" position.
- Select the desired temperature using the control dial.
- Wait for the indicator light to turn off before ironing.

5.4 Vertical Steaming

- This function is ideal for refreshing hanging garments, jackets, or delicate fabrics.
- Hang the garment on a hanger.
- Set the temperature control dial to the maximum setting.
- Hold the iron vertically a few centimeters away from the fabric and press the steam boost button repeatedly.



Image 5.4.1: Example of garments suitable for vertical steaming.

5.5 Eco Mode

- The Eco mode is designed to save up to 30% energy compared to the maximum steam setting.
- To activate, set the steam control lever to the "Eco" position.
- This mode provides sufficient steam for most everyday ironing tasks while being environmentally friendly.

UMWELTFREUNDLICHES DESIGN



Image 5.5.1: The iron features an Eco-friendly design.

BIS ZU 30% ENERGIEEINSPARUNG*

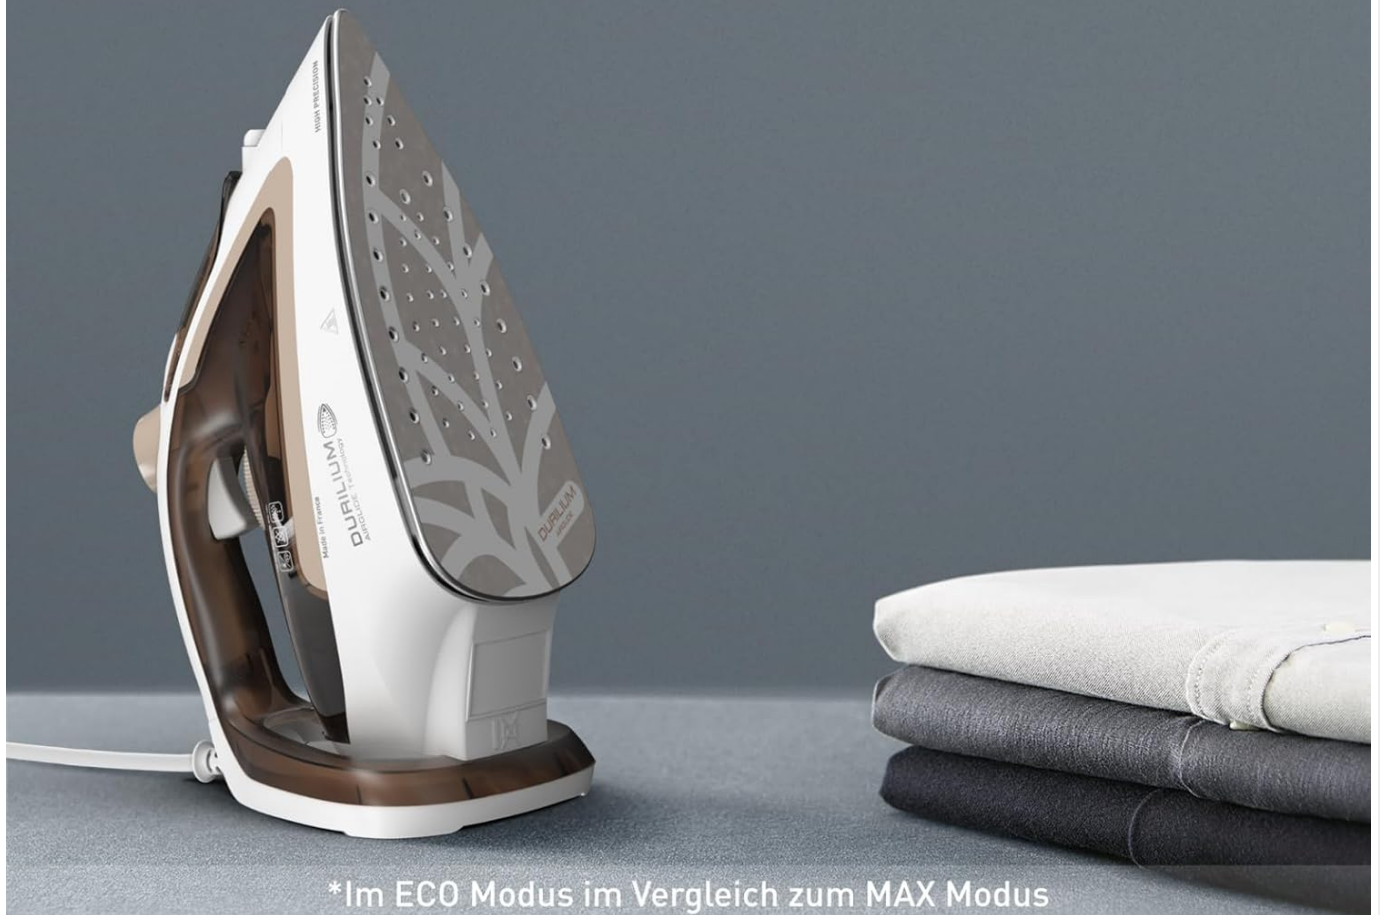


Image 5.5.2: The Eco mode helps save up to 30% energy.

6. MAINTENANCE AND CARE

6.1 Cleaning the Soleplate

- Always ensure the iron is unplugged and completely cool before cleaning.
- Wipe the soleplate with a damp cloth and a non-abrasive cleaner.
- Do not use abrasive pads, metal scouring pads, or harsh chemicals as these can damage the Durilium AirGlide coating.

EINDRUCKSVOLLE BÜGELSOHLE



Image 6.1.1: The Durilium AirGlide soleplate requires gentle cleaning.

6.2 Descaling (Self-Clean Function)

- Regular descaling helps maintain steam performance and prolong the life of your iron.
- Fill the water tank to the MAX level.
- Set the steam control to "STOP" and the temperature dial to MAX.
- Plug in the iron and wait for the indicator light to turn off.
- Unplug the iron.
- Hold the iron horizontally over a sink and push the self-clean button (if available, refer to specific model features) or rapidly move the steam control lever between "STOP" and "MAX Steam" to flush out scale.
- Shake the iron gently until all the water and scale have been flushed out.
- Plug the iron back in and let it heat up to dry the soleplate.
- Unplug and let it cool completely before storing.

6.3 Storage

- Always unplug the iron and allow it to cool completely before storing.
- Empty the water tank after each use to prevent scale buildup.
- Store the iron in an upright position to protect the soleplate.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; temperature dial set to minimum.	Check power connection; try another outlet; set temperature dial to desired heat.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to "STOP"; scale buildup.	Fill water tank; increase temperature setting; set steam control to "Eco" or "Max Steam"; perform descaling.
Water drips from the soleplate.	Temperature too low for steam; water tank overfilled.	Increase temperature and wait for indicator light to turn off; do not overfill water tank.
White flakes or brown stains on clothes.	Scale buildup in the iron.	Perform descaling procedure.

8. TECHNICAL SPECIFICATIONS

Brand: Tefal

Model Number: FV5780

Color: Moonlight Clay

Power: 2800 Watts

Voltage: 220 Volts

Continuous Steam Output: Up to 50 g/min

Steam Boost: Up to 240 g/min

Water Tank Capacity: 270 ml

Soleplate Technology: Durilium AirGlide

Product Dimensions (L x W x H): Approximately 31 x 15.2 x 0.1 cm

Item Weight: 1.34 Kilograms

Eco-Design: Up to 88% recyclable product, packaging from 93% recycled fibers.

Country of Origin: France

9. WARRANTY AND SUPPORT

Your Tefal FV5780 Easygliss Eco Steam Iron is designed for durability and performance. Tefal is committed to providing high-quality products and offers a repairability period for spare parts.

- **Spare Parts Availability:** Spare parts for this model are available for up to 15 years from the date of purchase.
- For warranty claims or technical support, please contact your local Tefal authorized service center or visit the official Tefal website.

- Please retain your proof of purchase for warranty purposes.



Image 9.1: Tefal's commitment to 15 years of repairability.

You can find more information and support on the official Tefal website: www.tefal.com

© 2025 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question