

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY CRMC-A751JBEZ Remote Control for Sharp AC Air Conditioner User Manual

ECONTROLLY CRMC-A751JBEZ

ECONTROLLY CRMC-A751JBEZ Remote Control User Manual

Model: CRMC-A751JBEZ

INTRODUCTION

This manual provides instructions for the ECONTROLLY CRMC-A751JBEZ remote control, designed for use with Sharp AC Air Conditioner models, including CRMC-A729JBEZ. Please read this manual carefully before use to ensure proper operation and longevity of your device.

PACKAGE CONTENTS

- 1 x ECONTROLLY CRMC-A751JBEZ Remote Control
- (Batteries and additional instructions are not included in the package)

SETUP

Battery Installation

The remote control requires two (2) AAA alkaline batteries for operation. No programming is necessary; simply install the batteries, and the remote will be ready for use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 1: Rear view of the remote control with the battery compartment indicated by an "OPEN" arrow.

Point the remote control directly at the air conditioner's receiver. Ensure there are no obstructions between the remote and the unit.





Figure 2: Front view of the ECONTROLLY CRMC-A751JBEZ remote control.

Button Functions

- **MODE:** Cycles through operating modes (e.g., Cool, Dry, Fan, Heat, Auto).
- **TEMP. (Up/Down Arrows):** Adjusts the desired temperature setting.
- **FAN:** Selects fan speed (e.g., Low, Medium, High, Auto).
- **TIMER:** Sets the on/off timer for the air conditioner.
- **DISPLAY:** Toggles the display on the air conditioner unit.
- **Ion:** Activates or deactivates the ionizer function (if available on your AC unit).
- **1h:** Likely a quick timer setting for 1 hour.
- **SWING:** Controls the louver swing function for air direction.
- **CANCEL:** Cancels current timer settings or other functions.
- **RESET:** Resets the remote control to default settings. This button is typically recessed and requires a pointed object to press.

MAINTENANCE

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.

Battery Replacement

Replace batteries when the remote control's range decreases or if the display becomes dim. Always replace both batteries simultaneously with new AAA alkaline batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Verify that the remote is pointed directly at the air conditioner.
- **Limited range:**
 - Batteries may be low; replace them.
 - Ensure the air conditioner's receiver is clean and unobstructed.

SPECIFICATIONS

Feature	Detail
Model Number	CRMC-A751JBEZ
Compatible Models	Sharp AC Air Conditioners (e.g., CRMC-A729JBEZ)
Power Source	2 x AAA Batteries (not included)
Connectivity Technology	Infrared (IR)
Product Dimensions	7 x 0.65 x 2 inches
Item Weight	1 ounce

WARRANTY AND SUPPORT

This ECONTROLLY product is designed for reliable performance. For any issues or inquiries, please refer to the retailer where the product was purchased. Keep your purchase receipt for reference.

For further assistance, you may contact ECONTROLLY customer support through their official channels, if available.

© 2023 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B8SNJPNF>

More documents and user manuals: <https://manuals.plus/>