

MoKo P723314021041

MoKo iPad Case User Manual

Model: P723314021041

INTRODUCTION

Thank you for choosing the MoKo iPad Case. This manual provides essential information for the proper use, installation, and maintenance of your new case. Designed for the iPad (A16) 11th generation 11-inch 2025 and iPad 10th generation 10.9-inch 2022, this case offers robust protection and enhanced functionality.

Key features include premium PU leather exterior, soft microfiber lining, translucent PC back shell, adjustable viewing/typing angles, support for Apple Pencil charging, Touch ID compatibility, and auto wake/sleep functionality.

COMPATIBILITY


This MoKo case is specifically designed for the following iPad models:

- **iPad (A16) 11th Generation 11-inch 2025** (Models: A3354, A3355, A3356)
- **iPad 10th Generation 10.9-inch 2022** (Models: A2696, A2757, A2777)

Note: This case is not compatible with other iPad models. Please verify your iPad model before use.



Compatibility

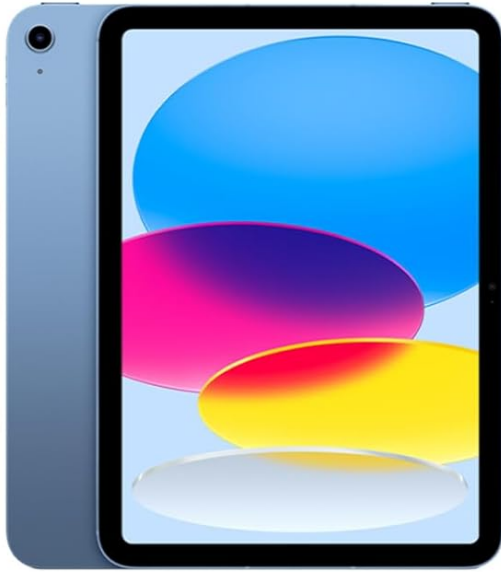

**iPad (A16) 11 inch 2025
(11th Generation)**
A3354/A3355/A3356



**iPad 10th 10.9 inch 2022
(10th Generation)**
A2696/A2757/A2777



**iPad Air 11 inch M3
(2025 Release)**
A3266/A3267/A3270



**iPad Air 11 inch M2
(2024 Release)**
A2902/A2903/A2904



Image: A visual guide illustrating the compatible iPad 10th and 11th generation models, and explicitly showing incompatibility with iPad Air 11 inch M3 and M2 models.

SETUP AND INSTALLATION

Follow these steps to properly install your MoKo iPad case:

1. **Clean Your iPad:** Before installing the case, ensure your iPad is clean and free of dust or debris. Use a soft, lint-free cloth.
2. **Align the iPad:** Gently align your iPad with the hard PC translucent back shell of the case. Ensure the camera cutout and port openings match.
3. **Snap into Place:** Carefully press the iPad into the case, starting from one corner and working your way around until all edges are securely seated within the case's frame. Ensure a snug fit.
4. **Check Fit:** Verify that all buttons, ports, and the camera are accessible and unobstructed. The case should fit snugly without any loose areas.



Image: The MoKo iPad case in navy blue, showcasing its design with the translucent back shell and the front cover folded to support the iPad in a viewing angle.

OPERATING INSTRUCTIONS

Auto Wake/Sleep Function

The case features a built-in magnetic strip that automatically wakes your iPad when the lid is opened and puts it to sleep when the lid is closed. This helps conserve battery life.



Image: A diagram illustrating the "Open to Wake" and "Close to Sleep" functionality of the case, highlighting the magnetic closure and its energy-saving benefits.

Adjustable Viewing Angles

The foldable front cover allows for two stable viewing angles:

- **Viewing Angle:** Ideal for watching videos, reading, or making video calls. Fold the front cover into a triangular stand to prop up your iPad.
- **Typing Angle:** Provides a comfortable incline for typing or drawing. Fold the front cover into a lower triangular stand.



Image: Two separate images demonstrating the case's ability to create different viewing angles: one upright for media consumption and another lower angle for comfortable typing.

Apple Pencil Charging & Touch ID Support

The precise cutouts ensure full access to all features:

- **Apple Pencil Charging:** The case supports 1st generation and USB-C Apple Pencil charging. An Apple USB-C to Apple Pencil Adapter may be required for USB-C Pencil.
- **Touch ID:** The case provides unobstructed access to the Touch ID sensor for easy unlocking.
- **Precise Cutouts:** All ports, speakers, and buttons are easily accessible.



Image: A composite image highlighting key design elements: support for Touch ID unlocking, precise cutouts for ports, camera protection, and responsive tactile buttons.

CARE AND MAINTENANCE

To ensure the longevity and appearance of your MoKo iPad case, follow these care instructions:

- **Cleaning:** Wipe the exterior with a soft, damp cloth. For stubborn stains, a mild soap solution can be used, but avoid harsh chemicals or abrasive cleaners.
- **Drying:** Allow the case to air dry completely before re-installing your iPad. Do not use direct heat.
- **Storage:** When not in use, store the case in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Sharp Objects:** Prevent contact with sharp objects that could scratch or damage the case's surface.



Image: A close-up of the translucent colored back cover, emphasizing its scratchproof and fingerprint-proof properties, designed to maintain the iPad's original aesthetic.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Auto Wake/Sleep not working.	iPad settings, incorrect case alignment, or magnetic interference.	<ol style="list-style-type: none">1. Ensure "Lock/Unlock" is enabled in your iPad's settings (Settings > Display & Brightness > Lock/Unlock).2. Re-align the iPad within the case to ensure proper magnetic contact.3. Remove any other magnetic accessories near the iPad.

Problem	Possible Cause	Solution
Case feels loose or iPad slips.	Incorrect model, improper installation.	1. Verify your iPad model matches the compatible models listed in this manual. 2. Re-install the iPad, ensuring it snaps securely into all corners.
Buttons or ports are obstructed.	Improper installation.	1. Remove the iPad from the case and re-install it carefully, ensuring all cutouts align perfectly with the iPad's features.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	MoKo
Model Number	P723314021041
Compatible Devices	iPad (A16) 11th Gen 11-inch 2025 (A3354, A3355, A3356), iPad 10th Gen 10.9-inch 2022 (A2696, A2757, A2777)
Material	Premium PU Leather Exterior, Soft Microfiber Lining, Translucent Hard PC Back Shell
Color	Navy Blue
Dimensions	25.2 x 18.49 x 1.19 cm
Item Weight	222.54 g
Features	Auto Wake/Sleep, Adjustable Viewing/Typing Angles, Support Apple Pencil Charging, Touch ID Compatible, Precise Cutouts, Scratchproof, Fingerprint-proof

SLIM AND LIGHTWEIGHT



Image: A side view of the case, emphasizing its slim and lightweight profile, with feathers in the background to visually represent its lightness.

WARRANTY AND SUPPORT

MoKo products are designed for durability and performance. For information regarding warranty coverage, returns, or technical support, please refer to the official MoKo website or contact their customer service directly.

Customer Service: For any inquiries or assistance, please visit the [MoKo Store on Amazon](#) or contact their support channels as provided on their official website.



Image: A customer service representative wearing a headset, symbolizing available support for product inquiries.

© 2025 MoKo. All rights reserved.

This manual is for informational purposes only. MoKo reserves the right to make changes to product specifications without prior notice.

