

[Manuals.plus](#) /

> [ZdalaMit](#) /

> User Manual for ZdalaMit Replacement Remote Control

ZdalaMit Etec TV 32E800, 32E725, 32EF20, 39E725, 40E800, 32E700, 32E40, 40E700, 40E850, 32E850

User Manual for ZdalaMit Replacement Remote Control

Model Compatibility: Etec TV 32E800, 32E725, 32EF20, 39E725, 40E800, 32E700, 32E40, 40E700, 40E850, 32E850

INTRODUCTION

This manual provides instructions for the ZdalaMit Replacement Remote Control, designed to be compatible with various Etec TV models. This remote control requires no programming and is ready for use once batteries are installed.



Image 1: Front view of the ZdalaMit Replacement Remote Control. It features a black body with clearly labeled buttons for

power, channel, volume, navigation, and numerical input.

SETUP

To begin using your new remote control, follow these simple steps for battery installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA size alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Note: Batteries are not included with the remote control. Please use new alkaline batteries for optimal performance.



Image 2: Angled view of the ZdalaMit Replacement Remote Control, highlighting its ergonomic design and button layout.

OPERATING INSTRUCTIONS

This remote control is designed for immediate use with compatible Etec TV models without requiring any programming. Simply point the remote control towards your television and press the desired button.

Key Functions:

- **Power Button (Red):** Turns the television on or off.
- **Number Buttons (0-9):** Directly input channel numbers.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel up or down.

- **MUTE:** Mutes or unmutes the television audio.
- **MENU:** Accesses the television's main menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Navigates through menus and confirms selections.
- **EXIT:** Exits the current menu or function.
- **INPUT:** Selects the input source (e.g., HDMI, AV).
- **DISPLAY:** Shows on-screen information.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Cleaning:** Use a soft, dry cloth to clean the surface of the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the remote.
- **Storage:** Store the remote control in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common troubleshooting steps:

Problem	Solution
Remote control is not working.	<ul style="list-style-type: none"> ◦ Ensure batteries are inserted correctly with the correct polarity (+/-). ◦ Replace old batteries with new AAA alkaline batteries. ◦ Check for any obstructions between the remote control and the TV's infrared receiver. ◦ Ensure you are within the effective range of the TV's IR receiver.
Some buttons are not responding.	<ul style="list-style-type: none"> ◦ Clean the remote control surface, especially around the unresponsive buttons, to remove any dirt or debris. ◦ Replace batteries, as low power can sometimes cause intermittent button response.

SPECIFICATIONS

- **Brand:** ZdalaMit
- **Compatible Devices:** Etec TV models (32E800, 32E725, 32EF20, 39E725, 40E800, 32E700, 32E40, 40E700, 40E850, 32E850)
- **Battery Type:** 2 x AAA Alkaline Batteries (not included)
- **Product Dimensions:** Approximately 6 x 2 x 0.5 inches (15.24 x 5.08 x 1.27 cm)
- **Item Weight:** Approximately 2 ounces (56.7 grams)
- **Color:** Black
- **Special Feature:** Ergonomic design

SUPPORT

For any questions or further assistance regarding your ZdalaMit Replacement Remote Control, please do not hesitate to contact the seller or manufacturer. Refer to your purchase documentation for specific contact information.

© 2024 ZdalaMit. All rights reserved.