

[Manuals.plus](#) /

› [Epson](#) /

› Epson Expression Home XP-2200 All-in-One Printer User Manual

Epson C11CK67403

Epson Expression Home XP-2200 All-in-One Printer User Manual

Model: XP-2200 (C11CK67403)

1. INTRODUCTION

The Epson Expression Home XP-2200 is a compact, stylish, and user-friendly multifunction printer designed for home use. It offers 3-in-1 functionality: printing, scanning, and copying. This printer utilizes individual ink cartridges, allowing you to replace only the color that runs out, which can help reduce costs. It supports wireless connectivity through Wi-Fi and Wi-Fi Direct, enabling easy printing from various devices.



Image 1.1: Front view of the Epson Expression Home XP-2200 printer, showing a document being printed from the output tray.

Key Features:

- Compact multifunction printer: Saves space and offers versatile functionality.
- Easy mobile printing: Print directly from your smartphone or tablet.
- Separate ink cartridges: Replace only the color that is depleted to save money.
- Wi-Fi and Wi-Fi Direct connectivity for flexible placement and printing.

2. SETUP INSTRUCTIONS

2.1 Unboxing and Initial Placement

1. Carefully remove the printer from its packaging.
2. Remove all protective tapes and packing materials from the exterior and interior of the printer.
3. Place the printer on a stable, flat surface near a power outlet.

75 % menos de plástico en el embalaje que en el formato de venta en tiendas*



Image 2.1: The compact Epson Expression Home XP-2200 printer positioned on a desk, illustrating its suitability for home environments.

2.2 Power Connection

- Connect the power cable to the printer and then to a wall outlet.
- Press the power button to turn on the printer.

2.3 Ink Cartridge Installation

The printer comes with four separate ink cartridges (Black, Cyan, Magenta, Yellow).

1. Open the printer's ink cartridge cover.
2. Unpack each ink cartridge individually.
3. Insert each cartridge into its corresponding slot, ensuring it clicks into place.
4. Close the ink cartridge cover.



Image 2.2: A set of Epson 604 series individual ink cartridges, which are used with this printer model.

2.4 Software Installation

The printer includes a software CD. Alternatively, you can download the latest drivers and utilities from the official Epson support website.

1. Insert the software CD into your computer's CD/DVD drive or visit the Epson support website for your model.
2. Follow the on-screen instructions to install the printer drivers and utility software.

2.5 Network Connection (Wi-Fi)

The XP-2200 supports Wi-Fi and Wi-Fi Direct for wireless printing.

- **Wi-Fi Setup:** Use the printer's control panel or the EpsonNet Setup utility on your computer to connect the printer to your wireless network.
- **Wi-Fi Direct:** This feature allows direct connection between your device and the printer without a router. Refer to the on-screen instructions during setup or the Epson support website for detailed steps.

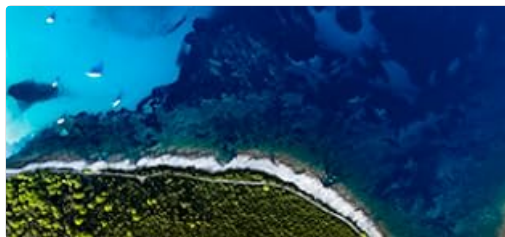


Image 2.3: A close-up view of the printer's control panel, highlighting the power and Wi-Fi status indicators.

3. OPERATING INSTRUCTIONS

3.1 Loading Paper

1. Open the paper support and pull out the extension.
2. Slide the edge guides to the outer edges.
3. Load paper print-side up against the right edge guide.
4. Slide the left edge guide against the paper, but not too tightly.

3.2 Printing from a Computer

1. Open the document or image you wish to print.
2. Select 'Print' from the application's menu (e.g., File > Print).
3. Choose 'Epson XP-2200 Series' as your printer.

4. Adjust print settings (paper size, print quality, color/monochrome) as needed.
5. Click 'Print'.

3.3 Mobile Printing (Epson Smart Panel App)

The Epson Smart Panel app allows you to print, scan, and copy directly from your smartphone or tablet.

1. Download and install the Epson Smart Panel app from your device's app store.
2. Ensure your mobile device is connected to the same Wi-Fi network as your printer, or use Wi-Fi Direct.
3. Open the app and follow the instructions to connect to your XP-2200 printer.
4. Select the desired function (Print, Scan, Copy) and follow the in-app prompts.



Image 3.1: Mobile device showing the Epson Smart Panel app, demonstrating how to print documents wirelessly to the XP-2200 printer.

3.4 Scanning Documents

1. Lift the scanner lid.

2. Place the document face-down on the scanner glass, aligning it with the corner mark.
3. Close the scanner lid gently.
4. From your computer, open the Epson Scan software or use the Epson Smart Panel app on your mobile device.
5. Select scan settings (document type, resolution, destination folder).
6. Click 'Scan'.

3.5 Copying Documents

1. Place the document on the scanner glass as described in Section 3.4.
2. On the printer's control panel, press the Copy button.
3. Use the control panel to select the number of copies and color/monochrome option.
4. Press the Start button to begin copying.

3.6 Duplex Printing

The Epson XP-2200 supports automatic duplex (two-sided) printing.

1. When printing from your computer, open the print settings dialog.
2. Look for an option like '2-sided printing', 'Duplex printing', or 'Print on both sides'.
3. Select the desired binding edge (long-edge or short-edge).
4. Proceed with printing as usual.

4. MAINTENANCE

4.1 Replacing Ink Cartridges

When an ink cartridge is low or empty, a message will appear on your computer or the printer's status monitor. Replace cartridges as follows:

1. Ensure the printer is turned on.
2. Open the ink cartridge cover. The print head will move to the replacement position.
3. Press the tab on the empty cartridge and lift it out.
4. Unpack a new genuine Epson ink cartridge.
5. Insert the new cartridge into the correct slot until it clicks into place.
6. Close the ink cartridge cover. The printer will begin initializing the ink system.

Tintas estándar Piña 604

	CON ReadyPrint	SIN ReadyPrint
Coste de impresión por página *	0,08 €	0,31 €
Coste de impresión por 50 páginas *	3,99 €	15,70 €
Sencilla	- Ahorra hasta un 70 % en costes de tinta* - Coste mensual reducido fijo - Entrega automática de tinta antes de que se te agote - Tinta de suscripción entregada sin cargo - Tintas XL enviadas para cambios de cartuchos menos frecuentes	- Necesario comprar online o en la tienda - Puede provocar pánico en el último momento si se encuentra en medio de un trabajo de impresión
Reciclaje	75 % menos de envases de plástico que los paquetes de tinta de comercio minorista * - Caja de cartón totalmente reciclable para el contenedor de reciclaje de papel doméstico* - Se pueden solicitar sobres gratuitos para el reciclaje de cartuchos de tinta	- El embalaje de la tinta estándar está fabricado con plástico que contiene un mínimo del 50 % de contenido reciclado* - Se pueden solicitar sobres gratuitos para el reciclaje de cartuchos de tinta

Image 4.1: The Epson XP-2200 printer shown alongside a multipack of genuine Epson 604 ink cartridges, recommended for optimal performance.

4.2 Cleaning the Printer

- **Exterior:** Wipe the exterior of the printer with a soft, damp cloth. Avoid using abrasive cleaners or solvents.
- **Scanner Glass:** Clean the scanner glass with a soft, lint-free cloth moistened with a small amount of glass cleaner.
- **Print Head Cleaning:** If print quality declines (e.g., missing lines, streaking), perform a print head cleaning using the printer utility software on your computer.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

- **Printer Not Responding:**
 - Check power connection and ensure the printer is turned on.
 - Verify Wi-Fi connection status.
 - Restart the printer and your computer/mobile device.
- **Poor Print Quality:**
 - Check ink levels and replace any empty cartridges.
 - Perform a print head cleaning and nozzle check using the printer utility.
 - Ensure you are using genuine Epson ink cartridges.
- **Paper Jams:**
 - Turn off the printer and carefully remove any jammed paper from the input tray, output tray, or inside the printer.
 - Ensure paper is loaded correctly and not overloaded.

For more detailed troubleshooting, refer to the Epson support website or the full electronic manual provided with your software.

6. SPECIFICATIONS

Feature	Specification
Product Dimensions	30D x 39W x 14.6H centimeters
Maximum Media Size	Letter
Power Consumption	12 Watt
Included Components	Inkjet Cartridges
Supported Media Types	Envelopes, Plain Paper
Scanner Type	Flatbed
Max Sheet Capacity	50
Max Copy Speed (Black & White)	2.2 seconds

Feature	Specification
Compatible Devices	Smartphone, Tablet
Max Color Print Resolution	600 dpi
Sheet Size	A4
Max Black & White Print Resolution	600 dpi
Color Depth	24 bpp
Duplex Printing	Yes
Max Copies per Series	25
Operating System	Mac OS X 10.9.5 or later, Windows 10 (32/64-bit), Windows 11 or later, Windows 7 (32/64-bit), Windows 8 (32/64-bit), Windows 8.1 (32/64-bit), Windows Server 2003, Windows Vista (32/64-bit), Windows XP SP3 or later (32-bit), XP Professional x64 Edition SP2, macOS 11 or later
Connections	Wi-Fi
Special Features	Email Printing, Network Ready
Total USB Ports	2
Print Technology	Inkjet
Color Output	Color
Max Color Print Speed	15 Pages per minute
Max Monochrome Print Speed	27 Pages per minute
Item Weight	4 Kilograms

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

This product comes with a **2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty document included with your product or visit the official Epson website.

7.2 Customer Support

For further assistance, technical support, or to download the latest drivers and manuals, please visit the official Epson support website:

[Epson Support Website](#)

© 2023 Epson Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question