

- Manuals.plus /
- › MOMOHO /
- › MOMOHO Mini Bluetooth Speaker Wireless with Remote Shutter, Multi-Functional TWS Pairing, Built-in Mic, Portable Bluetooth Speaker User Manual

MOMOHO BTS0011

MOMOHO Mini Bluetooth Speaker User Manual

Model: BTS0011

PRODUCT OVERVIEW

The MOMOHO Mini Bluetooth Speaker (Model: BTS0011) is a compact and versatile audio device designed for both indoor and outdoor use. It features a built-in microphone for hands-free calling, a remote shutter function for mobile photography, and supports True Wireless Stereo (TWS) pairing for an enhanced audio experience.

Compact and Portable Design



The speaker is designed to be extremely compact, comparable in size to a coin, making it highly portable. It includes a custom lanyard for easy carrying during outdoor activities.

Outdoor Companion

Portable Bluetooth Speaker



Equipped with a custom lanyard, this mini speaker is ideal for outdoor activities such as running, hiking, and biking. It can be easily hung anywhere for convenient music playback.

Hands-Free Communication

Hands-Free Calling



The built-in microphone allows you to make and receive calls directly through the speaker, enhancing convenience during various activities.

Remote Shutter Functionality

Bluetooth Remote Selfie Shutter



This speaker doubles as a remote control for your phone's camera, enabling you to capture perfect selfies from up to 50 feet away. It is compatible with most Bluetooth-enabled mobile phones.

SETUP GUIDE

Charging the Speaker

Before first use, fully charge the speaker. The charging time is approximately 2 hours.

- Connect the provided USB charging cable to the speaker's charging port.
- Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
- The indicator light will show charging status (refer to speaker's specific LED behavior for full charge indication).

Powering On/Off

- To power on: Press and hold the power button until you hear an audible prompt or see the indicator light illuminate.
- To power off: Press and hold the power button again until you hear an audible prompt or the indicator light turns off.

Bluetooth Pairing (Single Speaker)

1. Ensure the speaker is powered on and in pairing mode (indicator light will typically flash).
2. On your smartphone or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select "MOMOHO BTS0011" (or similar name).
4. Once connected, you will hear a confirmation sound, and the indicator light will change (e.g., solid blue).

True Wireless Stereo (TWS) Pairing

To achieve stereo sound, you can pair two MOMOHO Mini Bluetooth Speakers together.



True Wireless Stereo

Two speakers paired together via Bluetooth

Pair two speakers for a true stereo audio experience, enhancing your music listening.

1. Turn on both MOMOHO Mini Bluetooth Speakers. Do not connect them to any playback device yet.
2. Double-click (do not hold) the power button on both mini Bluetooth speakers simultaneously.

3. You will hear a beep indicating that the two speakers have successfully connected to each other.
4. Now, connect your playback device (e.g., smartphone) to one of the paired speakers via Bluetooth as described in the "Bluetooth Pairing (Single Speaker)" section. The sound will now play in stereo through both speakers.

Using the Remote Shutter Function

The speaker can act as a remote shutter for your phone's camera.

- Ensure the speaker is paired with your smartphone via Bluetooth.
- Open your phone's camera application.
- Press the power button on the speaker to trigger the camera shutter.

Hands-Free Calling

- When a call comes in, the speaker will ring. Press the power button once to answer the call.
- During a call, press the power button once to end the call.
- To reject an incoming call, press and hold the power button for approximately 2 seconds.

Volume Control

Volume is primarily controlled via your connected device. Some speakers may have limited volume control directly on the unit.



The single button on the speaker serves multiple functions including volume adjustment, photo capture, and call management.

MAINTENANCE

Cleaning

- Wipe the speaker with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or spray cleaners directly on the speaker.
- Avoid getting moisture into any openings.

Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically to maintain its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker for at least 2 hours.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; Bluetooth is off on device; Device is too far.	Ensure speaker is in pairing mode. Turn Bluetooth on your device. Move device closer to speaker (within 50 feet). Forget previous pairings on your device and try again.
No sound or low volume.	Volume on speaker or device is too low; Speaker not connected; Audio source issue.	Increase volume on both the speaker and your connected device. Ensure the speaker is properly paired. Check if the audio is playing correctly from the source device.
TWS pairing fails.	Incorrect pairing procedure; Speakers already connected to another device.	Ensure both speakers are not connected to any device before attempting TWS pairing. Double-click power buttons simultaneously. Try powering both speakers off and on again.
Remote shutter not working.	Speaker not paired; Camera app not open; Incompatible phone model.	Verify Bluetooth connection. Open your phone's camera app. Ensure your phone model supports Bluetooth remote shutter functionality.

SPECIFICATIONS

Feature	Detail
Model Name	BTS0011-250mAh
Material	Plastic
Color	Green
Product Dimensions	1.4"D x 1.4"W x 1"H
Item Weight	21 Grams (0.741 ounces)
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Bluetooth Range	Up to 50 Feet (15.24 Meters)
Speaker Maximum Output Power	3 Watts
Battery Capacity	250 Milliamp Hours
Charging Time	2 Hours
Playtime	4-6 Hours (estimated, based on usage)
Special Features	Built-in Microphone, Stereo Pairing (TWS), Remote Shutter
Recommended Uses	Indoor/Outdoor

Feature	Detail
Included Components	Speaker, USB Charging Cable, Lanyard
UPC	784110797226

Note: Specifications are subject to change without notice.

WARRANTY AND SUPPORT

The MOMOHO Mini Bluetooth Speaker comes with a **Limited Warranty**. For specific terms and conditions, please refer to the warranty information provided with your purchase or contact MOMOHO customer support.

For technical support, troubleshooting assistance, or warranty claims, please contact MOMOHO customer service through their official website or the retailer where the product was purchased.

Online Resources:

- Visit the [MOMOHO Store on Amazon](#) for product information and updates.

IMPORTANT SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble, repair, or modify the speaker yourself. This may void the warranty and pose safety risks.
- Keep the speaker away from water and liquids. It is not waterproof.
- Avoid dropping or subjecting the speaker to strong impacts.
- Dispose of the speaker and its battery responsibly according to local regulations.

VIDEO RESOURCES

No official seller videos were found that meet the criteria for inclusion in this manual. Please refer to the written instructions and diagrams for guidance.

© 2024 MOMOHO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B8X4L62S>

More documents and user manuals: <https://manuals.plus/>