

[Manuals.plus](#) /

› [Wokceer](#) /

› Wokceer 7.2 x 4 FT Gold Metal Arch Backdrop Stand Instruction Manual

## Wokceer LKW-DoorArch-7.2FT-Gold-D

# Wokceer 7.2 x 4 FT Gold Metal Arch Backdrop Stand Instruction Manual

Model: LKW-DoorArch-7.2FT-Gold-D

Brand: Wokceer

## INTRODUCTION

---

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Wokceer 7.2 x 4 FT Gold Metal Arch Backdrop Stand. Please read these instructions carefully before assembly and use to ensure proper setup and safe operation. This arch stand is designed for various event decorations, offering a stable and elegant structure for balloons, flowers, fabrics, and other decorative elements.

## PACKAGE CONTENTS

---

Verify that all components listed below are present in your package:

- 4 pcs Arch Tubes with Screws
- 1 pc Arch Tube without Screw
- 8 pcs Straight Tubes
- 2 pcs T-shaped Tubes
- 2 pcs Bottom Tubes with 2 Screws
- 1 pc Bottom Tube with 1 Screw

# Product Accessories List

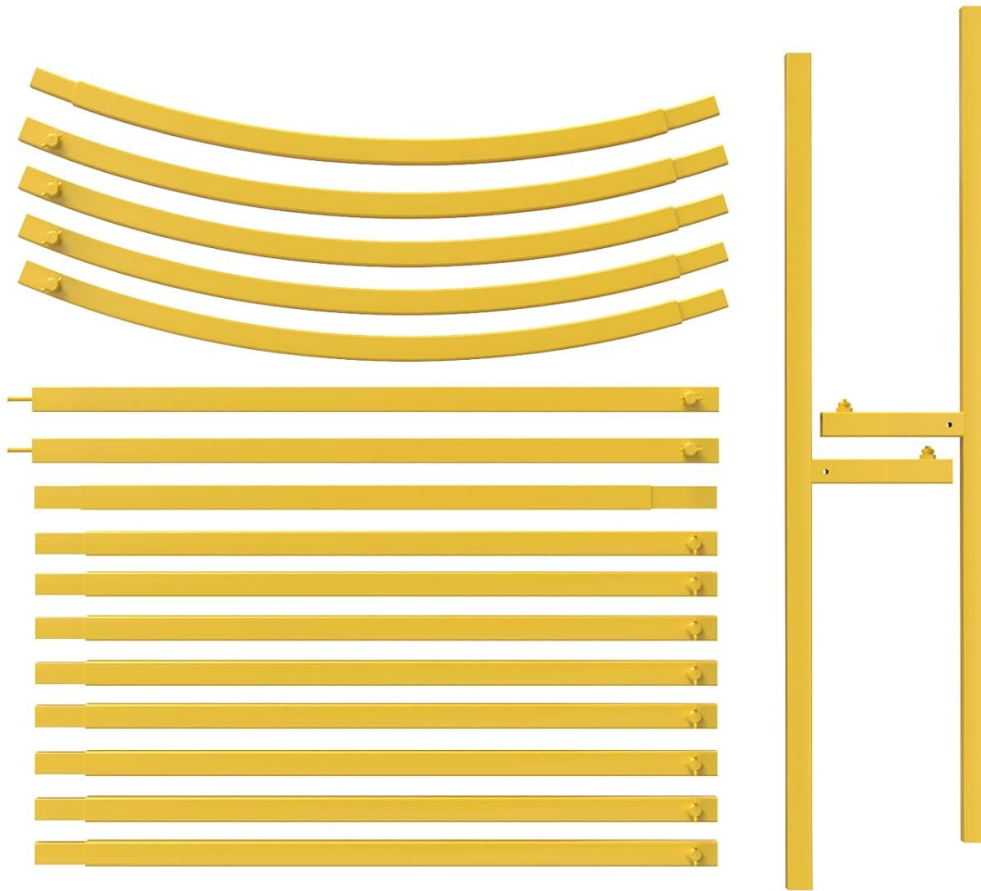 


Figure 1: Product Accessories List

## SETUP INSTRUCTIONS

Follow these steps to assemble your Wokceer Gold Metal Arch Backdrop Stand:

1. **Unpack Components:** Carefully remove all tubes and accessories from the packaging. Lay them out on a clean, flat surface to identify each part.
2. **Assemble the Base:** Connect the T-shaped tubes to the bottom tubes. Ensure the screws are aligned and tightened securely. The crossbar on the base enhances stability.
3. **Attach Upright Sections:** Insert the straight tubes into the vertical openings of the T-shaped base components. Secure them using the provided screws.
4. **Form the Arch:** Begin connecting the arch tubes. The tubes are designed to fit together with integrated screws for quick assembly. Ensure each connection is firm.
5. **Connect Arch to Uprights:** Once the arch is formed, attach its ends to the top of the assembled upright sections. Tighten all screws to ensure the entire structure is stable.

For a visual guide, please refer to the official installation video:

Video 1: Wokceer Arch Backdrop Stand Installation Instructions. This video demonstrates the step-by-step assembly process for the arch stand.

Another helpful video demonstrating assembly and decoration:

Video 2: Assembly and How to Attach Items to this Arch. This video provides additional guidance on assembling the arch and attaching various decorative elements.

## Comparative Advantage



 

 <p>✓</p>	 <p>✗</p>
<b>OURS</b> Square Tube - Stable won't deform or rotate high bearing capacity	<b>OTHERS</b> Circular Tubes - Flimsy prone to bend or deform weak weight capacity
 <p>✓</p>	 <p>✗</p>
<b>OURS</b> Screws - More Sturdy connect easily and tightly can be adjusted at will	<b>OTHERS</b> Buckles - Not Firm easy to pop out or scatter need much force to close

Figure 2: Comparative Advantage of Square Tubes and Secure Screws

## OPERATING INSTRUCTIONS

The Wokceer Gold Metal Arch Backdrop Stand is versatile and can be used for a variety of events and decorative purposes:

- **Event Backdrops:** Ideal for weddings, bridal showers, birthday parties, baby showers, and photo booths.
- **Decoration:** Adorn the arch with flowers, greenery, garlands, tulle swags, balloons, or vines to create a unique and festive atmosphere.
- **Indoor and Outdoor Use:** The anti-rust metal material ensures durability for both indoor and outdoor settings. For outdoor use, consider adding weights to the base for enhanced stability, especially in windy conditions.

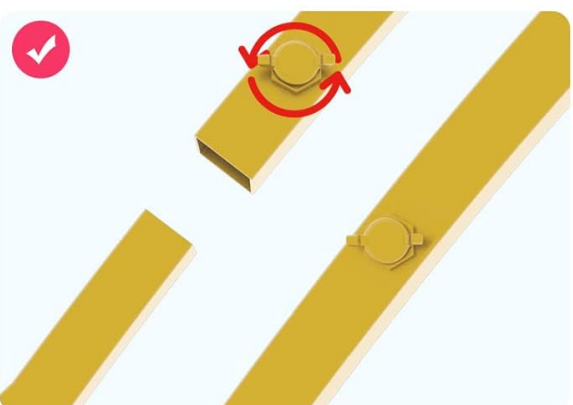

*Figure 3: Decorated Arch Stand Example*



Figure 4: Arch Stand with Balloon Decoration

## MAINTENANCE

---

To ensure the longevity and appearance of your arch stand, follow these maintenance guidelines:

- **Cleaning:** Wipe down the metal frame with a soft, damp cloth. Avoid abrasive cleaners that may damage the finish.
- **Storage:** When not in use, disassemble the arch stand and store it in its original packaging or a protective bag in a dry place to prevent dust accumulation and potential damage.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight and secure. Retighten as necessary.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Arch feels unstable or wobbly.	Loose connections or uneven surface.	Ensure all screws are fully tightened. Place the arch on a flat, level surface. For outdoor use, add sandbags or weights to the base.
Difficulty connecting tubes.	Misalignment or debris in the tube ends.	Check for proper alignment of the tubes and ensure no debris is obstructing the connection points. Apply gentle, even pressure.
Missing parts upon arrival.	Packaging error.	Contact Wokceer customer support with your order details for assistance.

## SPECIFICATIONS

---

- **Brand:** Wokceer
- **Model Number:** LKW-DoorArch-7.2FT-Gold-D
- **Color:** Gold
- **Size (HxW):** 7.2 x 4 FT
- **Item Weight:** 6.04 pounds (2.74 Kilograms)
- **Material:** Quality Anti-Rust Metal
- **Number of Components:** 17 (as listed in Package Contents)

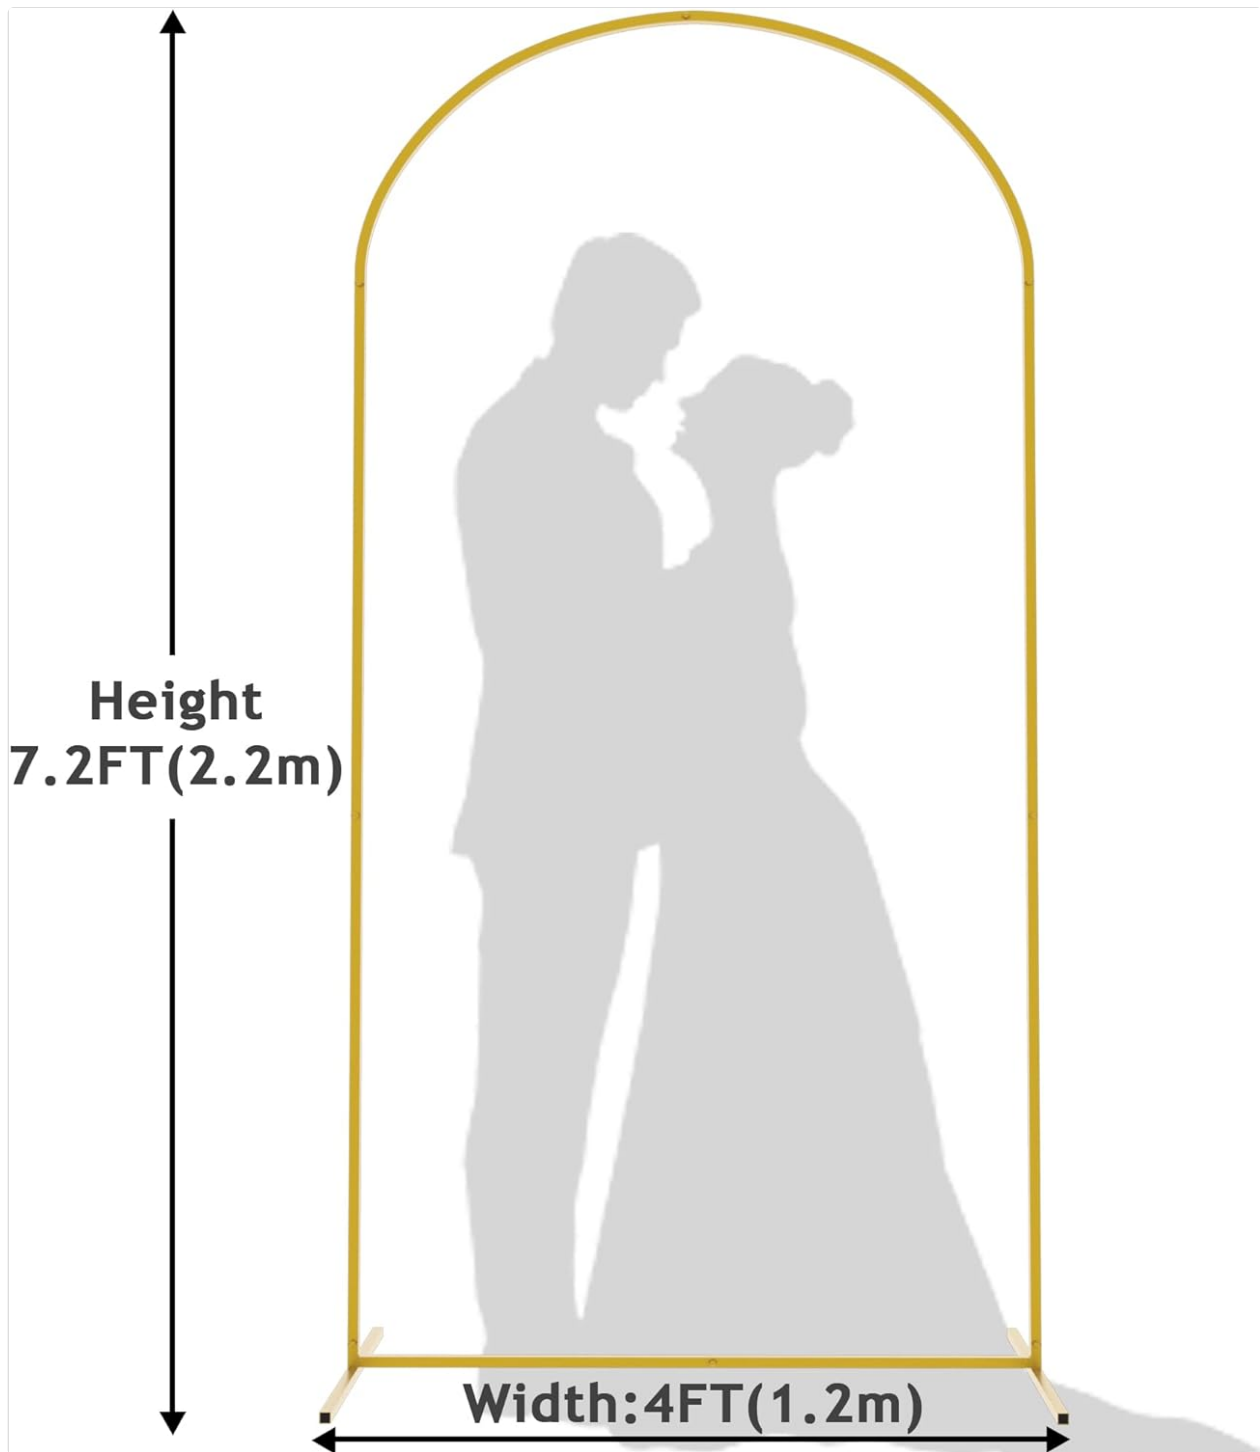 


Figure 5: Arch Stand Dimensions

## WARRANTY AND SUPPORT

---

For any questions, concerns, or issues regarding your Wokceer Gold Metal Arch Backdrop Stand, please contact Wokceer customer support. Refer to your purchase documentation for specific warranty information and contact details.