

[Manuals.plus](#) /

› [DJI](#) /

› DJI Osmo Action Multifunctional Battery Case User Manual

DJI CP.OS.00000230.01

DJI Osmo Action Multifunctional Battery Case User Manual

Model: CP.OS.00000230.01

1. INTRODUCTION

This user manual provides essential information for the safe and effective operation of your DJI Osmo Action Multifunctional Battery Case. Please read this manual thoroughly before use and retain it for future reference.

The DJI Osmo Action Multifunctional Battery Case is designed to store, charge, and manage up to three Osmo Action Extreme Batteries. It also functions as a power bank to charge other devices and provides storage for two microSD cards.

Compatibility: This battery case is compatible with Osmo Action 3 and Osmo Action 4 cameras and their respective Osmo Action Extreme Batteries. It is **not** compatible with the Osmo Action Extreme Battery Plus (1950 mAh).

2. SAFETY GUIDELINES

- Do not disassemble, repair, or modify the battery case.
- Avoid exposing the battery case to water or other liquids.
- Do not use the battery case in environments with extreme temperatures or high humidity.
- Keep out of reach of children.
- Use only compatible batteries (Osmo Action Extreme Battery) with this case.
- Ensure proper ventilation during charging.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of the DJI Osmo Action Multifunctional Battery Case.



Figure 3.1: Front view of the closed battery case, showing the power button and three indicator lights.



Figure 3.2: Top-down view of the battery case with the lid open, showing three battery slots and indicator lights. Batteries are inserted.



Figure 3.3: Side view of the closed battery case, highlighting the USB-C charging port.

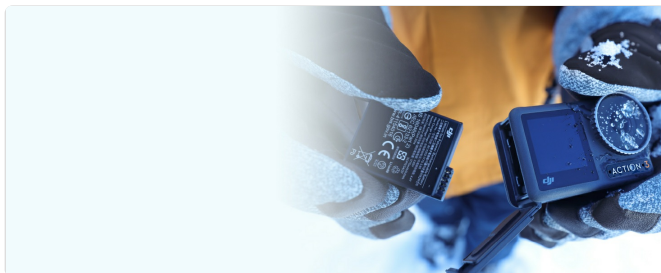


Figure 3.4: Illustrative image showing a battery being handled, similar to how it would be inserted into the battery case or camera.

Components:

- **Battery Slots (x3):** For Osmo Action Extreme Batteries.

- **MicroSD Card Slots (x2):** For storing memory cards.
- **Power Button:** Activates charging and power bank functions.
- **Indicator Lights (x3):** Show charging status and battery levels for each slot.
- **USB-C Port:** For charging the case and connected batteries, and for power bank output.

4. SETUP

4.1 Inserting Batteries and MicroSD Cards

1. Open the lid of the Multifunctional Battery Case.
2. Align the Osmo Action Extreme Batteries with the battery slots and gently push them in until they click into place. Ensure the battery contacts align with the case contacts.
3. If desired, insert microSD cards into the dedicated slots.
4. Close the lid securely.

4.2 Initial Charge

Before first use, it is recommended to fully charge the battery case and any inserted batteries.

1. Connect the USB-C port of the battery case to a USB power adapter (not included) using a USB-C cable.
2. The indicator lights will illuminate to show the charging status.
3. Charging is complete when all indicator lights are solid green.

5. OPERATING INSTRUCTIONS

5.1 Charging Batteries

The battery case intelligently fast charges up to three Osmo Action Extreme Batteries.

- Insert batteries into the slots as described in Section 4.1.
- Connect the battery case to a power source via the USB-C port.
- The indicator lights correspond to each battery slot:
 - **Blinking Green:** Charging in progress.
 - **Solid Green:** Battery fully charged.
 - **Blinking Red:** Charging error (e.g., incompatible battery, abnormal temperature).

5.2 Using as a Power Bank

The battery case can utilize the power from its inserted batteries to charge external devices, such as smartphones.

1. Ensure there are charged batteries inside the case.
2. Connect your external device to the USB-C port of the battery case using an appropriate cable.
3. The battery case will automatically begin charging the connected device.
4. The indicator lights will show the remaining power of the batteries within the case.

5.3 Checking Battery Level

Press the power button once to check the battery level of the inserted batteries. The indicator lights will briefly illuminate to show their respective charge status.

6. MAINTENANCE

- Clean the battery case with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Keep the charging contacts clean and free of debris.
- Store the battery case in a cool, dry place when not in use.
- If storing for extended periods, ensure batteries are charged to approximately 50-60% to prolong their lifespan.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Case not charging / Batteries not charging	Loose cable connection; Incompatible power adapter; Faulty cable; Incompatible battery.	Check cable connections; Use a compatible USB power adapter; Try a different USB-C cable; Ensure only Osmo Action Extreme Batteries are used.
Indicator lights blinking red	Battery error; Over-temperature; Under-temperature.	Remove and reinsert battery; Allow case to return to normal operating temperature; If problem persists, contact support.
Power bank function not working	No charged batteries in case; External device not compatible; Faulty cable.	Ensure batteries are charged; Try charging a different device; Use a different USB-C cable.

8. SPECIFICATIONS

Feature	Detail
Model Number	CP.OS.00000230.01
Dimensions (L×W×H)	116.2 × 59.2 × 22.9 mm (4.57 × 2.33 × 0.9 inches)
Weight	Approximately 3.53 ounces (100g)
Compatibility	DJI Osmo Action 3, DJI Osmo Action 4, Osmo Action Extreme Battery
Battery Slots	3
MicroSD Card Slots	2
Input/Output Port	USB-C

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official DJI website or contact their customer service directly. Keep your proof of purchase for warranty claims.

Online Support: www.dji.com/support

10. OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were provided in the available data for this product. Please visit the official DJI website or their authorized channels for any available video resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B8ZMG2PL>

More documents and user manuals: <https://manuals.plus/>