

Unicom 67986

Unicom Rechargeable Lantern User Manual

Model: 67986

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Unicom Rechargeable Lantern. Designed for versatility, this lantern is equipped with powerful 3W LEDs, making it ideal for various applications such as camping, DIY projects, fishing, emergency lighting during power cuts, or as a general back-up light source.

The Unicom Rechargeable Lantern (Model: 67986) is built for convenience and reliability. It can be used free-standing, hung, or carried, adapting to your specific lighting needs.

2. SETUP

2.1 Unpacking

Carefully remove the lantern from its packaging. Ensure all components are present: the Unicom Rechargeable Lantern and its charging cable (if included separately).





Figure 1: Front view of the Unicom Rechargeable Lantern, showing the main LED panel and control buttons.

2.2 Initial Charging

Before first use, fully charge the lantern. The lantern is powered by a Lithium Ion battery.

1. Locate the charging port on the lantern.
2. Connect the provided charging cable to the lantern and plug the other end into a suitable AC power source.

3. The charging indicator light (if present) will illuminate, typically red, during charging and turn green when fully charged.
4. Allow sufficient time for a full charge.

Note: It is recommended to fully charge the battery every 3 months if the lantern is not in regular use to maintain battery health.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off

To turn the lantern on, press the power button located on the front of the unit. Press the button again to cycle through different lighting modes (if available) or to turn the lantern off.





Figure 2: Side view of the Unicom Rechargeable Lantern, showing the handle in an upright position for carrying or hanging.

3.2 Usage Modes

- **Free-standing:** Place the lantern on a flat, stable surface.
- **Hanging:** Utilize the integrated handle or hook at the top of the lantern to hang it from a suitable fixture.
- **Carried:** Use the sturdy handle for portable illumination.

The lantern provides 44.4 lumens of brightness, suitable for illuminating small to medium-sized areas.

4. MAINTENANCE

4.1 Cleaning

Wipe the exterior of the lantern with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the plastic housing. Ensure the charging port is clean and free of debris.

4.2 Battery Care

- Avoid fully discharging the battery frequently to prolong its lifespan.
- Store the lantern in a cool, dry place when not in use.
- Recharge the battery periodically (e.g., every 3 months) even if not used, to prevent deep discharge.

4.3 Water Resistance

The lantern is water resistant. This means it can withstand splashes or light rain, but it should not be submerged in water.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lantern does not turn on.	Battery is depleted.	Charge the lantern fully.
Light is dim.	Low battery charge.	Recharge the lantern.
Charging indicator not working.	Charging cable or adapter issue.	Ensure cable is securely connected. Try a different compatible charging cable or power adapter.

6. SPECIFICATIONS

Feature	Detail
Model Number	67986
Brand	Unicom
Light Source Type	Light Emitting Diode (LED)
Brightness	44.4 lumens
Light Source Wattage	3.7 Watts
Battery Type	Lithium Ion (1 included)
Voltage	3.7 Volts
Power Source	AC
Material	Plastic
Colour	Black
Item Weight	0.56 Kilograms (560 g)
Mounting Type	Floor Mount, Hanging Mount, Tabletop Mount
Water Resistance Level	Water Resistant
Manufacturer	Decco

7. WARRANTY AND SUPPORT

Specific warranty information for the Unicom Rechargeable Lantern (Model: 67986) is not provided in the product details. Please refer to the retailer's return policy or contact the manufacturer, Decco, for detailed warranty terms and customer support inquiries.

For further assistance, please contact the point of purchase or visit the official Unicom website (if available).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question