

[Manuals.plus](#) /

› [Novelty Lights](#) /

› Novelty Lights Mini GOBO RGB Party Light User Manual

Novelty Lights MINI GOBO RGB (Model: DISCO-PARTY-GOB)

Novelty Lights Mini GOBO RGB Party Light

User Manual

PRODUCT OVERVIEW

The Novelty Lights Mini GOBO RGB Party Light is a portable LED lighting unit designed to create dynamic light effects. It features a unique GOBO light effect with RGB colors and can operate in sound-activated mode. This light can function as a standalone unit or integrate with the Novelty Lights LED DJ GigBar Set (sold separately) for synchronized lighting.



Figure 1: Front view of the Mini GOBO RGB Party Light, showing the light unit, USB power cable, and wall adapter.

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove the Mini GOBO RGB Party Light and all accessories from its packaging. Verify that all components are present: the light unit, USB power cord, and wall adapter.
2. **Power Connection:** Connect the provided USB power cord to the light unit's USB port. Plug the other end of the USB cable into the included wall adapter, then plug the adapter into a standard electrical outlet (5 Volts DC).
3. **Placement:**
 - **Standalone Use:** Place the light on a stable, flat surface. The unit is designed for floor mounting. Ensure adequate ventilation around the unit.
 - **Integration with GigBar Set:** If integrating with a Novelty Lights LED DJ GigBar Set, follow the GigBar Set's instructions for mounting and connection. This unit is designed to work in sync with GigBar functions.



Figure 2: Rear view of the Mini GOBO RGB Party Light, highlighting the power input, microphone for sound activation, and control switch.

OPERATING INSTRUCTIONS

The Mini GOBO RGB Party Light offers various operating modes for versatile lighting effects.

- **Power On/Off:** Once connected to power, the unit will automatically power on. To turn off, disconnect from the power source.
- **Mode Selection:** Locate the switch on the rear of the unit (refer to Figure 2).
 - **"R.GBB" Mode:** This mode activates the RGB (Red, Green, Blue) GOBO light effects with automatic pattern changes.
 - **"AUTO SOUND" Mode:** In this mode, the light patterns and colors will react to ambient sound and music, utilizing the built-in microphone. Adjust the sensitivity using the "MIN" dial next to the switch.
- **Light Effects:** The unit projects unique GOBO patterns in various RGB color combinations, creating a dynamic visual display.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Mini GOBO RGB Party Light.

- **Cleaning:**

- Before cleaning, ensure the unit is disconnected from the power source.
- Wipe the exterior casing with a soft, dry cloth.
- For the lens, use a soft, lint-free cloth specifically designed for optical surfaces. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the light in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it in its original packaging or a protective case to prevent dust accumulation and damage.
- **Ventilation:** Ensure the ventilation openings on the unit are not blocked during operation to prevent overheating.

TROUBLESHOOTING

If you encounter issues with your Mini GOBO RGB Party Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply or faulty connection.	• Ensure the USB power cord is securely connected to both the light unit and the wall adapter. • Verify the wall adapter is firmly plugged into a working electrical outlet. • Try a different USB port or wall outlet.
Sound-activated mode not responding.	Insufficient sound input or incorrect sensitivity setting.	• Ensure the unit is set to "AUTO SOUND" mode. • Increase the sensitivity using the "MIN" dial on the rear of the unit. • Place the light closer to the sound source. • Ensure the microphone opening is not obstructed.
Light patterns are static or not changing.	Incorrect mode selected.	• Verify the unit is set to "R.GBB" or "AUTO SOUND" mode for dynamic effects. • If in "AUTO SOUND" mode, ensure there is sufficient sound input.

SPECIFICATIONS

Feature	Detail
Model Name	MINI GOBO RGB
Item Model Number	DISCO-PARTY-GOB
Brand	Novelty Lights
Light Source Type	LED
Bulb Features	LED, RGB, Sound Activated
Power Source	Corded Electric
Voltage	5 Volts (DC)
Material	Plastic
Finish Type	Painted
Shape	Rectangular

Feature	Detail
Mounting Type	Floor Mount
Product Dimensions	7.5 x 6.5 x 5 inches
Item Weight	1.7 Pounds
UPC	689466926583
Manufacturer	Noveltylights.com

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Novelty Lights Mini GOBO RGB Party Light, please contact Novelty Lights directly.

You can visit their official website or refer to the contact information provided with your purchase documentation.

Note: Specific warranty terms may vary and are typically provided at the time of purchase.

© 2024 Novelty Lights. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question