

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [OlarHike](#) /

› [OlarHike Queen Air Mattress User Manual](#)

OlarHike AMM5V106

OlarHike Queen Air Mattress User Manual

Model: AMM5V106 | Brand: OlarHike

INTRODUCTION

Thank you for choosing the OlarHike Queen Air Mattress. This manual provides essential information for the safe and efficient use of your airbed. Please read it thoroughly before initial use and retain it for future reference.



The OlarHike Queen Air Mattress, featuring a built-in pump and included storage bag, ready for use.

The OlarHike Queen Air Mattress is designed for comfort and convenience, suitable for indoor and outdoor use, including camping, accommodating guests, or during relocation. It features a built-in electric pump for quick inflation and deflation, enhanced air coil support for even weight distribution, and durable, waterproof materials.

IMPORTANT SAFETY WARNINGS

To ensure your safety and prolong the life of your air mattress, please adhere to the following warnings:

- **Placement:** Make sure the airbed is laid on a level surface free from stones and sharp objects. The bed may tip over on uneven surfaces.
- **Pump Operation:** Never run the pump for longer than 10 minutes at a time. Allow the motor to cool down for 7 minutes before using it again. Disconnect the plug when the pump is not in use.
- **Inflation:** Do not overinflate the airbed. Stop inflating once the airbed is fully expanded and firm.
- **Valve Position:** When fully inflated, ALWAYS turn the valve at the pump to the OFF (middle) position to prevent deflation.

- **Moisture:** Do not expose the electric pump to moisture.
- **Risk of Suffocation (0-15 Months):** Infants have suffocated on inflatable mattresses. Never place an infant 0-15 months old to sleep on this inflatable mattress.
- **Not a Life Saving Device:** This product is not a personal flotation device. Do not use in water.
- **Sharp Objects:** Do not place airbed on abrasive surfaces or in contact with sharp or pointed objects.

2 Fast Inflation/Deflation Methods

Adjust Inflation To Desired Firmness



**As the PVC stretches and the volume adjusts with new mattresses, air beds may tend to soften the first 2-3 times of inflation. This is normal and is not due to air leakage.*



Built-in 110V pump inflates in 2-3 minutes. Deflates in 3 minutes



Manual air valve for outdoor inflation. *Manual pump not included.

Warning labels on the side of the air mattress, including important safety information and material details.

SETUP GUIDE

Unpacking and Preparation

1. Remove the air mattress from its storage bag.
2. Unroll the air mattress and lay it flat on a clean, level surface, free from any sharp objects or debris.
3. Locate the built-in pump on the side of the mattress.
4. Ensure the manual air valve (if present) is securely closed by firmly pushing the flap into the bed.

Inflation using Built-in Pump

1. Uncoil the power cord from its storage compartment on the left side of the pump.
2. Plug the power cord into a standard 110V electrical outlet.
3. Turn the pump dial counter-clockwise to the "INFLATE" position. The pump will begin to inflate the mattress.
4. Allow the mattress to inflate to your desired firmness. Inflation typically takes 2-3 minutes for a Queen size.
5. Once inflated, turn the pump dial to the "OFF" (middle) position.
6. Unplug the power cord and store it back in its compartment.

Built For Comfort & Made To Last



0.2 mm Ultra Soft
Flocking Top Layer



Durable PVC Material
Premium Stitching Prevents
Air Leakage



Anti-slip Bottom Layer

Illustration of the built-in 110V pump for quick inflation and deflation, and the manual air valve for alternative inflation (manual pump not included).

Inflation using Manual Air Valve (Optional)

If an external manual pump is preferred or necessary, locate the manual air valve on the mattress. Open the valve and use a compatible manual pump to inflate the mattress. Close the valve securely once inflated.

OPERATING INSTRUCTIONS

Adjusting Firmness

You can adjust the firmness of the air mattress by adding or releasing small amounts of air. To add air, briefly turn the pump dial to "INFLATE". To release air, briefly turn the pump dial to "DEFLATE" until the desired firmness is achieved, then return the dial to "OFF".

Deflation

1. Ensure the power cord is plugged into an electrical outlet.
2. Turn the pump dial clockwise to the "DEFLATE" position. The pump will begin to deflate the mattress.
3. Allow the mattress to fully deflate. This process typically takes about 3 minutes.
4. Once deflated, turn the pump dial to the "OFF" (middle) position.
5. Unplug the power cord and store it back in its compartment.

MAINTENANCE AND CARE

Cleaning

The OlarHike air mattress is crafted from durable, lightweight, and waterproof materials, making it easy to clean. To clean, simply wipe the surface with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Ensure the mattress is completely dry before storing.



The air mattress surface is easy to clean with a damp cloth and is waterproof, making it suitable for various environments.

Storage

For optimal storage and longevity, follow these steps:

1. Ensure the air mattress is completely deflated and dry.
2. Fold the mattress neatly. Start by folding it lengthwise, then roll it tightly from the end opposite the pump.
3. Place the folded mattress into the provided carry bag.
4. Store the air mattress in a cool, dry place, away from direct sunlight and extreme temperatures.

Comfort & Convenience

Perfect For Outdoor/Camping Use



Easy To Clean

Waterproof

Visual guide for fast packing and lightweight storage of the air mattress, showing the folding process and placement into the carry bag.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mattress deflates slowly or loses air.	Manual valve not securely closed; small puncture or leak.	Ensure the manual valve is firmly pushed into the bed. Check for punctures and use the included repair patch if necessary.
Mattress softens after first few uses.	New PVC material stretching.	This is normal. The material will stretch and adjust. Simply add more air to achieve desired firmness. This is not due to air leakage.
Pump not operating.	Power cord not plugged in; pump overheated.	Ensure the power cord is securely plugged into a working outlet. If the pump has been running for more than 10 minutes, allow it to cool down for 7 minutes before attempting to use it again.

PRODUCT SPECIFICATIONS

Feature	Detail
Size	Queen
Dimensions (L x W x Th)	80" x 60" x 13"
Built-in Pump	110V Electric Pump
Inflation Time	2-3 minutes (Queen)
Deflation Time	Approx. 3 minutes
Weight Capacity	Up to 600 lbs
Top Material	Soft Flocked Top (0.2 mm Ultra Soft Flocking Top Layer)
Bottom Layer	Anti-slip Bottom Layer
Construction	Durable PVC Material, Enhanced Circular Air Coils (35 coils)

Feature	Detail
Water Resistance	Waterproof
Included Components	User Guide, Carry Bag, Repair Patch, Manual Inflator Valve, Queen Air Mattress With Built In Pump

35 Enhanced Circular Air Coils

Provides Firm Full Body Support,
Increased Comfort & Prevents Air Leakage



35 Circle air coils prevents air leaking,
and provides full-body support.

The OlarHike Queen Air Mattress dimensions: 80"L x 60"W x 13"Th, with a maximum weight capacity of 600 lbs.

Queen Size

Same Size As A Traditional
Queen Size Mattress



Internal structure of the air mattress highlighting the 35 enhanced circular air coils that provide firm full body support and prevent air leakage.

WARRANTY AND SUPPORT

Manufacturer's Warranty

The OlarHike Queen Air Mattress comes with a **one-year non-transferrable limited warranty** from the manufacturer. This warranty covers defects in materials and workmanship under normal use. Please retain your

proof of purchase for warranty claims.

Customer Support

For any questions, concerns, or assistance with your OlarHike air mattress, please contact OlarHike customer support. Refer to the product packaging or the official OlarHike website for contact information.

A digital version of this user guide is available for download: [OlarHike Queen Air Mattress User Guide \(PDF\)](#)