

Cecotec Conga Rockstar 880 Advance

Cecotec Conga Rockstar 880 Advance Cordless Stick Vacuum Cleaner User Manual

Model: Conga Rockstar 880 Advance

[Components](#) [Introduction](#) [Safety Instructions](#) [Package Contents](#) [Product Specifications](#) [Warranty & Support](#)
[Assembly](#) [Operation](#) [Maintenance](#) [Troubleshooting](#)

1. INTRODUCTION

Thank you for choosing the Cecotec Conga Rockstar 880 Advance Cordless Stick Vacuum Cleaner. This 3-in-1 vertical, stick, and handheld vacuum cleaner is designed for efficient and versatile cleaning across various surfaces. It features a powerful digital brushless motor, a high suction capacity, and a long-lasting battery, making it an ideal solution for maintaining a clean home. This manual provides essential information for safe operation, assembly, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all safety warnings and instructions carefully before using this appliance. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- This appliance is intended for household use only. Do not use it for commercial or industrial purposes.
- Do not use the vacuum cleaner to pick up water or any other liquids, hot ashes, burning cigarette butts, sharp objects, or hazardous materials.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Ensure the dust tank and filters are correctly installed before use.
- Do not operate the vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped into water.
- Use only the original charger provided with the appliance.
- Do not charge the battery in temperatures below 0°C (32°F) or above 40°C (104°F).
- Unplug the charger from the power outlet when not in use and before cleaning or performing maintenance.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, contact Cecotec customer service immediately.

- 1 x Digital Vertical Vacuum Cleaner Unit
- 1 x Jalisco Brush
- 1 x Multifunction Brush
- 1 x Corner Accessory
- 1 x Furniture Accessory
- 1 x Upholstery Accessory
- 1 x Wall Mount
- 1 x Power Adapter
- 1 x Instruction Manual

4. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Conga Rockstar 880 Advance vacuum cleaner and its accessories.



Figure 4.1: Overview of the Cecotec Conga Rockstar 880 Advance cordless stick vacuum cleaner, showcasing the main unit and its included accessories such as the Jalisco brush, multifunction brush, corner tool, and upholstery tool.



Figure 4.2: A detailed view of the vacuum cleaner's digital display, which shows battery level and selected operating mode, providing real-time information during use.



Figure 4.3: The vacuum cleaner configured in handheld mode, demonstrating its versatility for cleaning upholstery and hard-to-reach areas like sofas and cushions.



Figure 4.4: A user demonstrating the Cecotec Conga Rockstar 880 Advance in stick vacuum mode, effectively cleaning a hard floor area, highlighting its maneuverability and ease of use for general floor cleaning.



Figure 4.5: An arrangement of the vacuum cleaner's accessories, including the main brush head, different brush rollers (Jalisco and multifunction), and smaller tools for specialized cleaning tasks.

5. ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Extension Tube:** Insert the top end of the extension tube into the main motor unit until it clicks securely into place.
2. **Connect the Floor Brush:** Attach the desired floor brush (Jalisco or Multifunction) to the bottom end of the extension tube. Ensure it clicks firmly into position.
3. **Install Wall Mount (Optional):** If you wish to use the wall mount for storage and charging, select a suitable location near a power outlet. Mark and drill holes, then secure the mount to the wall using the provided screws and anchors.

For handheld use, simply detach the extension tube and floor brush from the main motor unit and attach the desired accessory directly to the motor unit.

6. CHARGING THE BATTERY

Before first use, fully charge the vacuum cleaner's battery. The battery takes approximately 5 hours to fully charge.

- Connect the power adapter to the charging port on the main motor unit.
- Plug the power adapter into a wall outlet.
- The digital display will indicate the charging status. When fully charged, the display will show 100%.
- For optimal battery life, avoid completely draining the battery before recharging.

7. OPERATION

7.1 Powering On/Off

- To turn on the vacuum cleaner, press the power button located on the handle.
- To turn off the vacuum cleaner, press the power button again.

7.2 Operating Modes

The Conga Rockstar 880 Advance offers three operating modes to suit different cleaning needs:

- **Eco Mode:** Provides the longest battery life (up to 100 minutes) with sufficient suction for light cleaning and daily maintenance on hard floors. Ideal for maximizing runtime.
- **Daily Mode:** Offers a balanced combination of efficiency and suction power for everyday cleaning tasks. Suitable for various surfaces and moderate dirt.
- **Turbo Mode:** Delivers maximum suction power (30 kPa, 150 aW) for deep cleaning, tackling stubborn dirt, and vacuuming carpets. This mode consumes more battery power.

To switch between modes, press the mode selection button on the digital display. The current mode will be indicated on the display.

7.3 Using Accessories

The included accessories enhance the vacuum cleaner's versatility:

- **Jalisco Brush:** Designed for hard floors, this brush effectively picks up fine dust and larger debris without scratching surfaces.
- **Multifunction Brush:** Suitable for both hard floors and carpets, providing versatile cleaning performance.
- **Corner Accessory:** Ideal for cleaning narrow gaps, corners, and edges.
- **Furniture Accessory:** Use for delicate surfaces, furniture, and shelves.
- **Upholstery Accessory:** Perfect for cleaning sofas, chairs, and other fabric surfaces.

To attach an accessory, ensure the vacuum is off. Remove any currently attached tools and firmly insert the desired accessory until it clicks into place.

8. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

8.1 Emptying the Dust Bin

Empty the dust bin after each use or when the MAX fill line is reached.

1. Ensure the vacuum cleaner is turned off.

2. Press the dust bin release button and remove the dust bin from the main unit.
3. Open the dust bin lid and empty the contents into a waste bin.
4. Close the lid and reattach the dust bin to the main unit until it clicks.

8.2 Cleaning Filters

Clean the filters regularly to maintain suction power. It is recommended to clean them monthly, or more frequently with heavy use.

1. Remove the dust bin as described above.
2. Twist and pull out the filter assembly from the dust bin.
3. Separate the foam filter and the HEPA filter.
4. Tap the filters gently to remove loose dust. For a deeper clean, rinse them under cold running water.
5. Allow filters to air dry completely for at least 24 hours before reassembling and placing them back into the vacuum cleaner. Do not use a dryer or direct heat.

8.3 Cleaning Brushes

Periodically check the brush rollers for tangled hair or debris.

1. Ensure the vacuum cleaner is off and disconnected from the extension tube.
2. Locate the brush release tab on the side of the floor brush head.
3. Remove the brush roller.
4. Use scissors or a brush cleaning tool to cut and remove any tangled hair or fibers.
5. Reinsert the brush roller until it clicks into place.

9. TROUBLESHOOTING

If you encounter any issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is depleted.	Charge the battery fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Low suction power.	Dust bin is full.	Empty the dust bin.
	Filters are clogged.	Clean or replace the filters.
	Brush roller is tangled or blocked.	Remove debris from the brush roller.
	Hose or extension tube is blocked.	Check for and remove any blockages.
Short battery runtime.	Using Turbo mode excessively.	Use Eco or Daily mode for longer runtime.
	Battery not fully charged.	Ensure the battery is fully charged before use.

If the problem persists after trying these solutions, please contact Cecotec customer support.

10. SPECIFICATIONS

Feature	Detail
Model Number	Conga Rockstar 880 Advance
Type	3-in-1 Cordless Stick Vacuum Cleaner
Motor Type	Digital Brushless Motor
Power	480 W (ForceSonic)
Suction Power	30 kPa
Air Watts (aW)	150 aW (Typhoon System)
Battery Type	Lithium-ion
Battery Voltage	37 V
Battery Capacity	2500 mAh
Runtime	Up to 100 minutes (Eco Mode)
Charging Time	Approx. 5 hours
Dust Bin Capacity	700 Milliliters
Operating Modes	Eco, Daily, Turbo (3 speeds)
Noise Level	62 dB
Dimensions (L x W x H)	24 x 27 x 122.5 cm
Weight	3.25 Kilograms
Filter Type	Disk (Cyclonic System)
Special Features	Digital Display, 360° Design, Auto Carpet (implied by multifunction brush)

11. WARRANTY AND SUPPORT

Cecotec products are manufactured to the highest quality standards. This product is covered by a warranty in accordance with the legal provisions in force in each country. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Cecotec website.

For technical assistance, spare parts, or any inquiries regarding your Cecotec Conga Rockstar 880 Advance, please contact Cecotec customer support through their official channels. When contacting support, please have your product model number (Conga Rockstar 880 Advance) and purchase details ready.

Cecotec Official Website: www.cecotec.com

Related Documents

	<p>Manual de Instrucciones Conga Rockstar 2500 Thunder Jalisco</p> <p>Guía completa de instrucciones para el aspirador vertical Conga Rockstar 2500 Thunder Jalisco de Cecotec. Aprenda a usar, limpiar y mantener su aspirador para un rendimiento óptimo.</p>
	<p>Cecotec Conga Rockstar 3000 Advance ErgoWet: Посібник користувача</p> <p>Повний посібник користувача для пилососа Cecotec Conga Rockstar 3000 Advance ErgoWet. Дізнайтеся про функції, експлуатацію, обслуговування та усунення несправностей.</p>
	<p>Cecotec Conga Rockstar 6500 Century ErgoWet Animal Instruction Manual</p> <p>Comprehensive instruction manual for the Cecotec Conga Rockstar 6500 Century ErgoWet Animal upright vacuum cleaner, covering safety, assembly, operation, cleaning, maintenance, and troubleshooting.</p>
	<p>Conga Rockstar Wet & Dry Compact Garden Plus Vacuum Cleaner - User Manual Cecotec</p> <p>Official user manual for the Cecotec Conga Rockstar Wet & Dry Compact Garden Plus vacuum cleaner (Model: EU01_100012). Provides detailed instructions on safety, assembly, operation, cleaning, maintenance, troubleshooting, technical specifications, and disposal.</p>

Documents - Cecotec – Conga Rockstar 880 Advance



[\[pdf\]](#) Catalog

Cecotec Tienda Oficial Envío Gratis Mejor Precio Catalogo Conga Rockstar CECOTEC EN cdn cecotec cloud media IFA2022 en |||

R O C K S T A R Upright vacuum cleaners Power to infinity and beyond Conga RockStar is a terrific c ... 7 Conga Rockstar 880 Ultimate 18 Conga Rockstar 880 X-Treme 19 Conga Rockstar 880 Titanium 20 **Conga Rockstar 880 Advance** 21 Conga RockStar 880 X-Treme ErgoFlex 22 Conga Rockstar 880 Ultima...

lang:en score:22 filesize: 19.76 M page_count: 31 document date: 2022-08-24



[\[pdf\]](#)

ROCKSTAR Upright vacuum cleaners Conga RockStar is a terrific cleaning experience Cordless ultra power that reaches 230 airwatts* artificial intelligence makes decisions to maximise C13Zu0DBfcl m media amazon images I |||

R O C K S T A R Upright vacuum cleaners Power to infinity and beyond Conga RockStar is a terrific c ... 7 Conga Rockstar 880 Ultimate 18 Conga Rockstar 880 X-Treme 19 Conga Rockstar 880 Titanium 20 **Conga Rockstar 880 Advance** 21 Conga RockStar 880 X-Treme ErgoFlex 22 Conga Rockstar 880 Ultima...

lang:en **score:15** filesize: 5.77 M page_count: 31 document date: 2023-04-19