

[manuals.plus](#) /

› [Tronsmart](#) /

› [Tronsmart Bang Mini Portable Bluetooth Speaker User Manual](#)

Tronsmart Bang Mini

Tronsmart Bang Mini Portable Bluetooth Speaker User Manual

Model: Bang Mini | Brand: Tronsmart

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Tronsmart Bang Mini Portable Bluetooth Speaker. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.



Image: The Tronsmart Bang Mini Portable Bluetooth Speaker, a compact and robust audio device with integrated handle and control panel.

PACKAGE CONTENTS

Please check the package for the following items:

- Tronsmart Bang Mini Portable Bluetooth Speaker
- USB-C Charging Cable
- AUX Cable
- User Manual (this document)

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. The built-in 8000mAh (7.4V 4000mAh) battery provides up to 15 hours of playtime on a single charge. Charging typically takes about 4 hours.

1. Connect the provided USB-C charging cable to the Type-C Charging port on the speaker.
2. Connect the other end of the USB-C cable to a compatible USB power adapter (not included).
3. The charging indicator lights will show the charging status.

15H PLAYTIME

As a **8000mAh** power bank to charge your smart device



Image: Rear view of the Tronsmart Bang Mini showing the USB interface, audio jack, TF card slot, and Type-C charging port. The speaker can also function as a power bank to charge other devices.

2. Power On/Off

To power on or off the speaker, press and hold the Power button for 2 seconds.

Your browser does not support the video tag.

Video: Demonstrates how to power on/off the Tronsmart Bang Mini speaker. (Relevant segment: 0:01 - 0:06)

3. Bluetooth Pairing

The Tronsmart Bang Mini uses Bluetooth 5.3 for a stable connection. Follow these steps to pair your device:

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing blue light).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for "Tronsmart Bang Mini".
3. Select "Tronsmart Bang Mini" from the list of available devices to connect. You will hear an audible prompt upon successful connection.

For quick pairing, the speaker also supports NFC. Simply tap your NFC-enabled device to the NFC area on the speaker to establish a connection.

Your browser does not support the video tag.



Image: A hand holding a smartphone near the Tronsmart Bang Mini speaker, illustrating the NFC seamless connection feature.

Your browser does not support the video tag.

OPERATING INSTRUCTIONS

1. Music Playback Controls

- **Play/Pause:** Press the Play/Pause button once to play or pause music.
- **Volume Up:** Press the '+' button once to increase volume.
- **Volume Down:** Press the '-' button once to decrease volume.
- **Next Track:** Press and hold the '+' button for 2 seconds to skip to the next track.
- **Previous Track:** Press and hold the '-' button for 2 seconds to skip to the previous track.

Your browser does not support the video tag.

Video: Demonstrates music playback controls including play/pause, volume adjustment, and track skipping. (Relevant segments: 0:29 - 0:47)

2. Light Modes

The Tronsmart Bang Mini features a beat-driven light show with two customizable LED modes: circling and breathing. The breathing light mode is only available in standby mode.

- Press the 'Light Switch' button once to switch between the available lighting modes.

Beat-driven Light Show

Freely switch pulsing & circling style



Image: The Tronsmart Bang Mini speaker with its beat-driven light show active, illuminating a party setting.

Your browser does not support the video tag.

Video: Demonstrates how to switch between the different lighting modes on the Tronsmart Bang Mini. (Relevant segment: 0:13 - 0:19)

3. SoundPulse EQ Mode

The SoundPulse EQ mode enhances audio output, providing rich-detailed audio with superior clarity.

- Press the 'SoundPulse' button once to enter or exit SoundPulse EQ Mode.

Your browser does not support the video tag.

Video: Demonstrates how to activate and deactivate SoundPulse EQ mode. (Relevant segment: 0:24 - 0:28)

4. Voice Assistant

Activate your device's voice assistant (Siri, Cortana, Google Assistant) through the speaker.

- Double press the 'Play/Pause' button to activate the voice assistant.

Your browser does not support the video tag.

Video: Demonstrates how to activate the voice assistant feature. (Relevant segment: 0:49 - 0:53)

5. Call Management

- **Answer/End Call:** Press the 'Play/Pause' button once to answer or end a phone call.
- **Reject Call:** Press and hold the 'Play/Pause' button for 2 seconds to reject an incoming phone call.

Your browser does not support the video tag.

Video: Demonstrates how to answer, end, and reject phone calls using the speaker controls. (Relevant segments: 0:56 - 1:07)

6. True Wireless Stereo (TWS) Pairing

You can pair two Tronsmart Bang Mini speakers together to achieve 100W powerful stereo sound for an immersive audio experience.

1. Ensure both speakers are powered on and disconnected from any devices.
2. Press the 'Stereo Pairing' button once on either speaker to enter stereo pairing mode. The speakers will automatically connect to each other.
3. Once successfully paired, you will hear a prompt.
4. Search and click 'Tronsmart Bang Mini' on your device's Bluetooth settings to pair.
5. To exit stereo pairing mode, press the 'Stereo Pairing' button once on either speaker.

True Wireless Stereo Pairing

Pair 2 speakers to get 100W
Powerful Stereo Sound



Image: Two Tronsmart Bang Mini speakers wirelessly connected, demonstrating the True Wireless Stereo pairing feature for enhanced sound.

Your browser does not support the video tag.

Video: Demonstrates how to enter and exit Stereo Pairing Mode with two Tronsmart Bang Mini speakers. (Relevant segments: 1:27 - 1:59)

MAINTENANCE

1. Cleaning

To maintain the appearance and functionality of your speaker, clean it regularly:

- Use a soft, dry cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, alcohol, benzene, or other chemicals, as these may damage the surface or the protective coating.

2. Water Resistance (IPX6)

The Tronsmart Bang Mini is IPX6 waterproof, meaning it is protected against high-pressure water jets from any direction. This makes it suitable for outdoor use and near water, but it should not be submerged.

- Ensure all port covers are securely closed before exposing the speaker to water.
- After exposure to water, wipe the speaker dry with a soft cloth.
- Do not charge the speaker if the charging port is wet.

IPX6 Waterproof

An excellent speaker for beach parties
and pool parties



Image: The Tronsmart Bang Mini speaker placed on a beach, highlighting its IPX6 waterproof rating, suitable for outdoor environments.

3. Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to about 50% every few months to prolong battery life.

TROUBLESHOOTING

If you encounter issues with your Tronsmart Bang Mini, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode or already connected to another device.	Ensure the speaker is in pairing mode. Disconnect from other devices if necessary. Try resetting the speaker.
No sound or low volume.	Volume too low on speaker or connected device; incorrect input source.	Increase volume on both speaker and device. Check AUX cable connection if applicable.
Distorted sound.	Volume too high; weak Bluetooth signal.	Decrease volume. Move device closer to the speaker.
Cannot enter TWS pairing mode.	Speakers are already connected to a device.	Ensure both speakers are disconnected from any Bluetooth devices before attempting TWS pairing.

Resetting the Speaker

If the speaker is unresponsive or experiencing persistent issues, you can perform a factory reset:

- Press and hold the 'Play/Pause' button for 8 seconds to reset the speaker.

Your browser does not support the video tag.

Video: Demonstrates how to reset the Tronsmart Bang Mini speaker. (Relevant segment: 1:15 - 1:22)

SPECIFICATIONS

Feature	Detail
Brand	Tronsmart
Model Name	Bang Mini
Speaker Type	Outdoor
Connectivity Technology	Bluetooth 5.3, Wired (AUX), Wireless
Speaker Maximum Output Power	50 Watts
Battery Life	Up to 15 Hours
Battery Capacity	8000 Milliamp Hours (7.4V 4000mAh)
Charging Time	Approx. 4 Hours
Water Resistance Level	IPX6 Waterproof
Item Weight	5.22 Pounds (2.37 kg)
Product Dimensions	11.9"D x 4.9"W x 6.8"H
Control Method	Button Control, Voice Control (Supports Siri, Cortana, Google Assistant)

Feature	Detail
Additional Features	Dual tweeters, dual woofers, 2 LED light modes (circling & breathing), NFC Seamless Connection, True Wireless Stereo mode, Micro SD/U Disk/AUX support, Built-in power bank, Ultra-portable with handle.



Image: Diagram showing the dimensions of the Tronsmart Bang Mini speaker: 11.9 inches (length), 4.9 inches (width), and 6.8 inches (height).

WARRANTY AND SUPPORT

The Tronsmart Bang Mini Portable Bluetooth Speaker comes with a **1-Year Warranty** from the date of purchase. For further assistance, troubleshooting, or warranty claims, please contact Tronsmart customer support or visit their official website.

You can also refer to the official User Manual PDF for additional details [Download User Manual \(PDF\)](#)

© 2023 Tronsmart. All rights reserved.

Related Documents - Bang Mini

 <p>Tronsmart Bang Mini Portable Outdoor Speaker User Manual</p> <p>This manual provides detailed instructions for using the Tronsmart Bang Mini Portable Outdoor Speaker. Please read the manual before using the device. If you have any questions or need further assistance, please contact us or visit our website.</p> <p>Product Details</p> <ul style="list-style-type: none"> 1 x Tronsmart Bang Mini Speaker 1 x USB-A to USB-C Cable 1 x Micro-USB Cable 1 x User Manual 1 x Warranty Card <p>Warranty</p> <p>Guaranteed 12 months from the date of purchase.</p> <p>USB Power Bank</p> <p>The speaker uses a USB charger function that automatically turns on when the speaker is connected to a power source. The speaker will automatically turn off after 10 minutes in power bank mode. You can also turn the power bank function off by pressing the power button for 10 seconds.</p> <p>Auto-Off</p> <p>After 20 minutes, the speaker will turn off automatically. You can turn it back on by pressing the power button.</p>	<p>Tronsmart Bang Mini Portable Outdoor Speaker User Manual</p> <p>User manual for the Tronsmart Bang Mini Portable Outdoor Speaker. Details include package contents, features like NFC streaming, USB-A power bank functionality, Aux-in mode, TF card and USB flash drive support, auto power-off, detailed specifications (Bluetooth 5.3, 50W output, IPX6 rating), care instructions, and comprehensive button operation guides for basic use and TWS stereo pairing.</p>
 <p>Tronsmart Bang Portable Party Speaker User Manual</p>	<p>Tronsmart Bang Portable Party Speaker User Manual</p> <p>User manual for the Tronsmart Bang Portable Party Speaker, detailing button configurations, usage instructions, connectivity, charging, maintenance, warranty, and specifications.</p>
 <p>Tronsmart Bang Portable Party Speaker User Manual</p>	<p>Tronsmart Bang Portable Party Speaker User Manual</p> <p>User manual for the Tronsmart Bang Portable Party Speaker, detailing button configurations, usage instructions, connectivity, charging, care, and specifications. Includes information on NFC streaming, USB-A power bank function, Aux-in, TF/SD card, and USB flash drive modes.</p>
 <p>Tronsmart Bang Portable Party Speaker User Manual</p>	<p>Tronsmart Bang Portable Party Speaker User Manual</p> <p>Comprehensive user manual for the Tronsmart Bang Portable Party Speaker, covering setup, usage, features like NFC streaming and USB power bank, troubleshooting, and specifications. Learn how to connect, play music, and maintain your speaker.</p>
 <p>Tronsmart Bang Portable Party Speaker User Manual</p>	<p>Tronsmart Bang Portable Party Speaker User Manual</p> <p>User manual for the Tronsmart Bang Portable Party Speaker, covering button configuration, usage instructions, connectivity, charging, and specifications.</p>
 <p>Tronsmart Bang Portable Party Speaker User Manual</p>	<p>Tronsmart Bang Portable Party Speaker User Manual</p> <p>User manual for the Tronsmart Bang Portable Party Speaker, detailing button configurations, usage instructions, connectivity options, specifications, and warranty information.</p>