

Manuals.plus /

› VINABTY /

› VINABTY RMT-AH410U Replacement Remote Control User Manual for Sony HT-S200F Sound Bar

VINABTY RMT-AH410U

VINABTY RMT-AH410U Replacement Remote Control User Manual

For Sony AV System Sound Bar Speaker HT-S200F and RMT-AH410J

INTRODUCTION

This user manual provides comprehensive instructions for the VINABTY RMT-AH410U replacement remote control. This remote is designed to be compatible with Sony AV System Sound Bar Speaker models HT-S200F and RMT-AH410J. Please read this manual carefully to ensure proper setup and operation of your new remote control.

PRODUCT OVERVIEW

The VINABTY RMT-AH410U is a direct replacement infrared (IR) remote control, requiring no programming. It is ready to use once batteries are installed. Its ergonomic design ensures comfortable handling and easy access to all functions of your compatible Sony sound bar.





Image: Front view of the VINABTY RMT-AH410U replacement remote control, showcasing its button layout and dark gray finish.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

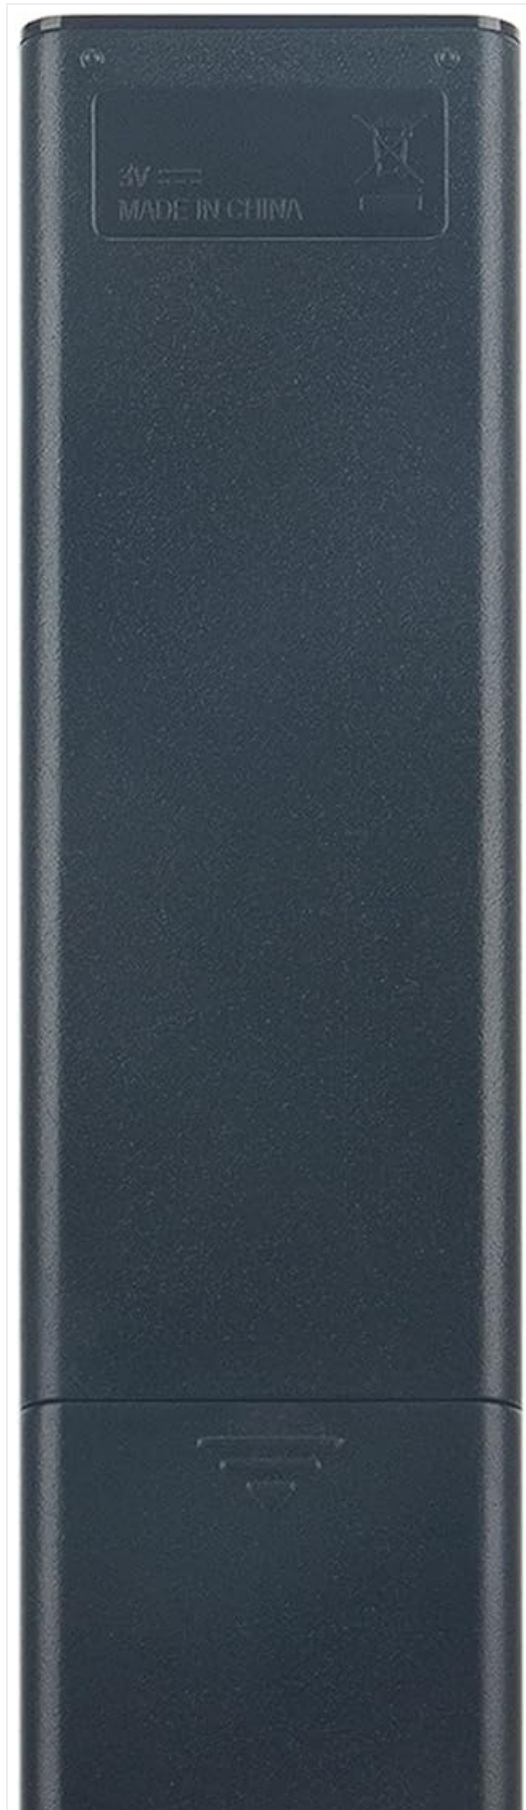




Image: Back view of the VINABTY RMT-AH410U remote control, highlighting the battery compartment cover.

OPERATING INSTRUCTIONS

This remote control is pre-programmed for compatible Sony sound bar models. No additional setup or pairing is required. Simply point the remote towards your sound bar and press the desired function button.

Button Functions



Image: Angled view of the VINABTY RMT-AH410U remote control, providing a clear perspective of the button arrangement.

Button	Function
Power	Turns the sound bar on or off.
INPUT	Selects the input source (e.g., TV, HDMI, Bluetooth).
AUTO SOUND	Activates automatic sound optimization.
STANDARD	Sets the sound mode to standard.
CINEMA	Activates cinema sound mode for movies.
MUSIC	Activates music sound mode for audio playback.
VOICE	Enhances vocal clarity.
NIGHT	Optimizes sound for low-volume listening at night.
Volume (+/-)	Adjusts the master volume level.
Mute	Mutes or unmutes the sound.
BASS	Adjusts the bass level.
PLAY MODE	Cycles through playback modes (if applicable).
AUDIO	Selects audio settings or tracks.
Navigation Arrows (Up/Down)	Navigates menus or selections.
ENTER	Confirms a selection.
Play/Pause	Starts or pauses playback.
Skip Forward/Backward	Skips to the next or previous track/chapter.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote and the sound bar's IR receiver.
 - Ensure you are within the effective operating range and line of sight of the sound bar.
- **Specific buttons not working:**

- Verify that the button is intended for your specific sound bar model's functionality. Some buttons may be specific to certain features not present on all compatible devices.
- Clean the remote control surface, as dirt or debris might be interfering with button presses.

SPECIFICATIONS

- **Model:** RMT-AH410U
- **Compatibility:** Sony AV System Sound Bar Speaker HT-S200F, RMT-AH410J
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 6.6 x 1.8 x 0.7 inches (approximately)
- **Item Weight:** 2.08 ounces (approximately, without batteries)
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

This VINABTY remote control is typically covered by a manufacturer's warranty. For specific warranty details, return policies, or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.