

[Manuals.plus](#) /

> [ZdalaMit](#) /

> ZdalaMit H69A73 Replacement Voice Remote Control Commander User Manual

ZdalaMit 9d19d411-9813-4a21-a57f-c2ce9ba4dd20

ZdalaMit H69A73 Replacement Voice Remote Control User Manual

Model: H69A73

PRODUCT OVERVIEW

The ZdalaMit H69A73 is a replacement voice remote control designed for the Amazon TV Stick Lite 1st-Gen (2020) model S3L46N. This remote offers voice control capabilities and requires pairing with your device before use. It operates on two AAA alkaline batteries, which are not included.





Image: Front view of the ZdalaMit H69A73 replacement voice remote control. This image displays the remote's layout, including the microphone button at the top, a large circular navigation pad, and dedicated buttons for Home, Back, Menu, Play/Pause, Fast Forward, Rewind, and a TV button at the bottom.

SETUP AND PAIRING

Before using your new ZdalaMit H69A73 remote control, it must be paired with your Amazon TV Stick Lite. Please follow these steps carefully:

1. Prepare Your Amazon TV Stick:

- Remove the power supply from your Amazon TV Stick.
- If connected directly to the TV, remove the Amazon TV Stick from the TV's HDMI port for a few minutes.
- Plug the Amazon TV Stick back into the TV (if removed) and reattach its power supply.

2. Insert Batteries into the Remote:

- Open the battery compartment on the back of the remote control.
- Insert **two (2) new AAA alkaline batteries**, ensuring correct polarity (+/-). **Do NOT use rechargeable batteries.**
- Close the battery compartment.

3. Initiate Pairing:

- Point the remote control towards your Amazon TV Stick.
- Press and hold the **Home button** (🏠) on the remote for approximately 10-15 seconds.
- Release the Home button once the LED indicator on the remote begins to flash rapidly. This indicates the remote is entering pairing mode.
- Wait for about 60 seconds. The remote should automatically pair with your Amazon TV Stick.

4. Troubleshooting Pairing (If Unsuccessful):

- If the remote has not successfully paired and the LED light goes out, remove the batteries from the remote and then reinsert them.
- Unplug the power supply of your Amazon TV Stick and then plug it back in.
- Repeat the pairing steps from step 3.



Image: Angled view of the ZdalaMit H69A73 remote control. This perspective clearly shows the arrangement of the buttons, including the back, home, menu, rewind, play/pause, and fast forward buttons, which are essential for navigation and media control.

OPERATING INSTRUCTIONS

Once paired, your ZdalaMit H69A73 remote control provides full functionality for your Amazon TV Stick Lite.

- **Navigation:** Use the circular navigation ring to move through menus and select items. Press the center button of the ring to confirm selections.
- **Voice Control:** Press and hold the **Microphone button** (🎤) at the top of the remote to activate voice search or commands. Speak clearly into the remote.

- **Standard Controls:**

- **Back button** (↶): Returns to the previous screen or menu.
- **Home button** (↶): Returns to the Fire TV home screen.
- **Menu button** (☰): Accesses contextual menus or options.
- **Play/Pause button** (⏮): Controls media playback.
- **Rewind button** (↶): Rewinds media.
- **Fast Forward button** (↷): Fast forwards media.
- **TV button** (📺): May control basic TV functions like power or input, depending on TV Stick configuration.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it fails to pair. Always use new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your ZdalaMit H69A73 remote, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding or pairing.	Batteries are dead, incorrectly inserted, or not alkaline. Remote is not paired. Interference.	Ensure new AAA alkaline batteries are correctly inserted. Repeat the pairing steps outlined in the 'Setup and Pairing' section. Ensure no obstructions between remote and TV Stick.
Voice commands not working.	Microphone blocked. Remote not paired correctly for voice.	Ensure nothing is covering the microphone hole. Re-pair the remote following the 'Setup and Pairing' instructions. Speak clearly and hold the microphone button.
Buttons are sticky or unresponsive.	Dirt or debris under buttons.	Clean the remote's surface with a dry, soft cloth. Avoid pressing buttons excessively hard.

If issues persist after following these troubleshooting steps, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	H69A73

Feature	Detail
Compatible Devices	Amazon TV Stick Lite 1st-Gen (2020) S3L46N
Power Source	2 x AAA Alkaline Batteries (not included)
Special Feature	Voice Search
Color	Black
Product Dimensions	6 x 2 x 0.5 inches
Item Weight	1.41 ounces
Manufacturer	ZdalaMit Factory

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation provided at the time of purchase or contact ZdalaMit customer support directly. Should you have any questions or require further assistance with your ZdalaMit H69A73 remote control, please do not hesitate to contact the manufacturer or seller.
