

LG MR22GN

LG Magic Remote MR22GN User Manual

Model: MR22GN

INTRODUCTION

This manual provides instructions for the LG Magic Remote MR22GN, designed to enhance your LG Smart TV experience. It features intuitive controls, voice command capabilities, and NFC (Near Field Communication) for quick access functions.

COMPATIBILITY

The LG Magic Remote MR22GN is compatible with the following LG TV series:

- OLED Z2, G2, C2, B2, A2 series
- QNED99, 90, 85, 80 series
- NANO80, 75 series
- UQ90, UQ80, UQ75, UQ80 series

Ensure your LG TV supports the Magic Remote functionality for optimal performance. Refer to your TV's user manual for specific compatibility details.

SETUP

1. Installing Batteries

Open the battery compartment cover on the back of the remote control. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals are correctly aligned. Close the battery compartment cover securely.



Image: Side view of the LG Magic Remote MR22GN, highlighting the battery compartment located on the underside.

2. Pairing the Remote Control

After installing the batteries, point the Magic Remote towards your LG Smart TV and press the **Wheel (OK)** button. The TV will automatically detect and pair the remote. Follow any on-screen instructions that appear on your TV.

If the remote does not pair automatically, or if you need to re-pair it, press and hold the **Home** button and the **Back** button simultaneously for about 5 seconds until the LED indicator on the remote blinks, then release. Point the remote at the TV and press the **Wheel (OK)** button again.

OPERATING INSTRUCTIONS

Basic Navigation

The LG Magic Remote offers multiple ways to navigate your TV's interface:

- **Pointer Function:** Move the remote to control an on-screen pointer, similar to a mouse.
- **Wheel (OK) Button:** Press to select items. Scroll the wheel up or down to navigate through menus and content.
- **Directional Buttons:** Use the up, down, left, and right buttons around the Wheel to navigate step-by-step.





Image: Front view of the LG Magic Remote MR22GN, displaying all buttons and their layout.

Voice Commands

The remote integrates voice assistants like Google Assistant and Alexa. Press and hold the **Microphone** button to activate voice commands. Speak clearly into the remote to search for content, control smart home devices, or ask questions.

NFC (Magic Tap) Functionality

The MR22GN features NFC (Near Field Communication) for quick content sharing or device pairing. Look for the NFC icon on the remote. Tap a compatible NFC-enabled smartphone or device to the remote to initiate specific actions, such as mirroring content or launching apps.

Quick Access Buttons

Dedicated buttons provide instant access to popular streaming services:

- **Netflix**
- **Prime Video**
- **Disney+**
- **LG Channels**

Other Key Functions

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Directly input channel numbers or other numerical data.
- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels.
- **Home Button:** Accesses the TV's home screen or main menu.
- **Back Button:** Returns to the previous screen or menu.
- **Settings Button:** Opens the TV's settings menu.
- **Mute Button:** Mutes or unmutes the TV audio.
- **AD/SAP Button:** Activates Audio Description or Secondary Audio Program functions (if available).
- **LIST Button:** Displays a list of channels or other content.
- **Quick Access Button:** Configurable button for quick access to a favorite app or function.

MAINTENANCE

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.

Battery Replacement

If the remote control's performance degrades or it stops responding, replace both AA batteries with new ones. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Remote Not Responding

- Check if the batteries are correctly installed and have sufficient charge. Replace them if necessary.
- Ensure there are no obstructions between the remote control and the TV's sensor.
- Try re-pairing the remote control with the TV (refer to "Pairing the Remote Control" section).
- If the issue persists, try resetting the TV by unplugging it from the power outlet for a few minutes, then plugging it back in.

Pointer Not Appearing or Moving Erratically

- Ensure the remote is pointed directly at the TV.
- Shake the remote gently to reactivate the pointer.
- If the pointer is still erratic, try re-pairing the remote.

SPECIFICATIONS

Feature	Detail
Model Number	MR22GN
Brand	LG
Product Dimensions	1.23 x 1.27 x 7.52 inches
Item Weight	3.7 ounces
Color	Black
Max Number of Supported Devices	1 (Television)
Special Feature	NFC (Magic Tap)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your LG Smart TV or visit the official LG website. This product is a renewed item; specific warranty terms may vary. Please consult your retailer for details regarding renewed product warranties.