

[Manuals.plus](#) /

> [Aqua Joe](#) /

> Aqua Joe 6 Pattern Adjustable Sprinkler Mister with Metal Tripod Stand, Rotating Head, and Telescoping Height ,4100 Square Feet Coverage, AJ-6PSTB-MAX Tripod Base Max User Manual

Aqua Joe AJ-6PSTB-MAX

Aqua Joe 6 Pattern Adjustable Sprinkler Mister User Manual

Model: AJ-6PSTB-MAX | Brand: Aqua Joe

INTRODUCTION

The Aqua Joe 6 Pattern Adjustable Sprinkler Mister with Metal Tripod Stand is designed to provide versatile and efficient watering for your lawn and garden. This 2-in-1 system offers multiple spray patterns and adjustable height to suit various watering needs, ensuring optimal coverage and plant care.

SAFETY INFORMATION

Please read and understand all safety instructions before operating the sprinkler. Failure to follow these instructions may result in injury or property damage.

- Keep away from electrical sources.
- Avoid contact with moving parts.
- Use only as directed.

WHAT'S INCLUDED

Your Aqua Joe Sprinkler Mister package includes:

- 1 x Aqua Joe 6 Pattern Adjustable Sprinkler Mister Head
- 1 x Metal Tripod Stand
- 1 x Flow Control Valve

SETUP

Follow these steps to set up your sprinkler:

1. **Assemble the Tripod Stand:** Unfold the metal tripod legs to create a stable base. Ensure the legs are fully extended.
2. **Connect the Sprinkler Head:** Securely screw the sprinkler mister head onto the top of the telescoping pole.
3. **Attach Water Hose:** Connect your standard garden hose to the inlet connection at the base of the tripod. Ensure a tight, leak-free connection.

4. **Secure to Ground:** For added stability, especially on uneven terrain or with high water pressure, press the spikes at the end of each tripod leg firmly into the ground.



Image: Aqua Joe Sprinkler Mister fully assembled on its tripod stand, ready for use.

5. **Adjust Height:** The telescoping stand can be adjusted from 28 to 42.2 inches. Loosen the collar, extend the pole to your desired height, and tighten the collar to secure.

OPERATING INSTRUCTIONS

Your Aqua Joe Sprinkler Mister offers various adjustments for optimal watering:

- 1. **Water Flow Control:** Use the integrated flow control valve located near the hose connection to turn the water on or off, or to adjust the water pressure.

WATER YOUR WAY!

AQUAJOE

FLOW CONTROL
Provides a maximum flow rate of 9.3 GPM

TURBO DRIVE 360° TELESCOPING SPRINKLER
Rotating head covers partial to full circle

6 ADJUSTABLE SPRAY PATTERNS
Flat, fan, large, multi, mini, mist—versatile watering for every garden.

TELESCOPING HEIGHT ADJUSTMENT
From 28" to 42.2" for a coverage area of up to 4,100 sq ft

LENGTH	WIDTH	HEIGHT	WEIGHT
5.5"	4.65"	25.5"	2.8
13.97 CM	11.81 CM	64.77 CM	LBS.

A blue and black Aqua Joe Sprinkler Mister is shown in operation on a green lawn. The sprinkler has a telescoping pole and a rotating head that is spraying water in a fan pattern. The background shows a house and some bushes.

Image: A hand adjusting the flow control valve on the sprinkler's base.

- 2. **Spray Pattern Selection:** The sprinkler head features 6 adjustable spray patterns: Flat, Fan, Mist, Large, Multi, and Mini. Rotate the dial on the sprinkler head to select the desired pattern.

WATER YOUR WAY!



Flat



Fan



Mist



Large



Multi



Mini

6 Spray Patterns

Customize your spray to suit various terrain types

AQUAJOE®

Image: Visual representation of the six distinct spray patterns available on the sprinkler head.

3. **Adjustable Pivot Range (Coverage Control):** The rotating head provides 360° watering coverage. You can adjust the pivot range from 10° to 360° to water specific areas. Use the blue tabs on the sprinkler head to set the desired arc.

WATER YOUR WAY!



Coverage Control



On/Off Flow Control



Distance Control



Pattern Control

Turbo Drive 360°

Rotating head ensures full,
even coverage every time

AQUAJOE®

Image: Hands adjusting the coverage and distance controls on the sprinkler head.

4. **Adjustable Elevation (Distance Control):** Fine-tune the spray distance by adjusting the elevation of the sprinkler head. This allows you to control how far the water sprays, from a mini spray to a large area covering up to 4,100 square feet.

WATER YOUR WAY!



72.2' Spray Diameter

Water up to 4,100 Sq Ft of range,
with a spray up to 72.2 Ft in
diameter for maximum coverage

AQUAJOE

Image: A hand adjusting the spray diameter setting on the sprinkler head.

Official Product Video

Your browser does not support the video tag.

Video: This video demonstrates the Aqua Joe Adjusting Tripod Sprinkler Mister with its 6 patterns, showcasing its features and operation.

MAINTENANCE

To ensure the longevity and optimal performance of your Aqua Joe Sprinkler Mister, follow these maintenance tips:

- **Clean Regularly:** Periodically check the sprinkler head for any debris or mineral buildup that might obstruct the spray nozzles. Clean with a soft brush and water.
- **Drain Before Storage:** Before storing the sprinkler for extended periods, especially during freezing temperatures, ensure all water is drained from the unit and hose to prevent damage.
- **Inspect Connections:** Regularly check hose connections and fittings for wear or leaks. Replace washers if necessary to maintain a tight seal.
- **Store Properly:** Store the sprinkler in a dry, protected area away from direct sunlight and extreme temperatures

when not in use.

TROUBLESHOOTING

If you encounter issues with your Aqua Joe Sprinkler Mister, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Uneven Spray Pattern	Clogged nozzle, low water pressure, incorrect pattern setting.	Clean nozzles, check water supply pressure, adjust spray pattern dial.
Sprinkler Tips Over	Not properly secured to the ground, high water pressure.	Ensure tripod spikes are fully pressed into the ground. Reduce water pressure using the flow control valve if necessary.
Water Leaks from Connections	Loose connection, worn washer.	Tighten all connections. Replace the rubber washer in the hose connection if it is worn or damaged.
Sprinkler Not Rotating	Debris in the rotating mechanism, insufficient water pressure.	Flush the sprinkler head with water to dislodge debris. Ensure adequate water pressure.

SPECIFICATIONS

Feature	Detail
Brand	Aqua Joe
Model	AJ-6PSTB-MAX
Material	Metal
Color	Blue
Coverage Area	Up to 4,100 sq ft
Spray Diameter	72.2 inches
Adjustable Height	28 to 42.2 inches
Spray Patterns	6 (Flat, Fan, Mist, Large, Multi, Mini)
Maximum Flow Rate	9.3 Gallons Per Minute
Maximum Pressure	120 Pound per Square Inch
Item Weight	3.59 pounds
Product Dimensions (L x W x H)	4.65 x 5.5 x 25.5 inches

WARRANTY & SUPPORT

Aqua Joe products are designed for durability and performance. For warranty information or technical support, please refer to the official Aqua Joe website or contact their customer service directly. Keep your purchase receipt for warranty claims.

Visit the official [Aqua Joe Store](#) for more information.

© 2024 Aqua Joe. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B94XMTWP>

More documents and user manuals: <https://manuals.plus/>