

BITTYTRUMP

Generic Trump 2024 MAGA Mini Bluetooth Speaker Instruction Manual

Model: BITTYTRUMP

Brand: Generic

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your Generic Trump 2024 MAGA Mini Bluetooth Speaker. Please read this manual thoroughly before operating the device and retain it for future reference.

WHAT'S IN THE BOX

Upon unpacking, please ensure all items listed below are present and in good condition:

- Trump 2024 MAGA Mini Bluetooth Speaker
- Lanyard
- USB-C Charging Cable

PRODUCT OVERVIEW

Familiarize yourself with the components of your speaker.



Figure 1: The Trump 2024 MAGA Mini Bluetooth Speaker shown in its retail packaging.



Figure 2: Front view of the speaker, highlighting its design.



Figure 3: Rear view of the speaker, displaying the USB-C charging port.



Figure 4: The speaker held in a hand, illustrating its compact size.



Figure 5: The speaker with the included lanyard attached, ready for portability.



Figure 6: The speaker positioned against an American flag background.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. A full charge takes approximately 4 hours.

1. Connect the included USB-C charging cable to the charging port on the back of the speaker.
2. Connect the other end of the USB-C cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light (if present, refer to device for exact location) will illuminate during charging and turn off or change color when fully charged.

2. Powering On/Off

- To power on, press and hold the power button (location may vary, typically on the base or side) until you hear an audible prompt or see an indicator light.
- To power off, press and hold the power button again until the device shuts down.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

The speaker uses Bluetooth 5.0 technology for wireless connection to your devices.

1. Ensure the speaker is powered on and in pairing mode (usually indicated by a flashing LED light).
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select "**Trump Speaker**" or a similar name from the list.
4. Once paired, the speaker will emit an audible confirmation, and the LED light will become solid.
5. The speaker has a wireless range of up to 30 feet.

2. True Wireless Stereo (TWS) Pairing (Optional)

You can connect two Trump 2024 MAGA Mini Bluetooth Speakers together for a true wireless stereo experience.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one of the speakers, press and hold the TWS pairing button (refer to device for exact button, often the power button or a dedicated TWS button) until you hear a pairing tone.

3. The two speakers will automatically connect to each other. Once connected, they will emit a confirmation sound.
4. Now, connect your device to one of the paired speakers via Bluetooth as described in the "Bluetooth Pairing" section. Both speakers will play audio in stereo.

3. Basic Controls

The speaker features simple one-touch controls. Specific button functions may vary slightly, but generally include:

- **Power Button:** Press and hold to turn on/off. Short press for play/pause (when connected).
- **Volume Control:** Typically controlled via the connected device.
- **Selfie Remote:** The speaker may have a remote function for taking photos when connected to a smartphone. Consult your device's camera app settings for compatibility.

MAINTENANCE

To ensure the longevity and optimal performance of your speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's exterior. Do not use harsh chemicals, cleaning solvents, or strong detergents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** The speaker is rated as "Water Resistant" but is NOT waterproof. Avoid submerging it in water or exposing it to heavy rain.
- **Charging:** Only use the provided USB-C cable for charging.

TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common problems and solutions:

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is fully charged. Connect it to a power source using the USB-C cable.
Cannot pair with Bluetooth device.	<ul style="list-style-type: none">◦ Ensure the speaker is in pairing mode (flashing LED).◦ Make sure Bluetooth is enabled on your device.◦ Move the speaker closer to your device (within 30 feet).◦ Forget the device from your phone's Bluetooth list and try pairing again.◦ Restart both the speaker and your Bluetooth device.
No sound or low volume.	<ul style="list-style-type: none">◦ Increase the volume on both the speaker and your connected device.◦ Ensure the speaker is properly paired.◦ Check if the audio source is playing.

Problem	Possible Solution
TWS pairing fails.	<ul style="list-style-type: none">◦ Ensure both speakers are powered on and not connected to any other device.◦ Follow the TWS pairing steps carefully.◦ Try resetting both speakers and attempting TWS pairing again.

SPECIFICATIONS

Key technical specifications for the Trump 2024 MAGA Mini Bluetooth Speaker:

Feature	Detail
Model Name	Donald Trump Mini Bluetooth Speaker
Item Model Number	BITTYTRUMP
Brand	Generic
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth 5.0
Maximum Range	30 Feet
Speaker Maximum Output Power	3 Watts
Audio Output Mode	Mono (Stereo with TWS pairing)
Speaker Size	2.5 Inches (Height)
Power Source	Battery Powered
Charging Time	4 Hours
Item Weight	0.11 Kilograms (3.84 ounces)
Product Dimensions	2"D x 2"W x 2.5"H
Material	Plastic
Water Resistance Level	Water Resistant (Not Waterproof)
Compatible Devices	Desktop, Laptop, Smartphone, Tablet, Television

WARRANTY AND SUPPORT

This product comes with a limited warranty. For detailed warranty information or technical support, please refer to the product packaging or contact the retailer where the product was purchased. Keep your proof of purchase for warranty claims.

