

Andoer 111

Andoer 111 Portable 1080P Digital Video Camcorder Instruction Manual

Model: 111 | Brand: Andoer

1. SAFETY INFORMATION

Please read this manual carefully before use and retain it for future reference. Observe all warnings and instructions.

- Do not expose the device to water or moisture.
- Keep the device away from direct sunlight, heat sources, or open flames.
- Use only the provided battery and charger.
- Do not attempt to disassemble or modify the device.
- Keep out of reach of children.

2. WHAT'S IN THE BOX

Verify that all items are present upon unboxing:

- Andoer 111 Digital Video Camcorder
- Rechargeable Lithium-Ion Battery
- USB Charging Cable
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the camcorder's components and controls.



Figure 1: Front view of the Andoer 111 Digital Video Camcorder with the LCD screen open.

Key Components:

- **Video Lens:** Captures video and photo.
- **2.7-inch Rotatable LCD Screen:** Displays live view, menu, and playback. Can be rotated for selfie mode.
- **Hand Strap:** For secure handling.
- **LED Light:** Provides illumination in low-light conditions.
- **Control Buttons:** For menu navigation, mode selection, and power.
- **Zoom Lever:** Controls digital zoom.
- **Shutter/Record Button:** Initiates photo capture or video recording.
- **USB Port:** For charging and data transfer.
- **Microphone Input:** For external microphone connection.
- **Tripod Mount:** Standard 1/4-inch screw hole for tripod attachment.

4. SETUP

4.1 Battery Installation

The camcorder uses a rechargeable Lithium-Ion battery. Ensure the battery is fully charged before first use.

1. Open the battery compartment cover located at the bottom of the camcorder.
2. Insert the battery into the compartment, aligning the contacts correctly.
3. Close the battery compartment cover securely.

4.2 SD Card Installation

A Class 10 or above SD card (up to 32GB recommended) is required for storing recordings.

1. Locate the SD card slot inside the battery compartment.
2. Insert the SD card with the metal contacts facing down until it clicks into place.

3. To remove, gently press the card until it pops out.

4.3 Powering On/Off

To power on the camcorder, simply open the LCD screen. It will automatically power on. To power off, close the LCD screen.

4.4 Initial Settings

Upon first power-on, you may need to set the date and time. Navigate through the menu using the control buttons.

5. OPERATING

5.1 Recording Video

Once powered on, the camcorder is typically in video recording mode. Press the **Shutter/Record Button** to start recording. Press it again to stop.

5.2 Taking Photos

To switch to photo mode, press the **Mode** button. Once in photo mode, press the **Shutter/Record Button** to capture a still image.

5.3 Digital Zoom

Use the **Zoom Lever** to zoom in (T) or zoom out (W) digitally up to 16X magnification.

5.4 Menu Navigation and Settings

Press the **Menu** button to access settings. Use the directional buttons to navigate and the **OK** button to select options. Available settings include:

- **Movie Size:** Adjust video resolution (e.g., 1080P, 720P).
- **White Balance:** Adjust color balance for different lighting conditions.
- **Exposure:** Control image brightness.
- **Effects:** Apply various visual filters (e.g., Black & White, Sepia).
- **Anti-shake:** Digital image stabilization.
- **Date Stamp:** Enable/disable date and time overlay on recordings.

5.5 Webcam Functionality

The camcorder can be connected to a computer via the USB cable and used as a webcam. Refer to your computer's operating system for specific setup instructions.

6. FEATURES

- **1080P Video Resolution:** Records high-definition video.
- **16MP Image Resolution:** Captures clear still images (interpolation).
- **2.7-inch Rotatable LCD Screen:** Offers flexible viewing angles, including selfie mode.
- **16X Digital Zoom:** Allows for close-up shots.
- **Digital Anti-shake:** Helps stabilize footage.
- **Built-in Speaker and Microphone:** For basic audio recording and playback.

- **Compact and Lightweight Design:** Easy to carry for travel and on-the-go recording.

7. MAINTENANCE

To ensure the longevity and optimal performance of your camcorder:

- Keep the lens clean using a soft, lint-free cloth.
- Store the camcorder in a cool, dry place away from extreme temperatures.
- Regularly charge the battery to maintain its health.
- Format the SD card periodically to prevent data corruption.

8. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Solution
Camcorder does not power on.	Ensure the battery is charged and correctly inserted.