

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime POKC3000 Interactive Pokémon Camera User Manual

Accutime POKC3000

Accutime POKC3000 Interactive Pokémon Camera User Manual

Model: POKC3000

1. SAFETY INFORMATION

Please read all safety warnings and instructions before using the Accutime POKC3000 Interactive Pokémon Camera. Keep this manual for future reference.

- **Warning:** Not suitable for children under 36 months due to small parts. Choking hazard.
- **Warning:** This product contains a long cord. Potential strangulation hazard.
- Packaging components such as adhesive tape, plastic film, metal fasteners, stickers, and labels are not part of the product. Dispose of them safely before giving the product to a child.
- The appearance and color of the product may vary slightly from the images shown.

2. PRODUCT OVERVIEW

The Accutime POKC3000 Interactive Pokémon Camera is designed for children, offering a fun and engaging way to capture photos and videos. It features a child-friendly design with a 2-in-1 screen and various interactive functions.

Key Features:

- 5 Megapixel Photo Resolution
- 1080p Video Resolution
- 4x Digital Zoom
- 2-inch Screen
- Built-in MP3 Player with Speaker
- 5 Fun Filters and Special Effects
- Interchangeable Photo Frames
- Splash-Resistant Design
- Micro SD Card Slot (Card Included)



Figure 2.1: Front view of the Accutime POKC3000 Interactive Pokémon Camera, featuring a black body with yellow grips and a Pokémon-themed design around the lens.

3. COMPONENTS INCLUDED

The product package typically includes the following items:

- Accutime POKC3000 Interactive Pokémon Camera
- Micro SD Card
- USB Cable
- User Manual

4. SETUP

4.1 Charging the Battery

1. Connect the small end of the included USB cable to the camera's charging port.
2. Connect the larger end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Allow the camera to charge fully before first use.
4. Once fully charged, disconnect the USB cable.

4.2 Installing the Micro SD Card

A Micro SD card is required to save photos, videos, and MP3 files.

1. Locate the Micro SD card slot on the camera.
2. Gently insert the included Micro SD card into the slot with the metal contacts facing down, until it clicks into place.
3. To remove the card, gently push it in until it clicks, then release, and it will eject.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the Power button (usually marked with a power symbol) for a few seconds to turn the camera on or off.

5.2 Basic Controls



Figure 5.1: Back view of the camera, illustrating the screen and various control buttons for navigation and function selection.

The camera features a 2-inch screen and several buttons for navigation and function selection. Refer to Figure 5.1 for button layout.

- **Directional Buttons (Up, Down, Left, Right):** Used to navigate through menus and options.
- **OK Button:** Confirms selections.
- **Shutter Button:** Takes photos or starts/stops video recording.
- **Menu/Mode Button:** Switches between different modes (photo, video, playback, MP3, settings).

5.3 Taking Photos

1. Turn on the camera.
2. Ensure the camera is in Photo mode (select via the Menu/Mode button if necessary).
3. Frame your shot using the screen.
4. Press the Shutter button to capture the photo.

5.4 Recording Videos

1. Turn on the camera.
2. Switch to Video mode using the Menu/Mode button.
3. Press the Shutter button once to start recording. A timer or indicator will show recording is active.
4. Press the Shutter button again to stop recording.

5.5 Using Filters and Effects

5 Rahmen


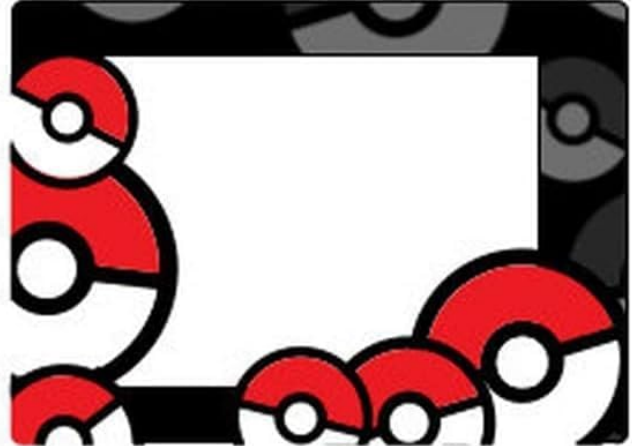


Figure 5.2: The camera's menu screen, showing icons for different functions including photo, video, and settings, which can be navigated using the directional buttons.

Startbildschirm

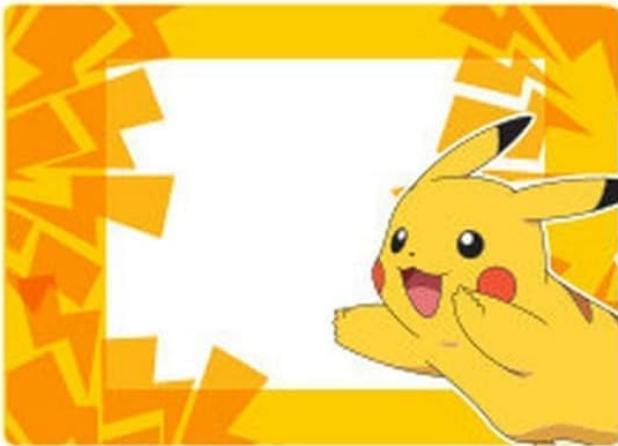

Hintergrund



Figure 5.3: Examples of the five available Pokémon-themed photo frames that can be selected to enhance pictures.

The camera includes 5 fun filters, special effects, and photo frames to customize your pictures.

1. In Photo or Video mode, use the directional buttons to access the filter/effect options.
2. Scroll through the available filters, effects, or frames.
3. Press the OK button to select and apply your desired option before taking a photo or recording a video.

5.6 MP3 Player Functionality

The camera can play MP3 audio files stored on the Micro SD card.

1. Transfer MP3 files to the Micro SD card using a computer.
2. Insert the Micro SD card into the camera.
3. Navigate to the MP3 Player mode using the Menu/Mode button.
4. Use the directional buttons to select and play music.

5.7 Viewing and Transferring Files

1. To view photos and videos on the camera, switch to Playback mode. Use directional buttons to browse.
2. To transfer files to a computer, connect the camera to the computer using the USB cable. The camera should appear as a removable drive, allowing you to copy files.

6. MAINTENANCE

6.1 Cleaning the Camera

- Wipe the camera body with a soft, dry cloth.
- For the lens and screen, use a specialized lens cleaning cloth to avoid scratches.
- Do not use harsh chemicals or abrasive cleaners.

6.2 Battery Care

- Charge the battery regularly, even if the camera is not in frequent use, to maintain battery health.
- Avoid exposing the camera to extreme temperatures, as this can affect battery performance and lifespan.

6.3 Storage

Store the camera in a cool, dry place away from direct sunlight and moisture when not in use.

7. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Camera does not turn on.	Low or depleted battery.	Charge the camera fully using the USB cable.
Cannot take photos or record videos.	No Micro SD card inserted or card is full/corrupted.	Ensure a Micro SD card is correctly inserted. Check available space or try a different card.
Battery drains quickly.	Frequent use, background processes, or aging battery.	Reduce screen brightness if possible. Ensure camera is fully powered off when not in use. Charge regularly.
Files not transferring to computer.	Faulty USB cable or connection issue.	Try a different USB port or cable. Ensure the camera is powered on and in the correct mode for data transfer.

8. SPECIFICATIONS

Technical specifications for the Accutime POKC3000 Interactive Pokémon Camera:

- **Model:** POKC3000
- **Brand:** Accutime
- **Effective Still Resolution:** 5 Megapixels
- **Video Resolution:** 1080p
- **Digital Zoom:** 4x
- **Screen Size:** 2 inches
- **Connectivity Technology:** USB
- **Special Features:** Splash-resistant, MP3 Player
- **Battery Type:** Lithium-ion
- **Item Weight:** 140 Grams
- **Product Dimensions:** 14.5 x 4.3 x 8.9 cm
- **Supported File Format:** MP3 (for audio)
- **Image Stabilization:** Digital

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided with your purchase or contact Accutime customer support.

For technical support or inquiries, please visit the official Accutime website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B983TZ8T>

More documents and user manuals: <https://manuals.plus/>