

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA HD eReader User Manual - Model ASHATA HD

ASHATA ASHATA HD

ASHATA HD eReader User Manual

Model: ASHATA HD

1. INTRODUCTION

The ASHATA HD eReader is a portable electronic reading device designed for comfortable viewing of various digital book and media formats. It features a 7-inch color TFT LCD screen with an 800x480 resolution, offering a dedicated experience for reading, viewing images, and playing audio/video files.



Image: The ASHATA HD eReader, showcasing its 7-inch screen with text content and side buttons.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Keep the device dry. Avoid contact with liquids.
- Use only the provided or approved charging cable and power adapter.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- ASHATA HD eReader Device
- USB Charging/Data Cable
- Protective Case
- Earphones
- Screen Protector



Image: The ASHATA HD eReader alongside its protective case, earphones, USB cable, and screen protector.

4. SETUP

4.1. Charging the Device

Before first use, fully charge the eReader. Connect the provided USB cable to the eReader's USB port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

4.2. Powering On/Off

- **To Power On:** Press and hold the power button (usually located on the side or top edge) until the screen illuminates.
- **To Power Off:** Press and hold the power button until a power-off prompt appears on the screen, then confirm. A short press typically puts the device into sleep mode.

4.3. Initial Configuration

Upon first power-on, you may be prompted to select your preferred language and set the date and time. Follow the on-screen instructions to complete these settings.

4.4. Transferring Files

To transfer eBooks, music, videos, or images to your eReader:

1. Connect the eReader to your computer using the provided USB cable.
2. The eReader will appear as a removable disk drive on your computer.
3. Drag and drop your desired files into the appropriate folders on the eReader (e.g., 'Books' for eBooks, 'Music' for audio files).
4. Safely eject the eReader from your computer before disconnecting the USB cable.

5. OPERATING INSTRUCTIONS

5.1. Device Layout and Buttons

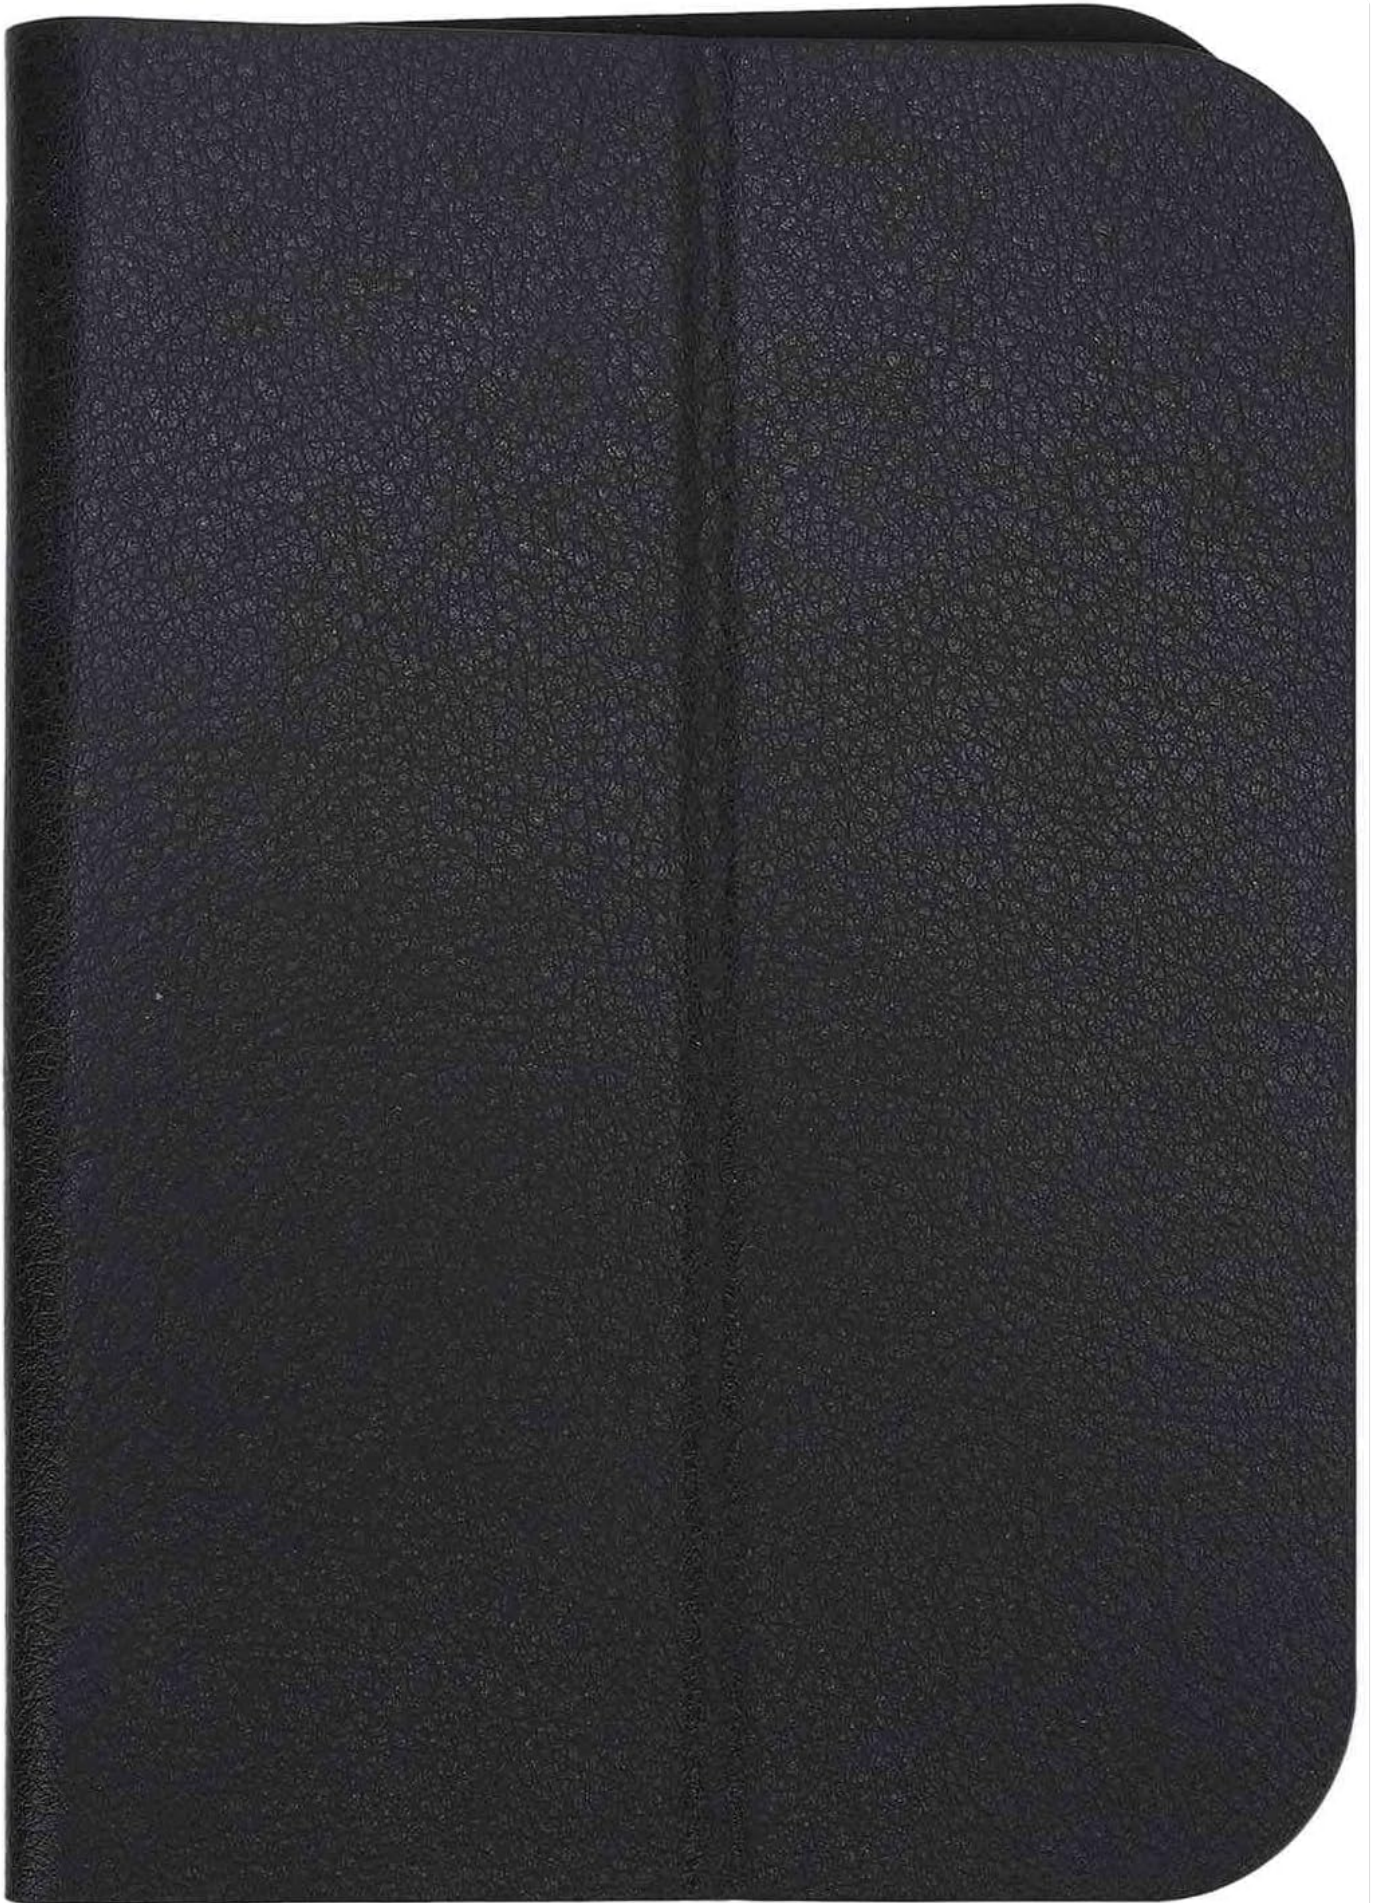


Image: A diagram illustrating the ASHATA HD eReader's physical dimensions and the functions of its various buttons, including Menu, Search, Play/Pause, Return, Up/Down, Confirm, Left/Previous Page, and Right/Next Page. It also indicates the external horn and TF card slot.

The eReader features intuitive button controls for navigation and function access:

- **Switch On/Off:** Power button.
- **Menu Key:** Accesses main menu options.
- **Search Key:** Initiates search function.
- **Play/Pause Key:** Controls media playback.
- **Return Key:** Navigates back to the previous screen or menu.
- **Up/Lower Keys:** For vertical navigation in menus or adjusting settings.
- **Confirm Key:** Selects an option.
- **Left/Previous Page Key:** Navigates left or to the previous page in a book.
- **Right/Next Page Key:** Navigates right or to the next page in a book.

5.2. Reading eBooks

1. From the main menu, select 'Library' or 'Books'.
2. Browse and select the eBook you wish to read.
3. Use the 'Left/Previous Page' and 'Right/Next Page' keys to turn pages.
4. Press the 'Menu' key during reading to access options such as brightness adjustment, font size, bookmarks, and more.

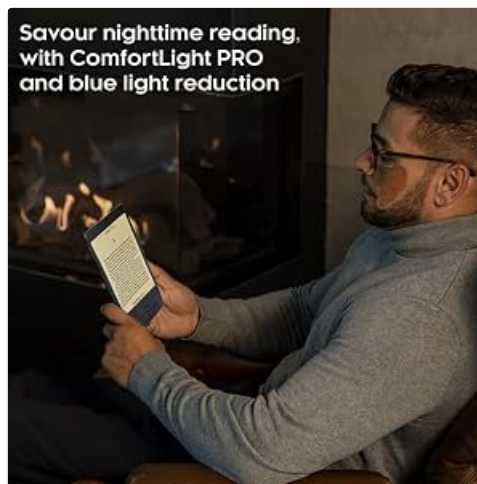


Image: A close-up of the ASHATA HD eReader's screen displaying its main menu, which includes options for accessing the library, navigating pages, managing bookmarks, adjusting brightness, and playing various media types.

5.3. Media Playback

The eReader supports various audio and video formats. Navigate to the 'Music' or 'Video' section from the main menu to browse and play your media files. Use the 'Play/Pause' key for control.

5.4. File Management

The 'File Explorer' option allows you to browse all files stored on the device and any inserted TF card. You can open supported files directly from here.

6. MAINTENANCE

6.1. Cleaning the Device

- Use a soft, lint-free cloth to gently wipe the screen and body of the eReader.
- For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Do not spray liquids directly onto the device.
- Avoid using abrasive cleaners, alcohol, or solvents.

6.2. Storage

When not in use for extended periods, store the eReader in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to store it in its protective case.

6.3. Software Updates

Periodically check the manufacturer's website for any available software updates. Updates can improve performance and add new features. Follow the provided instructions carefully when performing an update.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device for at least 30 minutes.
Device is unresponsive.	Software glitch.	Perform a soft reset by pressing and holding the power button for 10-15 seconds.
Files not appearing on device.	Incorrect file format or transfer error.	Ensure files are in supported formats (see Specifications). Re-transfer files, ensuring safe ejection.
Screen is dim or unreadable.	Brightness setting is too low.	Adjust screen brightness through the settings menu.
Cannot connect to computer.	Faulty USB cable or port.	Try a different USB cable or a different USB port on your computer. Ensure the cable is fully inserted.

8. SPECIFICATIONS

Feature	Detail
Brand	ASHATA
Model Name	ASHATA HD
Display Technology	LCD
Connectivity Technology	USB
Screen Size	7 Inches

Feature	Detail
Memory Storage Capacity	4 GB
Display Resolution	800x480
Color	Black
Supported File Formats	AAC, BMP, EPUB, FB2, FLV, GIF, MKV, MOV, MP3, PDF, PNG, RM, RMVB, TXT, VOB, WAV
Special Features	Wide Range of File Formats, Mechanical Navigation Button
Battery Type	Lithium-Ion
Processor Speed	380 MHz
Human-Interface Input	Buttons
Bluetooth Support	No
Manufacturer	ASHATA

9. WARRANTY AND SUPPORT

9.1. Warranty Information

Please refer to the warranty card included with your purchase or the retailer's website for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.

9.2. Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact your retailer or the ASHATA customer support team. Contact information can typically be found on the manufacturer's official website or your purchase documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B984FD47>

More documents and user manuals: <https://manuals.plus/>