

Deerma VC20 Pro

Deerma VC20 Pro Cordless Vacuum Cleaner User Manual

Model: VC20 Pro

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use, assembly, operation, and maintenance of your Deerma VC20 Pro Cordless Vacuum Cleaner. Please read this manual thoroughly before first use and retain it for future reference.

Safety Instructions

- Ensure the voltage specified on the charger matches your local power supply before charging.
- Do not use the vacuum cleaner to pick up water, flammable liquids, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner without the dust cup and filters properly installed.
- Store the vacuum cleaner in a dry place when not in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. PRODUCT COMPONENTS

Familiarize yourself with the main components of your Deerma VC20 Pro Cordless Vacuum Cleaner.



Image: The Deerma VC20 Pro Cordless Vacuum Cleaner in its full upright configuration, showing the main motor unit, extension wand, and floor brush.

- **Main Motor Unit:** Contains the motor, dust cup, and battery.
- **Extension Wand:** Connects the main unit to the floor brush for upright cleaning.

- **Floor Brush:** Designed for cleaning various floor types.
- **Crevice Tool:** Ideal for narrow spaces and corners.
- **Dusting Brush:** Suitable for cleaning delicate surfaces and upholstery.
- **Charger:** For recharging the vacuum's battery.



Image: The main motor unit configured as a handheld vacuum, with the crevice tool attached for detailed cleaning.

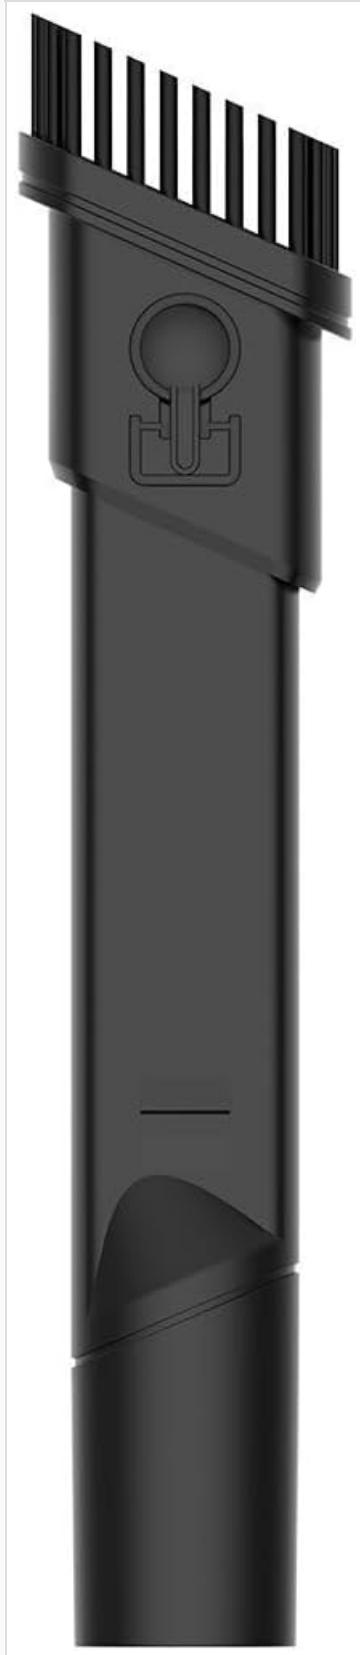


Image: A detailed view of the crevice tool, designed for reaching tight spaces.



Image: A detailed view of the dusting brush accessory, featuring soft bristles for delicate surfaces.

3. ASSEMBLY

Follow these steps to assemble your Deerma VC20 Pro Cordless Vacuum Cleaner.

- 1. Attach the Extension Wand:** Insert the extension wand into the main motor unit until it clicks securely into place.
- 2. Attach the Floor Brush:** Connect the floor brush to the other end of the extension wand, ensuring it locks firmly.
- 3. Install Accessories (Optional):** For handheld use, detach the extension wand and directly attach the crevice tool or dusting brush to the main motor unit.



Image: The fully assembled Deerma VC20 Pro Cordless Vacuum Cleaner standing upright, ready for use or storage.

4. CHARGING THE BATTERY

Before first use, fully charge the vacuum cleaner's battery. Subsequent charges should also be completed until the battery indicator shows full.

1. Locate the charging port on the main motor unit.
2. Connect the charger to the charging port.
3. Plug the charger into a power outlet.
4. The battery indicator lights will show the charging status. Unplug the charger once charging is complete.

5. OPERATION

Operating your Deerma VC20 Pro is straightforward. Ensure the battery is charged and the dust cup is empty before starting.

Power On/Off

- Press the power button on the main motor unit to turn the vacuum cleaner on.
- Press the power button again to turn it off.

Cleaning Modes

The vacuum cleaner may feature different suction modes. Refer to the specific markings on your device for mode selection, typically indicated by a button near the power switch.



Image: A person demonstrating the use of the Deerma VC20 Pro to clean scattered debris on a hard floor surface.

Using Attachments

- **Floor Brush:** Use for general cleaning on carpets, rugs, and hard floors. The motorized brush roll helps agitate dirt.
- **Crevice Tool:** Attach directly to the main unit or extension wand for cleaning tight corners, edges, and between cushions.
- **Dusting Brush:** Attach for cleaning delicate surfaces like shelves, keyboards, or upholstery.



Image: A close-up view of the vacuum's brush head in action, effectively collecting small particles from the floor.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Cup

1. Ensure the vacuum cleaner is turned off.
2. Press the dust cup release button to detach it from the main unit.
3. Open the dust cup lid and empty the contents into a waste bin.
4. Close the dust cup lid and reattach the dust cup to the main unit until it clicks.

Cleaning Filters

The Deerma VC20 Pro uses a cartridge filter system. Clean filters regularly to maintain suction power.

1. Remove the dust cup as described above.
2. Carefully remove the filter assembly from the dust cup.
3. Tap the filter gently to remove loose dust. If washable, rinse under cold running water until the water runs clear.
4. Allow the filter to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.
5. Reinsert the dry filter assembly into the dust cup and reattach the dust cup to the main unit.

Cleaning the Brush Roll

1. Turn off the vacuum cleaner and disconnect it from any power source.
2. Flip the floor brush over to access the brush roll.
3. Use scissors or a brush to remove any tangled hair, threads, or debris from the brush roll.
4. Ensure the brush roll spins freely after cleaning.

7. TROUBLESHOOTING

If you encounter issues with your Deerma VC20 Pro, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged Power button malfunction	Charge the battery fully Contact customer support
Low suction power	Dust cup is full Filter is clogged Brush roll is tangled Hose/nozzle is blocked	Empty the dust cup Clean or replace the filter Clean the brush roll Check for and remove blockages
Brush roll not spinning	Tangled debris Brush roll motor issue	Clean the brush roll Contact customer support

Problem	Possible Cause	Solution
Short runtime	Battery not fully charged Battery degradation	Ensure full charge Contact customer support for battery replacement

8. SPECIFICATIONS

Technical details for the Deerma VC20 Pro Cordless Vacuum Cleaner.

Feature	Detail
Brand	Deerma
Model Number	6955578037290
Color	Black
Product Dimensions (L x W x H)	10 x 50 x 48 cm
Capacity	1 Litre
Power	3600
Voltage	220V
Noise Level	44 Decibels
Runtime	22 minutes
Special Feature	Cordless
Item Weight	2 Kilograms
Filter Type	Cartridge
Surface Recommendation	Carpet, Upholstery, Hard floor
Power Source	Battery Powered
Included Components	1 package (Main unit, extension wand, floor brush, crevice tool, dusting brush, charger)
Battery	1 Lithium-ion battery required

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Deerma customer service directly. Specific warranty terms may vary by region and retailer.

No official product videos are available in the provided data.

Related Documents - VC20 Pro

	<p><u>Deerma VC20 Plus Handheld Cordless Vacuum Cleaner User Manual</u></p> <p>Comprehensive user manual for the Deerma VC20 Plus handheld cordless vacuum cleaner. Includes instructions on operation, safety precautions, cleaning, maintenance, troubleshooting, and technical specifications.</p>
	<p><u>Deerma VC31 Handheld Wireless Vacuum Cleaner User Manual</u></p> <p>Comprehensive user manual for the Deerma VC31 Handheld Wireless Vacuum Cleaner, covering safety precautions, technical specifications, installation, usage, maintenance, and troubleshooting.</p>
	<p><u>Deerma Vacuum Cleaner DX118C User Manual</u></p> <p>User manual for the Deerma Vacuum Cleaner DX118C, providing instructions on product structure, application methods, product parameters, packing list, troubleshooting, and cleaning/maintenance.</p>
	<p><u>Deerma Handheld Wireless Vacuum Cleaner VC01 User Manual</u></p> <p>Comprehensive user manual for the Deerma VC01 Handheld Wireless Vacuum Cleaner, covering setup, operation, cleaning, maintenance, troubleshooting, and technical specifications. Learn how to effectively use and care for your Deerma vacuum.</p>
	<p><u>Deerma BY200 Suction Vacuum Cleaner & Fabric Scrubber User Manual</u></p> <p>Comprehensive user manual for the Deerma BY200 Water-suction Sweeper and Fabric Scrubber. Learn about product features, operation, maintenance, and troubleshooting for effective home fabric cleaning.</p>
	<p><u>DEERMA DEM-T30W Wireless Vacuum Cleaner Instruction Manual</u></p> <p>Comprehensive instruction manual for the DEERMA DEM-T30W Wireless Vacuum Cleaner, detailing features, operation, maintenance, and troubleshooting for optimal home cleaning.</p>