



Manuals.plus /

- › **NN BEN NEVIS** /
- › NN BEN NEVIS Kids Digital Sport Watch User Manual

NN BEN NEVIS 2024

NN BEN NEVIS Kids Digital Sport Watch User Manual

Model: 2024

INTRODUCTION

The NN BEN NEVIS Kids Digital Sport Watch is designed for children aged 5-12, offering a range of practical features without the need for smartphone connectivity or complex apps. This watch integrates a fitness tracker, alarm clock, stopwatch, and is built to be waterproof for daily activities. Its user-friendly design and durable construction make it an ideal companion for active kids.



Image: The NN BEN NEVIS Kids Digital Sport Watch in black, showcasing its clear digital display.

KEY FEATURES

Fitness Tracking

This watch functions as a basic fitness tracker, recording steps, calories burned, and distance traveled. It operates independently, requiring no connection to a phone or external application, making it simple for children to monitor their activity.

Fitness Tracker
No Need to Link Phone

8000 Steps 1.3km Distance 200 Calories

Image: Children wearing the watch, illustrating its fitness tracking capabilities for steps, distance, and calories.

Silent Vibrating Alarm

The watch features a silent vibrating alarm, allowing parents to set up to two alarms. This function provides a discreet reminder for children, suitable for use in environments like classrooms or dormitories without disturbing others.



Image: A child sleeping, demonstrating the silent vibrating alarm feature of the watch.

Waterproof Design

The watch is rated 5 ATM water-resistant, making it suitable for everyday water exposure such as hand washing, face washing, and rain. It is important to note that it is not recommended for swimming, hot baths, or saunas.

Meet daily waterproof needs

50M Waterproof

Handwashing Rainproof Splash protection



Image: The watch demonstrating its water resistance for daily activities like handwashing and rain.

USB Charging & Battery Life

Equipped with a convenient USB interface, the watch can be charged using any standard USB adapter, such as those for smartphones, computers, or portable chargers. A full charge takes approximately one hour and provides a battery life of about 15 days.



Image: The watch's integrated USB charging port, shown connected to a laptop and a power bank.

SETUP

Initial Charge

Before first use, fully charge the watch. Locate the integrated USB charging port by gently detaching one side of the watch strap. Insert the USB connector into any standard USB power source (e.g., computer USB port, wall adapter, power bank). The watch display will indicate charging status. A full charge typically takes about one hour.

Setting Time and Date

The watch features intuitive button controls for setting the time and date. Refer to the specific button functions on your watch for precise adjustments. Generally, a 'Mode' button allows you to cycle through settings (time, date, alarm), and 'Set' or 'Adjust' buttons are used to change values.



Image: Overview of watch functions including date/time display.

OPERATING INSTRUCTIONS

Navigating Modes

Press the primary button (often labeled 'Mode' or located on the side) to cycle through different display modes: Time, Date, Pedometer, Calories, Distance, Stopwatch, and Alarm setting.

Using the Pedometer/Fitness Tracker

The watch automatically tracks steps, distance, and calories when worn. Ensure the watch is securely fitted on the wrist for accurate readings. The data can be viewed by cycling to the respective modes.



Image: Visual representation of the watch's multi-functional capabilities, including fitness tracking.

Setting the Alarm

To set the vibrating alarm, navigate to the alarm setting mode. Use the adjustment buttons to set the desired hour and minute. Confirm your selection to activate the alarm. The watch will vibrate silently at the set time.

Using the Stopwatch

In stopwatch mode, press the designated button (e.g., 'Start/Stop') to begin timing. Press it again to pause, and a third time to resume. A 'Reset' button is typically available to clear the stopwatch.

Backlight Function

To illuminate the display in low-light conditions, press the backlight button (often indicated by a light bulb icon or integrated into a main button). The EL-Backlight will provide temporary illumination.

MAINTENANCE

Cleaning

To clean your watch, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or internal components. Ensure the watch is dry before charging or prolonged storage.

Water Resistance Guidelines

While the watch is 5 ATM water-resistant, it is designed for daily exposure to water like handwashing, rain, and splashes. To maintain its integrity, do not submerge the watch for extended periods, wear it while swimming, or expose it to hot water, steam, or saunas.

TROUBLESHOOTING

Watch Not Turning On/Charging

- Ensure the USB charging port is fully inserted into a working USB power source.
- Verify the power source is active (e.g., laptop is on, wall adapter is plugged in).
- Allow the watch to charge for at least 10-15 minutes before attempting to turn it on.

Incorrect Time/Date

- Re-enter the time and date setting mode and carefully adjust the values.
- Ensure you are setting the correct AM/PM (if applicable) and 12/24-hour format.

Fitness Data Appears Inaccurate

- Ensure the watch is worn snugly on the wrist, not too loose or too tight.
- Arm movements during activities can affect step count; ensure natural arm swing.

SPECIFICATIONS

Model Number	2024
Display Type	LED Digital
Movement Type	Digital
Strap Material	Silica Gel
Waterproof Level	5 ATM (50M)
Battery Capacity	50mAh
Battery Life	Approx. 15 days
Charging Time	Approx. 1 hour
Watch Weight	33g
Dial Diameter	3.7 cm
Thickness	1 cm
Strap Width	1.4 cm
Wrist Circumference	12.5-20.5 cm



Movement type: Digital

Display screen: LED

Strap material: Silica gel

Waterproof level : 5ATM Waterproof

Watch weight: 33g

Battery capacity: 50mAh

Image: Detailed specifications and dimensions of the watch.

WARRANTY AND SUPPORT

NN BEN NEVIS is committed to providing high-quality products. Every watch undergoes strict quality inspection before leaving the warehouse. If you encounter any issues or have questions regarding your watch, please contact the seller or manufacturer for assistance. We are dedicated to helping you resolve any problems.

For common questions, you may refer to the brand's frequently asked questions section, which often covers topics such as product quality and design philosophy.