

Sony SA-SW3

Sony SA-SW3 Wireless Subwoofer Instruction Manual

Model: SA-SW3

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Sony SA-SW3 Wireless Subwoofer. Designed to complement Sony HT-A9 and HT-A7000 Soundbars, this subwoofer enhances your audio experience with powerful bass. Please read this manual thoroughly before operating the device and retain it for future reference.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent electric shock, fire, or damage to the unit:

- Do not expose the unit to rain or moisture.
- Do not open the casing. Refer all servicing to qualified personnel.
- Ensure proper ventilation; do not block ventilation openings.
- Place the unit on a stable, level surface.
- Keep the unit away from heat sources, direct sunlight, and excessive dust.
- Use only the power cord supplied with the unit.

3. PACKAGE CONTENTS

Verify that your package contains the following items:

- Sony SA-SW3 Wireless Subwoofer
- Power Cord

If any items are missing or damaged, contact your retailer.

4. SETUP

4.1 Unpacking and Placement

Carefully remove the subwoofer from its packaging. For optimal performance, place the subwoofer on a flat, stable surface near your soundbar. Consider placing it in a corner or near a wall to enhance bass response. Ensure there is adequate space around the unit for ventilation.



Image: Sony SA-SW3 Wireless Subwoofer with its dimensions clearly marked. The subwoofer measures approximately 8 inches deep, 15.88 inches wide, and 15.13 inches high. This image helps in planning the placement of the unit.

4.2 Connecting Power

Connect the supplied power cord to the AC IN terminal on the rear of the subwoofer, then plug the other end into a wall outlet. The subwoofer will automatically enter standby mode.

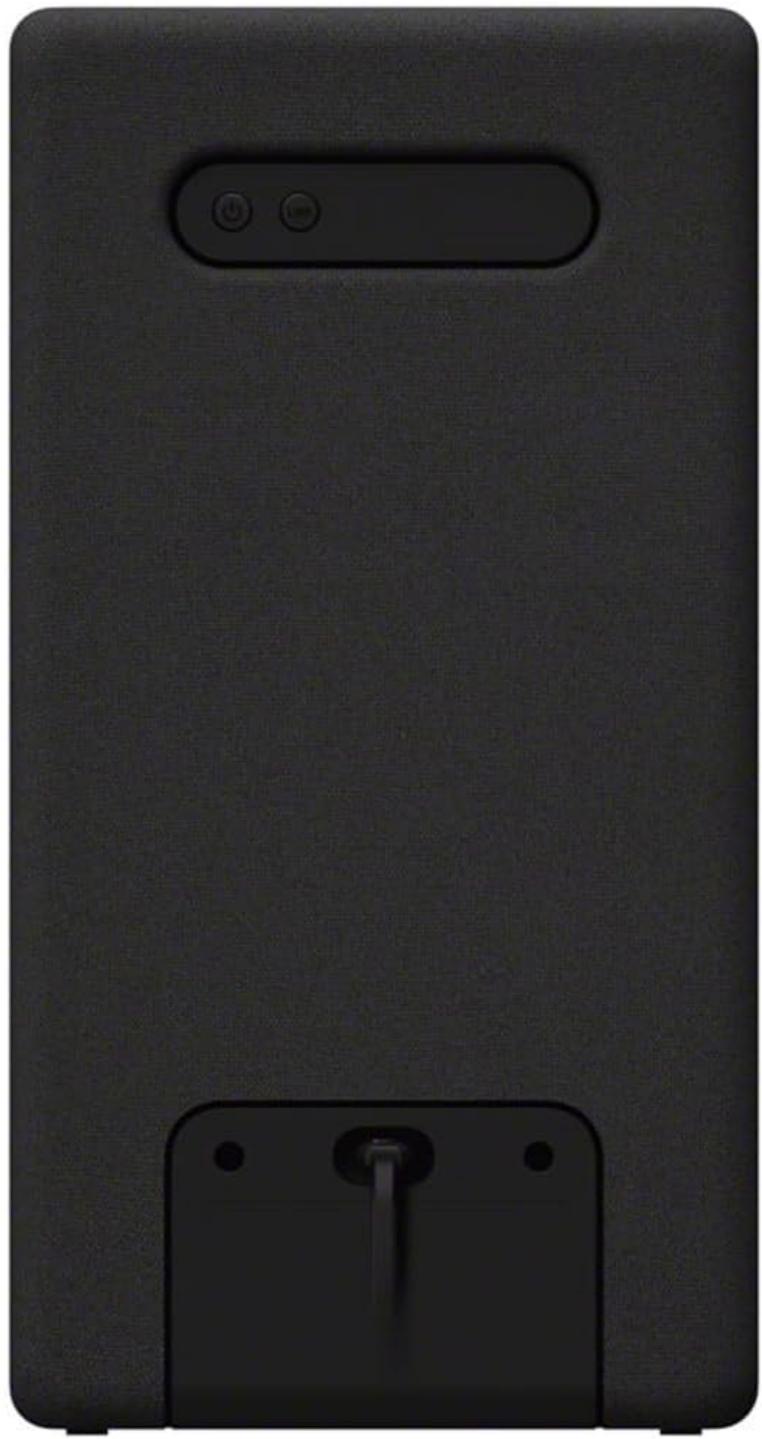


Image: Rear view of the Sony SA-SW3 Wireless Subwoofer. This image highlights the power input port at the bottom and a small control panel with buttons at the top, indicating where the power cord should be connected.

4.3 Wireless Connection to Soundbar

The SA-SW3 subwoofer is designed for wireless connection with compatible Sony soundbars (HT-A9/A7000). Follow the pairing instructions provided with your soundbar to establish a connection. Typically, this involves activating a pairing mode on both the soundbar and the subwoofer. The subwoofer's indicator light will confirm a successful connection.

SONY



Image: The Sony SA-SW3 Wireless Subwoofer is shown placed on the floor next to a wooden cabinet, with a compatible Sony soundbar resting on the cabinet. This illustrates a typical setup for the subwoofer and soundbar.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

The subwoofer will automatically power on when your connected Sony soundbar is turned on, and enter standby mode when the soundbar is turned off. There is no separate power button for daily operation.

5.2 Adjusting Bass Level

Bass levels are typically controlled through the settings menu of your connected Sony soundbar. Refer to your soundbar's instruction manual for detailed steps on adjusting subwoofer volume or bass intensity.

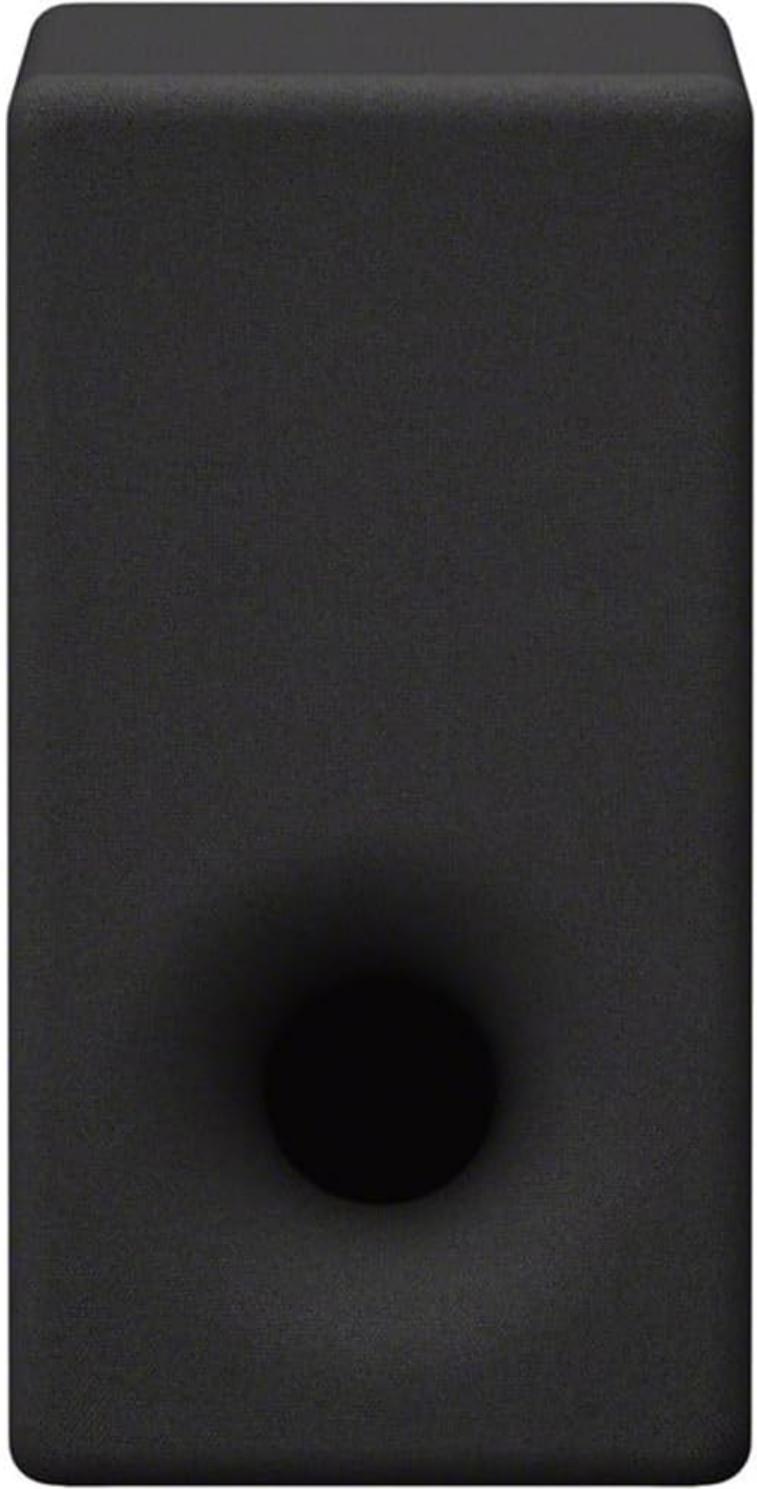


Image: Front view of the Sony SA-SW3 Wireless Subwoofer. The image displays the sleek, black rectangular design with a prominent circular port at the bottom, indicating the bass reflex design.

6. MAINTENANCE

6.1 Cleaning the Unit

To clean the exterior of the subwoofer, use a soft, dry cloth. Do not use abrasive pads, scouring powder, or solvents such as alcohol or benzene, as these may damage the surface. Avoid spraying water or cleaning solutions directly onto the unit.

6.2 Storage

If you plan to store the subwoofer for an extended period, disconnect it from the power outlet and store it in a

cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you experience issues with your Sony SA-SW3 Wireless Subwoofer, refer to the following common solutions:

Problem	Possible Cause / Solution
No power	Ensure the power cord is securely connected to both the subwoofer and a working wall outlet. Check if the soundbar is powered on.
No sound from subwoofer	Verify that the subwoofer is successfully paired with your soundbar. Check the soundbar's settings to ensure the subwoofer output is enabled and the volume is not muted or set too low.
Poor or distorted bass	Adjust the bass level settings on your soundbar. Ensure the subwoofer is placed on a stable surface and not vibrating against other objects. Check for any obstructions around the subwoofer's port.
Wireless connection issues	Move the subwoofer closer to the soundbar. Avoid placing the subwoofer near devices that emit strong radio waves (e.g., microwave ovens, Wi-Fi routers). Try re-pairing the subwoofer with the soundbar.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Name	SA-SW3
Speaker Type	Subwoofer
Speaker Maximum Output Power	200 Watts
Woofer Diameter	6.3 Inches
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth
Compatible Devices	Sony HT-A9/A7000 Soundbars
Product Dimensions (D x W x H)	8"D x 15.88"W x 15.13"H
Item Weight	23.2 Pounds
Power Source	Corded Electric
Material	Metal, Plastic

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Sony SA-SW3 Wireless Subwoofer is a certified refurbished unit. It comes with a 90-day warranty, ensuring reliable, like-new performance. For specific terms and conditions of your warranty, please refer to the documentation provided at the time of purchase.

An additional 1-Year Extended Service Protection Plan may have been included with your purchase. Please consult your purchase details for information regarding this extended coverage.

9.2 Customer Support

For technical assistance, warranty claims, or service inquiries, please contact the retailer from whom you purchased the unit or refer to the official Sony support channels. Have your model number (SA-SW3) and purchase information ready when contacting support.