

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [DEZIN](#) /
- › [DEZIN Electric Cooker 8150 User Manual](#)

DEZIN 8150

DEZIN Electric Cooker 8150 User Manual

Model: 8150

INTRODUCTION

Thank you for purchasing the DEZIN Electric Cooker 8150. This versatile 2-liter non-stick electric pot is designed for convenient cooking, ideal for various dishes such as noodles, soup, fried rice, steak, and more. Its compact size and dual power settings make it perfect for dorm rooms, small apartments, or travel. Please read this manual thoroughly before use to ensure safe and optimal performance.

A Perfect Choice as a Gift



Image: Multiple DEZIN Electric Cookers in various colors, showcasing the product's aesthetic appeal and compact design.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PRODUCT OVERVIEW

The DEZIN Electric Cooker 8150 is designed for efficiency and ease of use. Key features include a durable non-stick coating, dual power settings, and a compact design.

Key Features:

- **Cook & Sauté Functionality:** Equipped with a food-grade non-stick coating, allowing for both cooking and sautéing. Includes a silicone turner spatula.
- **Easy Cleaning & Healthy Cooking:** Non-stick pot liner prevents food from sticking, making cleanup simple. Reduces oil usage and is toxin-free.
- **Dual Power Adjustment:** Features over-heating protection, boil dry protection, and temperature control with 250W and 600W settings for faster heating and enhanced taste.
- **Compact & Portable:** 2L capacity (full load with lid) is ideal for small spaces like dorms, apartments, or for travel and picnics.

Components:



Image: Cross-section diagram illustrating the multi-layer construction of the cooker, highlighting the anti-scalding exterior, stainless steel thermal layer, and ceramic non-stick interior.

- **Pot Body:** Main cooking vessel with non-stick interior.
- **Handle:** Integrated handle with power adjustment switch.
- **Glass Lid:** Transparent lid for monitoring cooking, with steam vent.
- **Power Cord:** Detachable power cord for easy storage.
- **Silicone Spatula:** Included for use with non-stick surface.

SETUP

Before first use, please follow these steps:

1. Unpack all components and remove any packaging materials.
2. Wash the interior of the pot and the glass lid with warm, soapy water. Rinse thoroughly and dry. Do not immerse the main pot body in water.
3. Ensure the power adjustment switch on the handle is in the "OFF" position.
4. Connect the detachable power cord to the port at the end of the handle.
5. Place the cooker on a stable, flat, heat-resistant surface.

Your browser does not support the video tag.

Video: An official product video from Dezin Direct demonstrating the features and usage of the 2L Electric Cooker, including its compact design and cooking capabilities.

OPERATING INSTRUCTIONS

Power Adjustment:

The DEZIN Electric Cooker features two power settings controlled by a switch on the handle:

- **Mode I (250W):** Suitable for gentle cooking, such as boiling noodles, preparing oatmeal, or simmering soup.
- **Mode II (600W):** Ideal for faster cooking, hot pot, frying, or sautéing.



Image: The dual power setting switch on the handle, indicating 250W for ramen, dumplings, and oatmeal, and 600W for frying, steak, and paella.

General Cooking Steps:

1. Add desired ingredients to the pot. Ensure liquid levels do not exceed the maximum fill line.
2. Plug the power cord into a standard 110V electrical outlet.
3. Select the desired power mode (I or II) using the switch on the handle.

4. Place the glass lid on the pot to retain heat and speed up cooking.
5. Monitor food as it cooks. The non-stick surface allows for easy stirring with the provided silicone spatula.
6. Once cooking is complete, switch the power to "OFF" and unplug the appliance.
7. Carefully serve food. The pot's exterior remains cool to the touch during operation.

Cooking Examples:

- **Noodles/Soup:** Add water and bring to a boil on Mode I (250W). Add noodles/ingredients and cook until done.
- **Frying/Sautéing:** Add a small amount of oil. Preheat on Mode II (600W). Add ingredients like steak, eggs, or fried rice and cook, stirring occasionally with the silicone spatula.
- **Hot Pot:** Fill with broth and ingredients. Use Mode II (600W) to maintain a rolling boil for communal cooking.



Image: Demonstrates the premium non-stick coating, with a fried egg easily sliding out of the pot.



Image: The electric cooker prepared with ramen, illustrating its capacity and the design of the lid. Note: Some models include a steamer basket.

MAINTENANCE AND CLEANING

Proper care ensures the longevity and performance of your DEZIN Electric Cooker.

1. **Unplug and Cool:** Always unplug the cooker from the power outlet and allow it to cool completely before cleaning.
2. **Wipe Interior:** The non-stick interior can be easily wiped clean with a soft cloth or sponge and mild dish soap. Rinse with a damp cloth.
3. **Exterior Cleaning:** Wipe the exterior of the pot and handle with a damp cloth. Do not use abrasive cleaners or scouring pads.
4. **Glass Lid:** The glass lid can be washed by hand or in a dishwasher.
5. **DO NOT IMMERSE:** The main body of the electric cooker is NOT dishwasher safe and should NEVER be immersed in water or any other liquid to prevent electrical damage.
6. **Storage:** Store the clean and dry cooker in a cool, dry place.

EASY COOKING & CLEANING

Environmentally Friendly

Non-stick Pot Liner

Easy to Clean

Toxin-free

Safer



Image: Illustrates the ease of cleaning the non-stick pot liner by simply wiping it with a cloth.

TROUBLESHOOTING

If you encounter any issues with your DEZIN Electric Cooker, please refer to the following common problems and solutions:

- **Appliance does not turn on:**

- Ensure the power cord is securely plugged into both the appliance and a working electrical outlet.
- Check if the power switch on the handle is set to Mode I or Mode II.
- Verify the electrical outlet is functional by plugging in another appliance.

- **Food is not heating sufficiently:**

- Ensure the correct power mode (Mode II for higher heat) is selected for your cooking needs.
- Confirm the lid is properly placed to retain heat.
- Avoid overfilling the pot, which can reduce heating efficiency.

- **Food sticks to the pot:**

- Although the pot has a non-stick coating, ensure sufficient oil or liquid is used, especially for frying.

- Avoid using metal utensils that can damage the non-stick surface; use the provided silicone spatula.

- **Appliance emits smoke or unusual odor:**

- Immediately unplug the appliance.
- This may be normal during first use as manufacturing residues burn off. If it persists, contact customer support.

If the problem persists after trying these solutions, please contact DEZIN customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	DEZIN
Model Number	8150
Capacity	2 Liters
Material	Non-stick Coating
Color	Beige (Round - B)
Finish Type	Non-Stick
Product Dimensions	16.5"D x 8"W x 5.5"H
Wattage	600 watts (Dual: 250W & 600W)
Control Method	Push Button
Operation Mode	Automatic
Is Dishwasher Safe	No (Main body)
Voltage	110 Volts
Item Weight	3.16 pounds

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact DEZIN directly through their official website or the retailer where the product was purchased. Keep your purchase receipt as proof of purchase for any warranty claims.

Contact Information:

- Visit the [DEZIN Store on Amazon](#) for more products and support.